# **SONY**®

# **Network Camera**

### **User's Guide**

Software Version 3.1



## **Table of Contents**

#### Overview

Precautions	5
How to Use This User's Guide	6
System Requirements	6

### Preparation

Assigning the IP Address to the Camera	7
Assigning an IP address using the IP Setur	)
Program	7
When using Windows XP Service Pack 2	
or later	9
When using Windows Vista	11
When using Windows 7	
Accessing the Camera Using the Web	
Browser	16
Basic Configuration by the Administrator	18

### **Operating the Camera**

Administrator and User	19
Logging in to Homepage — Welcome Page	20
Logging in as a user	20
Displaying the Administrator menu directly	21
About viewers	21
Configuration of Main Viewer	22
Main menu	23
Camera control section	23
Monitor image	25
Controlling the Monitor Image	25
Monitoring the camera image	25
Zooming in the monitor image	26
Capturing a Monitor Image	26
Capturing a monitor image	26
Saving the captured image	27
Operating the Camera	27
Controlling via the control panel	27
Panning and tilting by clicking the monitor	
image	28
Panning, tilting and zooming by specifying	
the area	28
Zooming an image by the camera zoom bar	28
Moving the camera to a preset position	29
Controlling the Camera on a Panorama	
Image	29
Facing the camera toward a specified point	29

Using the Trigger Button	30
Sending a monitor image via e-mail	30
Sending a monitor image to an FTP server	30
Recording a camera image as a still image .	30
Controlling alarm output 1, 2	31
Controlling Day/Night function	31
Playing the audio file stored in the camera .	31
Switching TCP/UDP Transmission Mode	32

### Administrating the Camera

Basic Operations of Administrator Menu	33
How to setup the Administrator menu	33
Configuration of Administrator menu	34
Configuring the System — System Menu	35
System Tab	35
Date & time Tab	37
Superimpose Tab	38
Initialize Tab	39
System log Tab	41
Access log Tab	41
Setting the Camera Image and Audio	
— Camera Menu	41
Common Tab	41
Picture Tab	42
Day/Night Tab	44
Video codec Tab	45
Streaming Tab	47
Configuring the Network — Network Menu .	48
Network Tab	48
Wireless Tab — Setting of wireless	
connection	49
Dynamic IP address notification Tab	
— Notifying the IP Address	52
Using the 802.1X Authentication Function	
— 802.1X Menu	53
System configuration of 802.1X network	53
Common Tab — Basic setting of 802.1X	<i>-</i> 1
authentication function	
CA soutificate Tab	
CA certificate Tab	
— Example of Windows Server 2003	57
- Example of Windows Server 2005	ر در
Setting the User — User Menu	00
Setting the Security — Security Menu	61
Saving the Camera Position and Action	()
- Preset position Menu	
Position 1ab — Saving pan/tilt/zoom	67
Tour Tab — Setting a tour	02 63
$1001 100 - 90000 a 000 \dots$	05

#### Sending an Image via E-mail

- e-Mail (SMTP) Menu65
Common Tab — Setting the e-Mail (SMTP)
Alarm sending Tab — Setting the e-mail
sending mode when detecting the alarm
Periodical sending Tab — Setting the
periodical e-mail sending mode
Sending Images to FTP Server
- FTP client Menu
Common Tab — Setting the FTP client
function68
Alarm sending Tab — Setting the FTP client
action when detecting the alarm
Periodical sending Tab — Setting the
periodical FTP client activity
Recording Images in Memory
- Image memory Menu
function 71
Alarm recording Tab — Setting the Image
memory function when detecting the alarm 72
Periodical recording Tab — Setting the
periodical recording mode73
Folder structure of image memory73
Downloading Images from the Camera
— FTP server Menu74
Setting the Alarm Output
- Alarm output Menu
Alarm out 1, 2 Tab75
Outputting Audio Linked to Alarm Detection
— Voice alert Menu76
Voice alert 1, 2, 3 Tab76
Setting the Operations from the Viewer
— Trigger Menu77
Setting the Schedule — Schedule Menu79
Setting the Alarm Buffer
— Alarm buffer Menu 80
Setting the Object Detection Function
- Object detection Menu 81
What is unattended object detection ?
Common Tab
Unattended object setting Tab
Configuration Tab87
Transmitting with External Equipment Using the External Serial Terminal — Serial Menu88

#### Others

Using the Supplied IP Setup Program	89
Starting the IP Setup Program	89
Bandwidth control Tab	89
Date time Tab	90
Rebooting the Camera	90
Using the SNC audio upload tool	
- Transmitting Audio to Camera	91
Installing the SNC audio upload tool	91
Connecting the Camera to the Computer	91
Using the SNC audio upload tool	92
Using the SNC video player — Playing	
Video/Audio File Recorded with Camera	96
Installing the SNC video player	96
Using the SNC video player	97
Using the SNC panorama creator	
— Creating a Panorama Image	98
Installing the SNC panorama creator	98
Using the SNC panorama creator	98
Creating and transmitting a panorama image	99
Saving a custom image to the camera	99
Using the SNC privacy masking tool	400
— Masking a Camera Image	.100
Installing the SNC privacy masking tool	.100
Using the SNC privacy masking tool	.101
Setting a privacy mask	.102
Using the Custom Homepage Installer	103
Uploading the homepage to the camera using	100
the Custom Homepage Installer	103
Assigning the IP Address to the Camera Using	g 106
ARP Commands	.100
Using the SNMP	.107
1. Inquiry Commands	.107
2. Setting Commands	107
Glossary	108
Index	112

#### Overview

#### **NOTICE TO USERS**

© 2007 Sony Corporation. All rights reserved. This manual or the software described herein, in whole or in part, may not be reproduced, translated or reduced to any machine readable form without prior written approval from Sony Corporation.

SONY CORPORATION PROVIDES NO WARRANTY WITH REGARD TO THIS MANUAL, THE SOFTWARE OR OTHER INFORMATION CONTAINED HEREIN AND HEREBY EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH REGARD TO THIS MANUAL, THE SOFTWARE OR SUCH OTHER INFORMATION. IN NO EVENT SHALL SONY CORPORATION BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES, WHETHER BASED ON TORT, CONTRACT, OR OTHERWISE, ARISING OUT OF OR IN CONNECTION WITH THIS MANUAL, THE SOFTWARE OR OTHER INFORMATION CONTAINED HEREIN OR THE USE THEREOF.

Sony Corporation reserves the right to make any modification to this manual or the information contained herein at any time without notice.

The software described herein may also be governed by the terms of a separate user license agreement.

- "IPELA" and IPELA are trademarks of Sony Corporation.
- "Memory Stick" and are trademarks of Sony Corporation.
- "MagicGate Memory Stick" and MAGICGATE are trademarks of Sony Corporation.
- "Memory Stick PRO" and MEMORY STICK PRO are trademarks of Sony Corporation.
- "VISCA" is a trademark of Sony Corporation.
- Microsoft, Windows and Internet Explorer are registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Java is a trademark of Sun Microsystems, Inc. in the United States and other countries.
- Intel and Pentium are registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.
- Adobe and Adobe Reader are trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- CompactFlash and CF are trademarks of SanDisk Corporation, registered in the United States and other countries.

All other company and product names are trademarks or registered trademarks of the respective companies or their respective makers.

### **Precautions**

#### Data and security

- You should keep in mind that the images or audio you are monitoring may be protected by privacy and other legal rights, and the responsibility for making sure you are complying with applicable laws is yours alone.
- Access to the images and audio is protected only by a user name and the password you set up. No further authentication is provided nor should you presume that any other protective filtering is done by the service. Since the service is Internet-based, there is a risk that the image or audio you are monitoring can be viewed or used by a third-party via the network.
- SONY IS NOT RESPONSIBLE, AND ASSUMES ABSOLUTELY NO LIABILITY TO YOU OR ANYONE ELSE, FOR SERVICE INTERRUPTIONS OR DISCONTINUATIONS OR EVEN SERVICE CANCELLATION. THE SERVICE IS PROVIDED AS-IS, AND SONY DISCLAIMS AND EXCLUDES ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THE SERVICE INCLUDING, BUT NOT LIMITED TO, ANY OR ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR THAT IT WILL OPERATE ERROR-FREE OR CONTINUOUSLY.
- Security configuration is essential for wireless LAN. Should a problem occur without setting security, or due to the limitation of the wireless LAN specifications, SONY shall not be liable for any damage.
- Always make a test recording, and verify that it was recorded successfully. SONY WILL NOT BE LIABLE FOR DAMAGES

OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION OR REIMBURSEMENT ON ACCOUNT OF FAILURE OF THIS UNIT OR ITS RECORDING MEDIA, EXTERNAL STORAGE SYSTEMS OR ANY OTHER MEDIA OR STORAGE SYSTEMS TO RECORD CONTENT OF ANY TYPE.

- Always verify that the unit is operating properly before use. SONY WILL NOT BE LIABLE FOR DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION OR REIMBURSEMENT ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS DUE TO FAILURE OF THIS UNIT, EITHER DURING THE WARRANTY PERIOD OR AFTER EXPIRATION OF THE WARRANTY, OR FOR ANY OTHER REASON WHATSOEVER.
- If you lose data by using this unit, SONY accepts no responsibility for restoration of the data.

#### **Operating or storage location**

Avoid operating or storing the camera in the following locations:

- Extremely hot or cold places (Operating temperature: 0°C to +50°C [32°F to 122°F])
- Exposed to direct sunlight for a long time, or close to heating equipment (e.g., near heaters)
- Close to sources of strong magnetism
- Close to sources of powerful electromagnetic radiation, such as radios or TV transmitters
- Locations subject to strong vibration or shock

#### Ventilation

To prevent heat buildup, do not block air circulation around the camera.

#### Transportation

When transporting the camera, repack it as originally packed at the factory or in materials of equal quality.

#### Cleaning

- Use a blower to remove dust from the lens or optical filter.
- Use a soft, dry cloth to clean the external surfaces of the camera. Stubborn stains can be removed using a soft cloth dampened with a small quantity of detergent solution, then wipe dry.
- Do not use volatile solvents such as alcohol, benzene or thinners as they may damage the surface finishes.

# How to Use This User's Guide

This User's Guide explains how to operate the Network Camera from a computer.

The User's Guide is written to be read on the computer display.

As this section gives tips on using the User's Guide, read it before you operate the camera.

#### Jumping to the related page

When you read the User's Guide on the computer display, click on the sentence to jump to the related page.

#### Software display examples

Note that the displays shown in the User's Guide are explanatory examples. Some displays may be different from the ones which appear as you operate the application software.

The illustrations of the camera and menu display in the User's Guide show the SNC-RX570N or SNC-RX570P as an example.

#### Printing the User's Guide

Depending on your system, certain displays or illustrations in the User's Guide, when printed out, may differ from those as portrayed on your screen.

#### Installation Manual (printed matter)

The supplied Installation Manual describes the names and functions of parts and controls of the Network Camera, connecting examples and how to set up the camera. Be sure to read the Installation Manual before operating.

## **System Requirements**

These are the requirements for the computer that displays the image or controls the camera.

#### Processor

Intel Pentium 4, 1.5 GHz or higher (Pentium 4, 2.4 GHz or higher recommended)

#### RAM

256 MB or more

#### OS

Microsoft Windows XP, Windows Vista (32-bit version only), Windows 7 (32-bit version only) Authorized editions: Windows XP: Professional Windows Vista: Ultimate, Business Windows 7: Ultimate, Professional

#### Web browser

Microsoft Internet Explorer Ver. 6.0, 7.0, 8.0

#### Java

 $1.6.0_{20}$ 

As of August, 2010.

#### Preparation

The Preparation section explains what the administrator has to prepare for monitoring images after installation and connection of the camera.

### Assigning the IP Address to the Camera

To connect the camera to a network, you need to assign a new IP address to the camera when you install it for the first time.

You can assign an IP address in two ways:

- Using the IP Setup Program stored in the supplied CD-ROM (see this page)
- Using the ARP (Address Resolution Protocol) commands (see page 106)

This section explains how to assign an IP address to the camera using the supplied setup program and how to configure the network.

Before starting, connect the camera, referring to "Connecting the Camera to a Local Network" in the supplied Installation Manual.

Consult the administrator of the network about the assigned IP address.

#### Notes

- The IP Setup Program may not operate correctly if you use a personal firewall or antivirus software in your computer. In that case, disable the software or assign an IP address to the camera using another method. For example, see "Assigning the IP Address to the Camera Using ARP Commands" on page 106.
- If you are using Windows XP Service Pack 2 or later, Windows Vista, or Windows 7, disable the Windows Firewall function. Otherwise the IP Setup Program will not operate correctly. For the setting, see "Configuring Windows Firewall" in "When using Windows XP Service Pack 2 or later" on page 10, "Configuring Windows Firewall" in "When using Windows Vista" on page 13, or "Configuring Windows Firewall" in "When using Windows 7" on page 15.

# Assigning an IP address using the IP Setup Program

Insert the CD-ROM in your CD-ROM drive.

A cover page appears automatically in your Web browser.

If it does not appear automatically in the Web browser, double-click on the index.htm file on the CD-ROM.

When you are using Windows Vista or Windows 7, pop-up "AutoPlay" may appear. For details, see "Installing software" in "When using Windows Vista" on page 11 or "Installing software" in "When using Windows 7" on page 14.

2 Click the Setup icon of IP Setup Program. The "File Download" dialog opens.

When you are using Windows XP Service Pack 2 or later, Windows Vista, or Windows 7, a message regarding the active contents may appear. For details, see "Installing software" in "When using Windows XP Service Pack 2 or later" on page 9, "Installing software" in "When using Windows Vista" on page 11, or "Installing software" in "When using Windows 7" on page 14.

**3** Click **Open**.

#### Note

If you click "Save this program to disk" on the "File Download" dialog, you will not be able to perform set up correctly. Delete the downloaded file, and click the **Setup** icon again.

- Install the IP Setup Program on your computer using the wizard.
  If the Software License Agreement is displayed, read it carefully and click Accept to continue with the installation.
- **5** Start the IP Setup Program.

When you are using Windows Vista, message "User Account Control – An unidentified program wants access to your computer" may appear. In this case, click **Allow**.

The program detects the network cameras connected to the local network and lists them on the Network tab window.

IAC address	IP address	Model	Serial No.	Version No.
8-00-46-ec-47-73	192.168.0.100	SNC-***	100001	1.00
Chtain an IR add	ress entomatically			
Use the following	g IP address			
IP address				
Subnet mask				
Default dateway		, 		
		J		
Obtain DNS serv	er address automati	cally		
Use the following	g DNS server addre:	ss ———		
Primary DNS serve	er address			
Secondary DNS se	erver address			
Third DNS server (	address			
Fourth DNS server	r address			
HTTP port No		@ 80 (		(1024 to 65535)
			)	
Administrator nam	e			

6 Click on the camera in the list to which you want to assign a new IP address.

MAC address	IP address	Model	Serial No.	Version No.
08-00-46-ec-47-73	192.168.0.100	SNC-***	IC-*** 100001 1.0	

The network settings for the selected camera are displayed.

#### **7** Set the IP address.

# To obtain the IP address automatically from a DHCP server:

Select Obtain an IP address automatically.

Θ	Obtain an IP address automatically
-0	Use the following IP address

The IP address, Subnet mask and Default gateway are assigned automatically.

#### To specify the IP address manually:

Select **Use the following IP address**, and type the IP address, Subnet mask and Default gateway in the relevant boxes.

Obtain an IP address automatically     Obtain an IP address							
IP address	Γ	192	168		0	100	
Subnet mask	Γ	255	0		0	0	
Default gateway	Γ			•			

#### Note

When you select **Obtain an IP address automatically**, make sure that the DHCP server is operating on the network.

**8** Set the DNS server address.

To obtain the DNS server addresses automatically: Select Obtain DNS server address automatically.

Obtain DNS server address a	utomatically
O Use the following DNS server	address

**To specify the DNS server addresses manually:** Select **Use the following DNS server address**, and type the Primary DNS server address and Secondary DNS server address in the relevant boxes.

Use the following DNS server address					
Primary DNS server address		2	168	0	200
Secondary DNS server address		2	168	0	201
Third DNS server address		_			
Fourth DNS server address		_			

#### Note

The Third DNS server address and Fourth DNS server address are invalid for this camera.

**9** Set the HTTP port No.

HTTP port No. C 80 C (1024 to 65535) Normally, select **80** for the HTTP port No. To use another port number, type the port number between

**10** Type the Administrator name and Administrator password.

1024 and 65535 in the text box.

Administrator name	admin
Administrator password	*****

The factory settings of both items are "admin".

#### Note

You cannot change the Administrator name and Administrator password in this step. To change these items, see "Setting the User — User Menu" on page 60.

**11** Confirm that all items are correctly set, then click **OK**.



Preparation

If "Setting OK" is displayed, the IP address is correctly assigned.

Informat	ion 🛛 🔀
(į)	Setting OK
[(	<u>DK</u>

**12** To access the camera directly, double-click the camera name in the list.

IP address	Model	Serial No.	Version No.
192.168.0.100	SNC-***	100001	1.00
	IP address 192.168.0.100	Paddress   Model  192.168:0.100   SNC-***	IP address         Model         Serial No.           192.168.0.100         SNC-***         100001

#### Tips

• The factory setting of the camera network is as follows. IP address: 192.168.0.100

Subnet mask: 255.0.0.0

#### Wireless LAN setting

Type: Adhoc SSID: snc-rx570 (SNC-RX570N/P), snc-rx550 (SNC-RX550N/P) or snc-rx530 (SNC-RX530N/P) Channel: 11 ch WEP: Nothing IP address: 10.0.0.100 Subnet mask: 255.0.00

- When you select the camera in the network tab and right-click **Copy**, and the camera's **MAC address**, **DHCP/FIXED\***, **IP address**, **Port number**, **Model name**, **Serial number** and **Version number** can be copied in the clipboard. When you hold down **Ctrl** and press **a**, you can select all cameras in the network tab.
  - \* **DHCP** stands for a DHCP setting. **FIXED** stands for a fixed IP address.

The welcome page of the network camera is displayed in the Web browser.

#### **Display sample: SNC-RX570N**



#### Note

If the IP address is not set correctly, the welcome page does not appear after step 12. In that case, try to set the IP address again.

#### When using Windows XP Service Pack 2 or later

#### Installing software

A warning message regarding the active contents may appear when you install software such as IP Setup Program from CD-ROM. In this case, operate as follows:

Example: In case of IP Setup Program

If message "Internet Explorer" appears, click Yes.



If message "File Download – Security Warning" appears, click **Run**.



#### Note

If you select **Save** in the "File Download – Security Warning" dialog, you will not be able to perform installation correctly. Delete the downloaded file, and click the **Setup** icon again.

If message "Internet Explorer – Security Warning" appears, click **Run**.



The software installation starts.

#### Installing ActiveX Control

During installation of ActiveX Control, the information bar or "Security Warning" may appear. In this case, operate as follows:

If message "Information Bar" appears, click OK.



If the information bar appears, click on the bar and select **Install ActiveX Control...** 

Address 🕘 http://192.168.0.100/e	n/AViewerJ.html		🔽 🋃 Go 🛛 Link
This site might require the followin	g ActiveX control: 'Son	y Network Camera v	iewer' from 'Sony Corporation'. Click
			Install ActiveX Control
IPELA	Setting	Home	What's the Risk?
Network Camera SNC-***			Information Bar Help

If "Internet Explorer – Security Warning" appears, click **Install**.

Internet	Explorer - Security Warning	×
Do you	want to install this software?	
	Name: Sony Network Camera viewer	
	Publisher: Sony Corporation	
× Mo	re options Install Don't Install	)
١	While files from the Internet can be useful, this file type can potentially harm your computer. Only install software from publishers you trust. <u>What's the risk</u>	2

The installation of ActiveX Control starts. When installation is completed, the main viewer or the Object detection menu appears.

#### **Configuring Windows Firewall**

The IP Setup Program or SNC audio upload tool may not operate correctly depending on the configuration of Windows Firewall. (No cameras are shown in the list even if they are detected.) In this case, confirm the Windows Firewall configuration as follows:

Example: In case of IP Setup Program

- **1** Select **Control Panel** from the Start menu of Windows.
- **2** Select **Security Center** of the working field.

**3** Select **Windows Firewall** and select **Off** in the Windows Firewall dialog.



The cameras will be displayed in the list.

If you want to keep Windows Firewall **On**, continue with the following steps.

- **4** Select the "Exceptions" tab.
- 5 Select Add Program....

🐱 Windows Firewall	×
General Exceptions Advanced	
Windows Firewall is blocking incoming network connections, except for the programs and services selected below. Adding exceptions allows some programs to work better but might increase your security risk.	
Programs and Services.	1
File and Printer Sharing Remote Assistance Remote Desktop UPnP Framework	
Add Program Add Port Edit Delete	
☑ Display a notification when Windows Firewall blocks a program	
What are the risks of allowing exceptions?	
OK Cancel	

6 In the Add Program dialog, select IP Setup **Program** and click **OK**.

Then the IP Setup Program is added to the Programs and Services list.

7 Click OK.

🐱 Windows Firewall 🛛 🛛 📔	×
General Exceptions Advanced	
Windows Firewall is blocking incoming network connections, except for the programs and services selected below. Adding exceptions allows some programs to work better but might increase your security risk.	
Name	
Vame Vame Vame Vame Vame Vame Vame Vame	
Add Program Add Port Edit Delete	
☑ Display a notification when Windows Firewall blocks a program	
What are the risks of allowing exceptions?	
OK Cancel	

When the above procedure is completed, the cameras connected in the local network are displayed in the IP Setup Program.

#### When using Windows Vista

#### Installing software

A warning message regarding the active contents may appear when you install software such as IP Setup Program from CD-ROM. In this case, operate as follows:

Example: In case of IP Setup Program

If pop-up "AutoPlay" appears when a CD-ROM is inserted into the CD-ROM drive, click **Install or run program**.



#### Note

If you click **Open folder to view files**, Web browser will not open automatically. In this case, double-click the "index.htm" file in the CD-ROM.

If message "Internet Explorer" appears, click Yes.



If message "File Download – Security Warning" appears, click **Run**.



#### Note

If you select **Save** in the "File Download – Security Warning" dialog, you will not be able to perform

installation correctly. Delete the downloaded file, and click the Setup icon again.

If message "Internet Explorer – Security Warning" appears, click **Run**.



If message "User Account Control – An unidentified program wants access to your computer" appear, click **Allow**.

The software installation starts.

#### Starting the software

When you start software such as IP Setup Program, message "User Account Control – An unidentified program wants access to your computer" may appear. In this case, click **Allow**.

#### Installing ActiveX Control

During installation of ActiveX Control, the information bar or "Security Warning" may appear. In this case, operate as follows:

If message "Information Bar" appears, click **OK**.



If the information bar appears, click on the bar and select **Install ActiveX Control...** 

P This website wants to install the following add-on: 'Sony Network Camera you trust the website and the add-on and want to install it, click here	a viewer' from 'Sony Corporation'. If	×
	Install ActiveX Control	<b>^</b>
Network Camera SNC- ** *	What's the Risk?	
	More information	
-		

If message "User Account Control – Windows needs your permission to continue" appear, click **Continue**.

Preparation

If "Internet Explorer – Security Warning" appears, click **Install**.



The installation of ActiveX Control starts. When installation is completed, the main viewer or the Object detection menu appears.

#### **Configuring Windows Firewall**

The IP Setup Program or SNC audio upload tool may not operate correctly depending on the configuration of Windows Firewall. (No cameras are shown in the list even if they are detected.) In this case, confirm the Windows Firewall configuration as follows:

Example: In case of IP Setup Program

- **1** Select **Control Panel** from the Start menu of Windows.
- 2 Click Windows Firewall.
- 3 Select Turn Windows Firewall on or off. "User Account Control – Windows needs your permission to continue" may appear. In this case, click Continue.
- 4 Select **Off** in the "General" tab.



The cameras will be displayed in the list. If you want to keep Windows Firewall **On**, continue with the following steps.

- **5** Select the "Exceptions" tab.
- 6 Select Add Program....
- 7 If the Add Program dialog appears, select IP Setup Program and click OK.

Add a Program Select the program you want to add, or click Browse to find one t listed, and then click OK.	hat is not
Programs:	
Same Definition File Editor	*
Hearts     Help Workshop	
✓ InkBall € Internet Explorer	
IP Setup Program Mahjong Titans	
Microsoft Cross-Platform Audio Creation Tool (XACT)	
Path: C:¥Program Files¥SONY¥IP Setup Program¥ip: B	rowse
Change scope OK	Cancel

Then the IP Setup Program is added to the Program or port list.

8 Click **OK**.



When the above procedure is completed, the cameras connected in the local network are displayed in the IP Setup Program.

#### When using Windows 7

#### Installing software

A warning message regarding the active contents may appear when you install software such as IP Setup Program from the CD-ROM. In this case, operate as follows:

Example: In case of IP Setup Program

If the pop-up "AutoPlay" appears when a CD-ROM is inserted into the CD-ROM drive, click **Install or run program from your media**.



#### Note

If you click **Open folder to view files**, the Web browser will not open automatically. In this case, double-click the "index.htm" file in the CD-ROM.

If the message "Internet Explorer" appears, click Yes.



If the message "File Download - Security Warning" appears, click **Run**.

File Down	Iload - Security Warning
<b>Do you</b>	ı want to run or save this file?
18	Name: SncTollbox_setup.exe Type: Windows Installer Package, 16.2MB From: <b>D:¥SncToolbox</b> <u>Run Save Cancel</u>
٢	While files from the Internet can be useful, this file type can potentially harm your computer. If you do not trust the source, do not run or save this software. What's the risk?

#### Note

If you select **Save** in the "File Download - Security Warning" dialog, you will not be able to perform installation correctly. Delete the downloaded file, and click the Setup icon again.

If the message "User Account Control - Do you want to allow the following program from an unknown publisher to make changes to this computer?" appears, click **Allow**.

The software installation starts.

#### Installing ActiveX Control

During installation of ActiveX Control, the information bar or "Security Warning" may appear. In this case, operate as follows:

If the information bar appears, click on the bar and select Install This Add-on for All Users on This Computer....



If the message "User Account Control - Do you want to allow the following program to make changes to this computer?" appears, click **Allow**.

The installation of ActiveX Control starts. When installation is completed, the main viewer or the Motion detection menu appears.

# |||||||| Preparation

#### **Configuring Windows Firewall**

IP Setup Program may not operate correctly depending on the configuration of Windows Firewall. (No cameras are shown in the list even if they are detected.) In this case, confirm the Windows Firewall configuration as follows:

Example: In the case of IP Setup Program

#### To turn Windows Firewall off

- **1** Select **Control Panel** from the **Start** menu of Windows.
- 2 Click Windows Firewall.
- **3** Select Turn Windows Firewall on or off.



4 Select Turn off Windows Firewall.



The cameras will be displayed in the list.

#### To turn Windows Firewall on

- 1 Select Control Panel from the Start menu of Windows.
- 2 Click Windows Firewall.
- **3** Select Allow a program or feature through Windows Firewall.



#### 4 Select Allow another program....



#### **5** Add program.



When the above procedure is completed, the cameras connected in the local network are displayed in IP Setup Program.

### Accessing the Camera Using the Web Browser

After the IP address has been assigned to the camera, check that you can actually access the camera using the Web browser installed on your computer. Use Internet Explorer as the Web browser.

1 Start the Web browser on the computer and type the IP address of the camera in the URL box.

The welcome page is displayed.

#### **Display sample: SNC-RX570N**



#### **2** Click **Enter**.

The main viewer is displayed.



If the main viewer is displayed correctly, accessing the camera is confirmed.

# When the main viewer of the camera is displayed for the first time

When you click **Enter**, "Security Warning" is displayed. When you click **Yes**, ActiveX control is installed and the main viewer is displayed.



#### Notes

- If Automatic configuration is enabled in the Local Area Network (LAN) Settings of Internet Explorer, the image may not be displayed. In that case, disable Automatic configuration and set the Proxy server manually. For the setting of the Proxy server, consult your network administrator.
- When you install ActiveX Control, you should be logged in to the computer as Administrator.
- When you are using Windows XP Service Pack 2 or later, Windows Vista, or Windows 7, the information bar or "Security Warning" may appear as you click **Enter**. For details, see "Installing ActiveX Control" in "When using Windows XP Service Pack 2 or later" on page 10, "Installing ActiveX Control" in "When using Windows Vista" on page 12, or "Installing ActiveX Control" in "When using Windows 7" on page 14.

#### Тір

Every page of this software is optimized as display character size **Medium** for Internet Explorer.

# To display the welcome page and the main viewer correctly

To operate the welcome page and the main viewer correctly, set the security level of the Internet Explorer to **Medium** or lower, as follows:

- 1 Select **Tools** from the menu bar for Internet Explorer, then select **Internet Options** and click the **Security** tab.
- 2 Click the **Internet** icon (when using the camera via the Internet) or **Local intranet** icon (when using the camera via a local network).

**3** Set the slider to **Medium** or lower. (If the slider is not displayed, click **Default Level**.)

# When using antivirus software, etc. on the computer

- When you use antivirus software, security software, personal firewall or pop-up blocker on your computer, the camera performance may be reduced, for example, the frame rate for displaying the image may be lower.
- The Web page displayed when you log in to the camera uses JavaScript. The display of the Web page may be affected if you use antivirus software or other software described above on your computer.

### **Basic Configuration by** the Administrator

You can monitor the camera image by logging in with the initial conditions set for this network camera. You can also set various functions according to the installing position, network conditions or purpose of the camera. We recommend you configure the following items before monitoring images from the camera.

Setting contents	Setting menu		
Set the format of the image sent from the camera.	Video codec Tab (page 45)		
Select the white balance mode according to the installing position (indoor or outdoor).	White balance (page 43)		
Select the brightness of the image sent from the camera.	Exposure mode (page 43) Brightness (page 43)		
Select the quality of the image sent from the camera.	Video codec Tab (page 45)		
Select the view size of the image.	View size (page 23)		
Select whether the audio from the external microphone is sent or not.	Microphone (page 42)		
Synchronize the date and time of the camera with those of the computer.	Date & time Tab (page 37)		
Make the setting for sending the monitor image attached to an e-mail.	e-Mail (SMTP) Menu (page 65)		
Set the user access right for the camera.	User Menu (page 60)		
Set a place to be watched beforehand.	Preset position Menu (page 62)		
Prepare a panorama image.	Creating a Panorama Image (page 98)		

#### **Operating the Camera**

The Operating the Camera section explains how to monitor the image from the camera using your Web browser. Use Internet Explorer as the Web browser. The functions of the camera should be set by the Administrator. For the setting of the camera, see "Administrating the Camera" on page 33.

## Administrator and User

This network camera identifies the people who log in as the **Administrator** or **User**.

The **Administrator** can use all the functions of this network camera including camera setting. The **User** can use the functions for monitoring the image and audio from the camera, and controlling the camera. The **Viewer mode** setting is used to restrict the user's access rights. There are five types of users.

Each type of user can use the corresponding functions below.

		User					
Function	Administrator	Full	Pan/Tilt	Preset position	Light	View	
Monitor a live image	•	•	•	•	•	•	
View the date and time	•	•	•	•	•	•	
Control the frame rate (Available in JPEG mode only)	•	•	-	-	-	-	
Control the image view size	•	•	•	•	•	-	
Zoom an image using the digital zoom	•	•	•	•	•	-	
Save a still image in the computer	•	•	•	•	•	- 1)	
Send an image file to the FTP server	•	•	-	-	-	-	
Send an image attached to an e-mail	•	•	-	-	-	-	
Record an image in the memory	•	•	-	-	-	-	
Control the alarm output of the I/O port on the camera	•	•	-	-	-	-	
Switch the Day/Night function mode	•	•	-	-	-	-	
Play an audio file (Voice alert)	•	•	-	-	-	-	
Switch the TCP/UDP transmission mode (Available in MPEG4/H.264 mode only)	• <sup>2)</sup>	• 2)	_	_	_	-	
Call the Preset position	•	•	•	•	-	-	
Perform the pan/tilt/zoom operation	•	•	•	-	-	-	
Receive the audio	•	•	•	•	•	•	
Control the setting menu	•	-	-	-	-	-	

• Usable function

Not usable function

1) This function is usable with the Java applet viewer.

2) This function is not usable with the Java applet viewer.

The access rights of the administrator and the user can be set in "Setting the User — User Menu" of the Administrator menu on page 60.

### Logging in to Homepage — Welcome Page

#### Logging in as a user

**1** Start the Web browser on your computer and type the IP address of the camera you want to monitor.



The welcome page is displayed.

#### **Display sample: SNC-RX570N**

The flood
Network Camera SNC-RX570N
Enter
MPEG4 ● ActiveX viewer
.JPEG ● Activity viewer ● Jama spolet viewer
Setting
English Jepanese
SONY
@ 2006, 2007 Sony Corporation

**2** Select the viewer.

The usable codecs and viewers are displayed depending on the **Mode** setting in the **Video Codec** Tab in the Camera menu (page 45).

#### When Mode is set to Single codec

You can monitor the image of the selected video codec (JPEG, MPEG4 or H.264). For JPEG images, you can select **Java applet viewer**.

#### When JPEG is selected

IPEL/	2
	R P P P
	LEN A
	Network Camera SNC-RX570N
	Enter
	UPEQ O Active K variant Use available to use available to the second sec
	Setting
	SONY

#### When MPEG4 is selected

IPELA
C. S.
Er El A
Network Camera SNC-RX570N
Enter
MPEO4 O Rethel Xviener
Setting
finglish Japanese
SONY
© 2006, 2007 Sony Corporation

#### When H.264 is selected

IPEL/	
	Network Camera SNC-RX570N
	Enter
	H 2014 O ActiveX viewer
	(Setting)
	English Japanese SONY

#### When Mode is set to Dual codec

You can monitor JPEG and MPEG4 images. For JPEG images, you can select **Java applet viewer**.



#### **3** Click Enter.

The main viewer appears.

#### With the ActiveX viewer (MPEG4/H.264)



#### With the Java applet viewer



Control the camera from the main viewer.

#### Note

If the welcome page does not start correctly, the security level of the Internet Explorer may be set to higher than **Medium**. See "To display the welcome page and the main viewer correctly" on page 17 and check the security level.

# Displaying the Administrator menu directly

When the administrator sets the camera functions, the Administrator menu can be opened directly from the welcome page.

Select the viewer language on the welcome page.

Click **English** or **Japanese** at the bottom of the welcome page.

**2** Click **Setting** on the welcome page. The following dialog appears.

Connect to 192	.168.0.100 ? 🛛
Sony Network Ca	mera SNC-***
User name:	😰 admin 💌
Password:	••••
	Remember my password
	OK Cancel



3

The user name "admin" and the password "admin" are set at the factory for the Administrator. You can change them using the User menu of the Administrator menu (see page 60).

The Administrator menu appears in another window.

1	System
	Camera
	Network
	902.18
	User
	Conveitu
	Security
	Preset position
	e-Mail (SMTP)
	FTP client
	Image memory
	FTP server
	Alarm output
	Voice alert
	Trigger
	Schedule
	Alarm buffer
	Object detection
	Serial

#### **About viewers**

You can use the following viewers.

#### **ActiveX viewer**

This viewer can monitor the camera image in any of the **JPEG**, **MPEG4** and **H.264** video codecs. You must install this viewer when you access the main

viewer for the first time.

# When you display the main viewer of the camera for the first time

When you log in the network camera using ActiveX viewer for the first time (by clicking **Enter** to enter the main viewer), the Security Warning appears. Click **Yes** and install ActiveX Control. You can use all the functions of the viewer with ActiveX Control.

#### Java applet viewer

You can select this viewer when the camera image is in **JPEG**. The frame rate is lower than the ActiveX viewer. The Java applet viewer operates only when Java is installed and Java (Sun) is enabled. If it does not operate correctly, check whether the Java has been installed successfully and Java (Sun) is enabled.

For details on the Java version for which operation has been verified, see "System Requirements" on page 6.

#### To check the Java version

Select **Tools** from the menu bar of Internet Explorer, then select **Internet Options** and click the **Advanced mode** tab. Check the version of Java displayed in **Java** (**Sun**). If **Java** (**Sun**) is not displayed, it means that Java is not installed. You need to install Java.

#### To enable Java Plug-in

Example: In case of Java Plug-in Ver. 1.6.0\_01

Check "Use JRE 1.6.0\_01 for <applet> (requires restart)" in "Java (Sun)".

#### To install Java Plug-in

Download Java 2 Runtime Environment, Standard Edition (JRE) from the website of Sun Microsystems, Inc., and install it by following the instructions on the installer.

#### Notes

- If Automatic configuration is enabled in the Local Area Network (LAN) Settings of Internet Explorer, the camera image may not be displayed. In that case, disable Automatic configuration and set the Proxy server manually. For the setting of the Proxy server, consult your network administrator.
- When you install ActiveX Control, you should be logged in to the computer as the Administrator.

#### Tip

Every page of this software is optimized for display character size **Medium** for Internet Explorer.

### **Configuration of Main** Viewer

This section explains the functions of the parts and controls of the main viewer. For a detailed explanation on each part or control, see the specified pages.

# Main viewer using ActiveX viewer (MPEG4 or H.264)



#### Main viewer using ActiveX viewer (JPEG)



#### Main viewer using Java applet viewer



Camera control section Monitor image section Main menu

#### Main menu

## Setting

Click to display the Administrator menu. (page 33) You can operate this function only when logging in as the administrator.



Displays the welcome page.

#### **Camera control section**

#### Frame rate



(Displayed only when the camera image is in JPEG.)

Selects the frame rate to transmit images. (page 25)

#### View size



Selects the view size to be displayed. (page 26)



Click to change the size of the digital zoom. (page 26)

Capture

(Displayed in the main menu when the Java applet viewer is used.)

Click to capture a still image shot by the camera and to store it in the computer. (page 26)



### 🛃 Control

Click to operate the camera using the pan, tilt and zoom functions.

When you click this icon, 🔛 appears and enables you to control pan, tilt and zoom functions from the main viewer. (page 27)

#### **Preset position**



(Displayed only when one or more preset positions are stored in memory.)

Select the **Preset position** name from the drop-down list. The camera will move to the preset position that you have stored in memory using the Preset position menu.



Click to display the following control panel.



You can control pan, tilt, zoom, and focus of the camera. (page 27)

#### Pan/Tilt control

Click the arrow button of the direction in which you want to move the camera. Keep it pressed to move the camera continuously.

To return to the home position, click  $\bigcirc$ .

You can select the operation mode of the 8-direction arrow buttons for panning and tilting in **PTZ mode** of the System menu.

#### Zoom control

Press **WIDE** to zoom out, and press **TELE** to zoom in. Zooming continues while the button remains pressed.

#### Note

The four edges of the image may be dark depending on the zoom position. This is a phenomenon related to the structure of the camera, and does not cause a problem.

#### **Focus control**

To focus on a nearby object, press **NEAR**. To focus on a distant object, press **FAR**.

By pressing **ONE PUSH AF**, the focus is set to the optimum position.

#### Note

To control the focus manually, set **Focus mode** of the Camera menu to **Manual**. (page 42)

#### Trigger



(Displayed only when the camera **Viewer mode** (page 61) is set to **Full** and one or more triggers are enabled in the Trigger menu (page 77).)

Select the function you want to use from the drop-down list and click *(D)*. The selected function is activated. The selectable functions are as follows:

- send the still image files attached to an e-mail (page 30)
- send the still image files to an FTP server (page 30)
- record the still image files in the built-in memory, ATA memory card (not supplied) or "Memory Stick" (not supplied) (page 30)
- control the alarm output (page 31)
- switch the Day/Night function on/off (page 31)
- play the audio file stored in the camera (page 31)

# Transmission (TCP/UDP transmission mode)

(Displayed only when the camera image is in MPEG4 or H.264 and the ActiveX viewer is used.)

Each click switches the transmission mode of the video/ audio data between TCP mode, UDP (Unicast) mode, and UDP (Multicast) mode. (page 32) The last selected mode is saved in the computer, and will stay selected for the next startup.

#### Volume



(Displayed when Microphone (page 42) is set to On.)

Drag the  $\square$  bar to adjust the volume. When you click  $\square$ , the icon changes to  $\square$  and the audio output stops. To output the audio, click  $\square$  again.

#### Note

If (1) does not appear when the Java applet viewer is used, **Audio codec** in the Camera menu may not be set to **G.711 (64 kbps)** (page 42), or Java may not be installed correctly.

To check if Java is installed correctly, refer to "Java applet viewer" of "About viewers" on page 21.

#### **Monitor image**

2004-02-16 Mon 12:35:50



The image shot by the camera is shown here. The date and time is displayed at the top of the window.

# Controlling the Monitor Image

You can monitor the camera image on the monitor window of the main viewer.

#### Monitoring the camera image

1 Log in to the homepage to display the main viewer. To log in, see "Logging in as a user" on page 20.



2 Select the frame rate (only when the camera image is in JPEG).



Click the **Frame rate** list box to select the frame rate for transmitting the image. Selectable frame rates are as follows.

#### SNC-RX570N/RX550N/RX530N

1, 2, 3, 4, 5, 6, 8, 10, 15, 20, 25, 30 fps

#### SNC-RX570P/RX550P/RX530P

1, 2, 3, 4, 5, 6, 8, 12, 16, 20, 25 fps

"fps" is a unit indicating the number of frames transmitted per second. For example, if you select **30 fps** for SNC-RX570N, the image is sent at the maximum speed of the connected line (30 fps maximum).

#### Note

The frame rate options indicate the maximum number of frames that can be transmitted. The number of frames actually transmitted may vary depending on network environments and camera settings (image size and image quality settings).

#### **3** Select the view size.

View size:	
AUTO	-

Click **View size** list box to select the view size from **Auto**,  $640 \times 480$ ,  $320 \times 240$ , or  $160 \times 120$ . **Auto** is determined by the image size specified in the Camera menu (page 45).

#### Zooming in the monitor image

- 1 Click 🔎.
- 2 Click the point you want to zoom in. The image is magnified by about 1.5 times with the clicked point at the center.





The digital zoom icon changes to  $\swarrow$ .

**3** To cancel zooming in, click  $\swarrow$ .

# Capturing a Monitor Image

You can capture an image being monitored as a still image and save it in the computer.

#### Capturing a monitor image

**1** Display the camera image in the monitor window.

#### 2 Click 🛗.

The still image of the moment you click is captured, and this still image is displayed in the capture window.

#### With the ActiveX viewer



#### With the Java applet viewer



**3** To close the capture window, click **Cancel** or **Close**.

# Operating the Camera

#### Saving the captured image

#### With the ActiveX viewer

- **1** Capture the monitor image.
- 2 Click Save.

The Save As dialog appears.

Save As					? 🛛
Save in: 🕯 l	.ocal Disk (C:)	• +	£	<b>r</b> 🖻	
Program File	and Settings s				
File <u>n</u> ame:	oneshotimage		_		<u>S</u> ave
Save as type:	JPEG Files (*.jpg)		-	(	Cancel

- **3** Select JPEG Files or Windows Bitmap Files as Save as type.
- 4 Type the **File name** and specify **Save in**, then click **Save**.

#### With the Java applet viewer

- **1** Capture the monitor image.
- Right-click the mouse to display the menu and select Save Picture As....The Save Picture dialog appears.

Save Picture						? 🗙
Savejn:	🖙 Local Disk (C	)	•	3 🕫 🛤	••	
My Recent Documents Desktop	Cocuments and Program Files	5ettings				
My Documents						
My Computer						
My Network Places	File <u>n</u> ame:	oneshotimage		•		<u>S</u> ave
	Save as <u>t</u> ype:	JPEG (*.jpg)		•		Cancel

- 3
  - Select JPEG or Bit map as Save as type.
- 4 Type in File name and specify Save in, then click Save.

# **Operating the Camera**

You can operate the camera from the main viewer.

When you click **(20)**, the display switches to **(20)**. Next, **(11)** and **Preset position** list box are displayed on the upper right of the window.

When  $\bigoplus$  is displayed in white on the upper right of the window, you can use the Pan/Tilt control function. If you execute the digital zoom when you can control Pan/Tilt,  $\bigoplus$  turns gray and you can no longer control the camera in the monitor window or in the panorama window, nor can you control zoom in the zoom <u>bar</u>.

When you cancel the digital zoom,  $\bigoplus$  returns to white.

#### Notes

- The **Preset position** list box is not displayed when no preset position is memorized.
- When **Exclusive control mode** of the System menu is set to **On** and you click **2**, the remaining time that you are authorized to operate the camera is displayed. If you cannot get the control, the icon switches to **2** and the waiting time is displayed.

#### Controlling via the control panel

You can operate the camera direction, zoom, and focus by using the control panel for the monitor image currently displayed.

- 1 Click Selection .
- **2** Click **55**.

The control panel is displayed.



**3** Control each function using the displayed control panel.

#### Pan/Tilt control

Click the arrow button of the direction in which you want to move the camera. Keep it pressed to move the camera continuously.

To return to the home position, click  $\bigcirc$ .

#### Note

When you hold  $\checkmark$ ,  $\checkmark$  or  $\checkmark$  to tilt the camera downward to the point where it faces the ground with **Auto flip** set to **On** (page 36), the auto flip function is activated to change the tilt movement upward.

#### Zoom control

Click **WIDE** to zoom out, and click **TELE** to zoom in. Zooming continues while the button remains pressed.

#### Note

The four edges of the image may be dark depending on the zoom position. This is a phenomenon related to the structure of the camera, and does not cause a problem.

#### **Focus control**

To focus on a nearby object, click **NEAR**. To focus on a distant object, click **FAR**.

By clicking **ONE PUSH AF**, the focus is set to the optimum position.

#### Note

To control the focus manually, set **Focus mode** of the Camera menu to **Manual**. (page 42)

# Panning and tilting by clicking the monitor image

Click on the monitor image, and the camera moves so that the clicked portion is positioned at the center of the display.



# Panning, tilting and zooming by specifying the area

Click and hold the left button of the mouse on the monitor image, and drag the mouse diagonally to draw a red frame around the portion you want to enlarge. The camera moves so that framed portion is positioned at the center of the display and is zoomed in.



#### Notes

- When **Zoom mode** in the Camera menu is set to **Full** (see page 41), zooming of the specified area stops at the TELE end of the optical zoom. If you want to zoom in further using the digital zoom, specify the area again.
- When the specified area is zoomed in, the center may be shifted or some portion of the image may appear out of the monitor image section. In this case, click the point you want to move to the center or click the arrow button on the image control section.

# Zooming an image by the camera zoom bar

When you have the authorization to control this function, the zoom bar is displayed below the window. You can specify a location to be zoomed by clicking the zoom bar.

The zoom bar is either displayed or turned off by clicking **below** the image frame.

#### 

**Characterized WIDE end icon:** Click to move the zoom to optical WIDE end (same magnification).

**TN Optical TELE end icon:** Click to move the zoom to optical TELE end (26 × magnification).

**Digital TELE end icon:** Click to move the zoom to digital TELE end (312 × magnification)

#### Turning off the zoom bar

When you are not going to use the zoom bar, click under the panorama window to turn off the panorama window, then click it again to turn off the zoom bar.

#### Notes

- The zoom bar of the digital area is not displayed when **Zoom mode** of the Camera menu is not set to **Full**.
- The four edges of the image may be dark depending on the zoom position. This is a phenomenon related to the structure of the camera, and does not cause a problem.

# Moving the camera to a preset position

Select a preset position name from the **Preset position** drop-down list. The camera will move to the preset position that you have stored in memory using the Preset position menu (page 62).

Preset position:
Position A 🗾 👻
Position A Position B Position C

# Controlling the Camera on a Panorama Image

When you have the authorization to control the camera, the panorama window is displayed under the monitor window.

In the panorama window, a  $360^{\circ}$  view around the camera is displayed as a panorama image. When you click on the displayed panorama image, the camera faces the clicked area.



Panorama window

#### To create the panorama image

Create the panorama image with the supplied SNC panorama creator. Refer to page 98 for details.

#### Тір

The panorama image is a still picture converted from the image taken when you were going to create it with the SNC panorama creator. When the camera is moved or when the layout around the camera is changed, you should create the panorama image again.

# Facing the camera toward a specified point

1 Create a panorama image with the SNC panorama creator and display it.



**2** Click the point you want to watch in the panorama window.

The camera is moved to face toward the clicked point, and the present image at the point is displayed in the monitor window.





Click the point you want to watch in the panorama window.

The present situation is displayed in the monitor window at the clicked point.

#### To rotate the panorama image

To rotate the panorama image in accordance with the camera's panning direction, set **Panorama mode** to **Rotate** in the System menu of the Administrator menu (page 37). (The  $\blacktriangle$  mark on the panorama image indicates the panning home position.)

#### Note

The panorama image can be rotated only when a 360degree panorama image has been created using the SNC panorama creator.

#### To turn off the panorama window

When you are not going to use the panorama image, click under the panorama window to turn off the panorama window.

# **Using the Trigger Button**

You can operate various functions of the camera simply by clicking 💦 (trigger) in the main viewer.

#### Sending a monitor image via e-mail

You can send a captured still image by attaching it to an e-mail.

To use this function, you need to make **e-Mail (SMTP)** active and set the address in the Trigger menu of the Administrator menu properly (page 77).

- Display the image on the monitor window.
- **2** Select **e-Mail** from the trigger drop-down list.



#### 3 Click 🔼

The still image of the moment you click is captured, and your e-mail with the image file attached is sent to the specified mail address.

# Sending a monitor image to an FTP server

You can send a captured still image to the FTP server. To use this function, you need to make **FTP client** active and set the address in the Trigger menu of the Administrator menu properly (page 78).

- **1** Display the image on the monitor window.
- 2 Select **FTP** from the trigger drop-down list.



3 Click 🔝.

The still image of the moment you click is captured, and the image file is sent to the FTP server.

# Recording a camera image as a still image

You can capture a camera image as a still picture and record it.

The still images are recorded in the built-in memory, ATA memory card (not supplied) or "Memory Stick" (not supplied). To use this function, you need to make **Image memory** active and set the details in the Trigger menu of the Administrator menu (page 78).

- **1** Display the image on the monitor window.
- 2 Select **Image memory** from the trigger drop-down list.



**3** Click 🔁.

The still image of the moment you click is captured, and the image file is recorded.

#### Controlling alarm output 1, 2

You can control Alarm output 1, 2. To use this function, you need to make **Alarm output 1** or **Alarm output 2** active in the Trigger menu of the Administrator menu (page 78).

- Display the image on the monitor window.
- 2 Select Alarm output1 or Alarm output2 from the trigger drop-down list.



**3** Click 🔼.

The alarm output is switched by clicking. The alarm output mode can be selected from **Toggle** or **Timer** of **Alarm output 1, 2** in the Trigger menu (page 78).

#### Тір

For the connection of peripheral devices to the alarm output of the I/O port, see the supplied Installation Manual.

#### **Controlling Day/Night function**

You can control the Day/Night function On (night mode) and Off (day mode).

To use this function, you need to make **Day/Night** active in the Trigger menu of the Administrator menu (page 78).

Display the image on the monitor window.

2 Select **Day/Night** from the trigger drop-down list.



#### **3** Click 🔁.

Each click switches the Day/Night function alternately between On (night mode) and Off (day mode).

#### Note

If **Day/Night mode** in the Trigger-Day/Night menu (page 78) is set to **Disable** or **Auto**, you cannot control the Day/Night function by clicking **Auto**.

# Playing the audio file stored in the camera

You can play the audio file previously stored in the camera using the SNC audio upload tool. To use this function, you need to make **Voice alert1**, **Voice alert2** and **Voice alert3** active in the Trigger menu of the Administrator menu (page 79).

- Display the image on the monitor window.
- 2 Select Voice alert1, Voice alert2 or Voice alert3 from the trigger drop-down list.



#### **3** Click 🔼.

Playback of the selected audio file starts and the playback sound is output from the speaker connected to the camera.

### Switching TCP/UDP Transmission Mode

You can select TCP or UDP as the communication port for the video/audio data.

This function can be used when **Mode** (video codec mode) (page 45) is set to **MPEG4** or **H.264** and the ActiveX viewer is used.

#### Notes

- The function may not operate correctly when you use personal firewall software or antivirus software on your computer. In that case, disable the software or select the TCP mode.
- If you are using Windows XP Service Pack 2 or later, Windows Vista, or Windows 7, disable "Windows Firewall." For details, see "Configuring Windows Firewall" in "When using Windows XP Service Pack 2 or later" on page 10, "Configuring Windows Firewall" in "When using Windows Vista" on page 13, or "Configuring Windows Firewall" in "When using Windows 7" on page 15.
- **1** Open the main viewer.
- 2 Click **TCP/UDP Transmission**. The **Select TCP/UDP** dialog appears.



**3** Click one of the buttons **TCP**, **UDP** (**Unicast**) or **UDP** (**Multicast**).

TCP: This is normally selected.

When **TCP** is selected as the communication port, HTTP communication is adopted for video/audio communications.

HTTP is the protocol used for reading the usual Web page.

In an environment capable of reading Web pages, you can watch or listen to the video/audio by selecting the TCP port.

**UDP (Unicast):** When **UDP (Unicast)** is selected as the communication port, RTP (Real-time Transport Protocol) is adopted for video/audio communications. Since RTP is the protocol for

running video/audio data, the video/audio playback is smoother than when TCP (HTTP) is selected. If a firewall is installed between the camera and the computer, or depending on the network environment, the video/audio may not play back properly when **UDP** (**Unicast**) is selected. In that case, select **TCP**.

**UDP** (**Multicast**): This protocol is selectable when **Multicast streaming** (page 47) is **On**. When **UDP** (**Multicast**) is selected as the transmission port, RTP (Real-time Transport Protocol) and UDP multicast techniques are adopted for video/audio transmission. By selecting it, the network transmission load of the camera can be reduced. If a router that does not correspond to the multicast or a firewall is installed between the camera and the computer, the video/audio may not play back properly. In that case, select **TCP** or **UDP** (**Unicast**).

4 Click **OK** to close the dialog.

If you do not change the transmission setting, click **Cancel**.

# Administrating the Camera

#### Administrating the Camera

The Administrating the Camera section explains how to set the functions of the camera by the Administrator. For the monitoring of the camera image, see "Operating the Camera" on page 19.

This section explains the basic operations and each option of the Administrator menu.

#### Note on the display of menu options

The setting menus of this unit will clearly display only the setting options that you can currently select. The grayed out options cannot be selected.

### Basic Operations of Administrator Menu

You can use the Administrator menu to set all functions to suit the user's needs.

Click **Setting** in the welcome page or **m** in the main viewer to display the Administrator menu.

# How to setup the Administrator menu

- 1 Log in the homepage to display the welcome page. You can learn how to log in on page 20 "Logging in as a user".
- 2 Select the viewer language on the welcome page. Click **English** or **Japanese** at the bottom of the welcome page.
- **3** Click **Setting** on the welcome page. The authentication dialog appears. Enter the user name and password for Administrator. The user name "admin" and password "admin" are set at the factory for the Administrator.

#### Administrator menu appears.



The following steps also display the Administrator menu.

- ① Click **Enter** in the welcome page to display the main viewer.
- (2) Click  $\widehat{m}$  in the main viewer.
- ③ Enter the user name and password for Administrator.
- 4 Click the menu name (example: System) on the left side of the Administrator menu. The clicked menu appears.

#### Example: "System" menu

 
 System
 Date & time
 Initialize
 System tog
 Access tog

 Camera
 Title bar name
 SONY/Nework Cemara SIX-9+9+ Maximum: 32 characters
 Maximum: 32 characters

**5** Select the required tab above the menu, and set each setting option in the tab.

Example: "Date & time" tab of "System" menu

 System
 System
 Date & time
 Initialize
 System log
 Access log

 Camera
 Current date & time
 2006/01-27 01 -69-01
 P
 P

See pages 35 to 88 for details of the menu tabs and setting options.

**6** After setting, click **OK**.

The settings you have made become active.

Click **Cancel** to invalidate the set values and return to the previous settings.

#### Buttons common to every menu

The following buttons are displayed on all the menus. The functions of the buttons are the same on every menu.



Click this button to validate the settings.

Click this button to invalidate the set values and return to the previous settings.

#### General notes on menus

- After changing a setting on a menu, wait at least 10 seconds before turning off the power of the camera. If the power is turned off immediately, the changed setting may not be stored correctly.
- When the camera settings are changed while watching the main viewer, some settings cannot be restored. To reflect the change on the opening main viewer, click **Refresh** of the Web browser.

#### Configuration of Administrator menu

#### System Camera Network 302.1X User Security Preset position e-Mail (SMTP) FTP dient Tragge memory FTP server Alarm output Voice atert Trigger Schedule Alarm fulffer Object detection Serial

#### System

Displays the System menu. ("Configuring the System — System Menu" on page 35)

#### Camera

Displays the Camera menu for setting the camera image and audio. ("Setting the Camera Image and Audio — Camera Menu" on page 41)

#### Network

Displays the Network menu for setting the network connection. ("Configuring the Network — Network Menu" on page 48)

#### 802.1X

Displays the 802.1X menu for connecting the camera to the network configured in compliance with the 802.1X standard for port authentication. ("Using the 802.1X Authentication Function — 802.1X Menu" on page 53)

#### User

Displays the User menu for setting the log in user name and password. ("Setting the User — User Menu" on page 60)

#### Security

Displays the Security menu for specifying a computer that is allowed to connect to the camera. ("Setting the Security — Security Menu" on page 61)

#### **Preset position**

Displays the Preset position menu to register a position you want to save. "Tour function", which rotates the registered positions, is also set here. ("Saving the Camera Position and Action — Preset position Menu" on page 62)

#### e-Mail (SMTP)

Displays the e-Mail (SMTP) menu for sending an email. ("Sending an Image via E-mail — e-Mail (SMTP) Menu" on page 65)

#### **FTP client**

Displays the FTP client menu for sending an image/ audio file, etc. to an FTP server. ("Sending Images to FTP Server — FTP client Menu" on page 68)

#### Image memory

Displays the Image memory menu for recording an image/audio file, etc. in the built-in memory or in an ATA memory card (not supplied) or a "Memory Stick" (not supplied) inserted in the camera. ("Recording Images in Memory — Image memory Menu" on page 70)

#### **FTP server**

Displays the FTP server menu for setting the FTP server function of the camera. ("Downloading Images from the Camera — FTP server Menu" on page 74)

#### Alarm output

Displays the Alarm output menu for setting the alarm out terminal of the camera. ("Setting the Alarm Output — Alarm output Menu" on page 75)

#### Voice alert

Displays the Voice alert menu for playing the audio file stored in the camera in synchronization with alarm detection by the sensor input or the object detection function. ("Outputting Audio Linked to Alarm Detection — Voice alert Menu" on page 76)

#### Trigger

Displays the Trigger menu for operations when you click the trigger button in the main viewer. ("Setting the Operations from the Viewer — Trigger Menu" on page 77)

#### Schedule

Displays the Schedule menu for the Day/Night function, Preset position function, e-Mail (SMTP) function, FTP

Administrating the Camera

client function, Image memory function and Alarm out function, Voice alert function and so on. ("Setting the Schedule — Schedule Menu" on page 79)

#### Alarm buffer

Displays the Alarm buffer menu for the buffer that records the image and audio related to alarm detection. ("Setting the Alarm Buffer — Alarm buffer Menu" on page 80)

#### **Object detection**

Displays the Object detection menu for the object detection function built into the camera. ("Setting the Object Detection Function — Object detection Menu" on page 81)

#### Serial

Displays the Serial menu for communications with external equipment through the external serial terminal. ("Transmitting with External Equipment Using the External Serial Terminal — Serial Menu" on page 88)

### Configuring the System — System Menu

When you click System in the Administrator menu, the System menu appears.

Use this menu to perform the principal settings of the software.

The System menu has six tabs: **System**, **Date & time**, **Superimpose**, **Initialize**, **System log** and **Access log**.

#### System Tab

	~
Title bar name	Sony Network Camera SNC+***
	Maximum: 32 characters
Welcome text	
Welconie text	
	Maximum: 1024 characters
Serial number	100001
Coffuerra varcion	
Soltwale version	1.0
Homepage	<ul> <li>Default</li> </ul>
	• Custom
	Path /user/
	Selected memory
	Elach memory     Used space: 0Kbyte
	C reast memory coordinates to ayo
	ATA memory card emply
	Memory Stick empty
Exclusive control mode	● On ● Off
	Operation time 30 sec. (10 to 600 sec.)
	Maximum wait number 10 (0 to 10)
PTZ mode	Normal     Step
	Pan/Tilt level <mark>1 💌</mark>
	Zoom level 1 V
Auto flip	● On ● Off
	Latency ● 0 sec. ● 0.5 sec. ● 0.75 sec.
Danorama modo	
Parlorama mode	• Rotate • Fixed
Sensor input mode	Sensor input 1   Normally open  Normally dosed
	Sensor input 2   Normally open  Normally closed

#### Title bar name

Type a name of up to 32 characters to be displayed on the title bar. The characters typed here are displayed on the title bar of the Web browser.

#### Welcome text

Type any text of up to 1024 characters in HTML format to show on the welcome page. Use the <BR> tag for a line break. (A line break is equivalent to 2 characters.)

#### Serial number

The serial number of the camera is displayed.

#### Software version

The software version of this camera is displayed.

#### Homepage

Select the homepage to be displayed when you enter the camera IP address in your browser's web address box.

**Default:** Displays the homepage stored in the camera. **Custom:** Displays your individual homepage.

You can display your favorite homepage stored in the built-in flash memory, ATA memory card (not supplied) or "Memory Stick" (not supplied). To store the HTML file of the homepage in the builtin flash memory, use the Custom Homepage Installer included in the supplied CD-ROM.

To learn how to use of the Custom Homepage Installer, see page 103.

For the verified cards, contact your authorized Sony dealer.

To display your individual homepage, perform the following operation:

- 1 Select Custom.
- **2** Type the path of the HTML file using up to 64 characters in the text box on the right of **Path**.
- **3** In Selected memory, select the memory in which the homepage is stored.

You can select **Flash memory**, **ATA memory card** or **Memory Stick**.

The directory displayed in the text box on the right of **Path** changes according to the selected memory.

#### Tip

Even when you select **Custom**, the homepage inside the camera can be displayed by typing the following URL in the address box of your Web browser.

Example: When the IP address of the camera is set to 192.168.0.100

http://192.168.0.100/en/index.html

#### Exclusive control mode

Controls the authority to operate pan, tilt, zoom and some other functions of the camera.

- **On:** Only one user has control authority. Set the operation time for one user in **Operation time**. If a user tries to operate a function during operation by another user, the authority is controlled by the settings of **Operation time** and **Maximum wait number**.
- **Off:** Multiple users can control pan, tilt and zoom at the same time. When multiple users control these functions at the same time, the last operation has priority.

#### **Operation time**

Sets the time length for a user who has control authority. The selectable range is from **10** to **600** seconds. This is effective when **Exclusive control mode** is **On**.

#### Maximum wait number

Sets the number of users who are permitted to wait for their turn for control authority during operation by one user. The selectable number is from 0 to 10. This is effective when **Exclusive control mode** is **On**.

#### Notes

- To use **Exclusive control mode**, the date and time of the camera and the connected computer must be set correctly at first.
- To use **Exclusive control mode**, do not disable the Web browser Cookie. When it is disabled, this mode cannot be used.
- When you change the **Exclusive control mode** setting, click **Refresh** on the Web browser to reflect the change when opening the main viewer page.

#### PTZ mode

Select the pan/tilt control mode using the 8-direction arrow buttons (page 28) and the zoom control mode using the TELE/WIDE button (page 28). Select **Normal** or **Step**.

- **Normal:** When you click the mouse button, the camera starts panning, tilting or zooming operation, and the operation continues while you hold down the mouse button. To stop the operation, release the mouse button.
- Step: Each time you click the mouse button, the camera moves (panning, tilting or zooming). If you keep the mouse button held down for more than 1 second, the operation mode is temporarily changed to Normal. When you release the mouse button, the camera operation stops and the Step mode is restored.

When you select **Step**, **Pan/Tilt level** and **Zoom level** are selectable.

- Pan/Tilt level: Select the camera transition level from 1 to 10 by clicking the 8-direction arrow button for panning/tilting. Selecting 10 provides the maximum transition level.
- Zoom level: Select the camera transition level from 1 to 10 by clicking WIDE or TELE for zooming. Selecting 10 provides the maximum transition level.

#### Auto flip

Enable or disable the auto flip function that automatically switches the tilt movement of the camera downward to upward when the camera tilts downward to the point where it faces the ground.
- On: When you are tilting the camera downward using the ∠, or button on the control panel and the camera reaches the point where it faces the ground, it automatically pans 180 degrees and starts tilting upward.
- **Off:** When the camera tilts to the point where it faces the ground, tilting stops.

# Latency

Specify the time for which the camera movement stops after it has tilted completely downward and before it starts panning when **Auto flip** is set to **On**. This period of time allows you to stop the camera movement without panning.

Selectable values are 0 sec., 0.5 sec. are 0.75 sec.

# Panorama mode

Select to rotate or not rotate the panorama image displayed in the viewer in accordance with the pan movement of the camera.

**Rotate:** The panorama image rotates as the camera pans.

Fixed: The panorama image is fixed.

# Sensor input mode

Specify the detection mode of the signal input to the sensor input terminal of the camera.

- **Normally open:** Detects alarm when the sensor input is short-circuited.
- **Normally closed:** Detects alarm when the sensor input is open-circuited.

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Date & time Tab



# Current date & time

Displays the date and time set on the camera.

# Note

After you have purchased the camera, be sure to check the date and time of the camera and set them if necessary.

# PC clock

Displays the date and time set on your computer.

# Date & time format

Select the format of date and time to be displayed in the main viewer from the drop-down list. You can select the format between **yyyy-mm-dd hh:mm:ss** (year-month-day hour:minute:second), **mmdd-yyyy hh:mm:ss** (month-day-year hour:minute:second), and **dd-mm-yyyy hh:mm:ss** (day-month-year hour:minute:second).

# Adjust

Select how to set the day and time.

- **Keep current setting:** Select if you do not need to set the date and time.
- **Synchronize with PC:** Select if you want to synchronize the camera's date and time with those of the computer.
- Manual setting: Select if you want to set the camera's date and time manually.

Select the year, month, date, hour, minutes and seconds from each drop-down list.

Synchronize with NTP: Select if you want to synchronize the camera's date and time with those of the time server called NTP server (Network Time Protocol). Set the NTP server name and the Interval.

### NTP server name

Type the host name or IP address of the NTP server, using up to 64 characters.

### Interval

Select an interval between 1 and 24 hours at which you want to adjust the camera's time referring to the NTP server's time. The set interval is a guide, and does not indicate the exact time.

### Note

The setting time may not match with the exact time according to the network environment.

# **Time zone**

Set the time difference from Greenwich Mean Time in the area where the camera is installed. Select the time zone in the area where the camera is

select the time zone in the area where the camera is installed from the drop-down list.

# Automatically adjust clock for daylight saving time changes

When you select it, the clock is automatically adjusted according to the daylight saving time of the selected time zone.

# Note

If the time zone selected in **Time zone** is different from that set on the computer, the time is adjusted using the time zone difference and set on the camera.

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Superimpose Tab

	Style • Border Position Upperlef	<ul> <li>Back</li> </ul>		<ul> <li>Transp</li> </ul>			
	Font size Standar	d 🛩					
		mat					
		Date &	time	Camera ID	Frame rate	Bitrate	
		Zoor	n 🗌	Area title	Preset position n	ame	
	Camera ID						
No.1	i title			II	Linearialit	C-4	Class
No.2				Lowerlett	oppernight	Set	Clear
No.2				Lowerleft	Upperright	Set	Clear
N0.3				Lowerleft	Upperright	Set	Clear
N0.4				Lowerlett	Upperright	Set	Clear
No.5				Lowerleft	Upperright	Set	Clear
No.6				Lowerleft	Upperright	Set	Clear
No.7				Lower left	Upper right	Set	Clear
No.8				Lowerleft	Upperright	Set	Clear
No.9				Lowerleft	Upper right	Set	Clear
No.10				Lowerlett	Upperright	Set	Clear
No.11				Lowerleft	Upper right	Set	Clear
No.12				Lowerlett	Upperright	Set	Clear
No.13				Lowerleft	Upperright	Set	Clear
No.14				Lower left	Upperright	Set	Clear
No.15				Lower left	Upperright	Set	Clear
No.16				Lowerleft	Upperright	Set	Clear
No.17				Lowerlett	Upperright	Set	Clear
No.18				Lower left	Linnerright	Set	Clear
No 19				Loweriell	Uppernght	Set	Clear
				LOWEITER	opperright	Set	Clear

# Superimpose

Select **On** to superimpose camera IDs, date and time, or other information onto video images.

# Style

Select the display style for superimposed text.

- **Border:** Display an outline around the characters of the text.
- **Background:** Display a black background around the text.
- **Transparent:** Display a partially transparent background around the text.

# Position

Select the position in which to display the superimposed text.

You can select from **Upper left**, **Upper right**, **Lower left**, or **Lower right**.

# Font size

Select the size of the superimposed text.

- **Standard:** Display the text in standard size. Up to 41 characters can be displayed.
- **Small:** Display the text in a small size. Up to 60 characters can be displayed.

# Superimpose Format

Enter alphanumeric characters to create your own text display or use special tags.

When you click the following buttons, a special tag is automatically entered into the format box.

**Date & time:** The <DATETIME> tag is entered into the format box, and the date and time will be superimposed.

**Camera ID:** The <CAMERAID> tag is entered into the format box, and the camera ID entered in the **Camera ID** box will be superimposed.

- Frame rate: The <FPS> tag is entered into the format box, and the current frame rate will be superimposed.
- **Bit rate:** The <BPS> tag is entered into the format box, and the current bit rate will be superimposed.
- **Zoom:** The <ZOOMRATIO> tag is entered into the format box, and the current zoom ratio will be superimposed.
- Area title: The <AREATITLE> tag is entered into the format box, and the area title names configured in the area title table will be superimposed.
- **Preset position name:** The <POSITIONNAME> tag is entered into the format box, and the preset position name will be superimposed.

# Note

If the preset position name is entered using double-byte characters, it will not be properly displayed when superimposed on the image.

# **Camera ID**

Use single-byte alphanumeric characters to enter a camera ID or a camera name to be superimposed. Click **Camera ID** to enter the <CAMERAID> tag into the format box.

# Area title table

Configure area titles to be superimposed. Click **Area title** to enter the <AREATITLE> tag into the format box.

# No.1 to No.20

Configure the Area title, On/Off, Lower left, Upper right, Set, and Clear settings in each line.

# Note

If multiple titles are configured for the same area, the title name with the highest **No.** value takes priority.

# Administrating the Camera

# Area title

Use single-byte alphanumeric characters to enter the area title name to be superimposed.

# On/Off

Select this to enable an area title.

Specify the rectangular area in which the superimposed title will be displayed by clicking **Lower left** and **Upper right**.

To specify the lower left position of the rectangular area, move the camera to a position in which you want the title displayed and click **Lower left**. Next, specify the upper right position by moving the camera and clicking **Upper right**.

Click Set to store Area title, On/Off, Lower left, and Upper right setting information to the camera. Click Clear to delete Area title, On/Off, Lower left, and Upper right setting information from the camera.

# Notes

- The superimposed camera ID and/or date & time area is regarded as an inactive area of the object detection function.
- A pale image may be viewed under the background of the superimposed area.
- The size of the superimposed number is reduced if the image size is set to 384 × 288 or 320 × 240 (QVGA).
- The superimposed number is not readable if the image size is set to 160 × 120 (QQVGA).
- When you have changed the **Date & time** setting, click **Refresh** of the Web browser to reflect the change on the opening main viewer.

# **OK/Cancel**

**Initialize Tab** 

See "Buttons common to every menu" on page 33.



# Reboot

# Reboots the camera.

Click **Reboot**, and the message "This Camera will be rebooted. Are you sure?" appears. Click **OK** to reboot the camera. It takes about two minutes to start again.

# Factory default

Resets the camera to the factory settings.

Click **Factory default**, and the message "Setup data will be initialized. Are you sure?" appears. When you click **OK**, the network indicator on the camera starts to blink. After adjustments of the default settings have finished, the camera reboots automatically. Do not turn off the camera until the camera reboots.

# Tip

The camera can also be reset to the factory settings by turning on the power of this unit while pressing the reset switch on the camera. For details, see the supplied Installation Manual.

# Backup setting data

Saves the setting data of the camera in a file. Click **Save**, and follow the instructions on the Web browser to specify the folder and save the setting data of the camera. The file name preset at the factory is "sncrx570.cfg" for SNC-RX570N/P, for example.

# **Restore setting**

Loads the stored setting data of the camera. Click **Browse** and select the file in which the setting data is stored. Then, click **OK**, and the camera is adjusted according to the loaded data and restarted.

# Restore preset position and privacy masking settings

When you select it, the stored setting data of the camera, the preset position data and the privacy masking data are loaded.

# Notes

- With **Restore setting**, some items in the Network menu (page 48) cannot be restored.
- When **Restore preset position and privacy masking settings** is selected, it may take a long time to load the setting data.
- The following items cannot be stored or restored with **Backup setting data** or **Restore setting**.
  - audio files uploaded using SNC audio upload tool
  - a panorama image recorded in the camera using SNC panorama creator
  - a homepage created using Custom Homepage Installer

 a client certificate and CA certificate to be used in the 802.1X authentication function

# Video & PT drive refresh

Image distortion and misalignment of the pan/tilt position may occur during extended periods of use. Select **On** to correct image distortion and pan/tilt misalignment.

Video & PT drive refresh takes about 20 seconds to complete. Pan/tilt operations for the camera are performed automatically during the refresh operation. After refresh is completed, the pan/tilt position returns to that at the start of the refresh operation.

# Manual

Click **Refresh** to perform video & PT drive refresh.

# Schedule

### Interval

The refresh interval for the video & PT drive should be set periodically. The interval can be set between 30 minutes and 24 hours (one day).

# **Effective period**

Set the time period within which video & PT drive refresh can be performed.

- Always: video & PT drive refresh is always performed.
- **Schedule:** video & PT drive refresh can be set to a preferred schedule.

Click **Schedule**. The Menu for period setting can be displayed. ("Setting the Schedule — Schedule Menu" on page 79)

Video & P	Video & PT drive refresh - Timer schedule									
	Use the	e same time s	ched	ule	every	/day.				
		Start time	00		00		24		00	
	Mon	Start time	00		00	- End time	24	:[	00	
	Tue	Start time	00		00	- End time	24	:[	00	
	Wed	Start time	00		00	- End time	24	:[	00	
	Thu	Start time	00		00	- End time	24	:[	00	
	Fri	Start time	00		00	- End time	24	:[	00	
	Sat	Start time	00		00	- End time	24	:[	00	
	Sun	Start time	00		00	- End time	24	:[	00	
	OK Cancel									

# Notes

- Camera operation can be canceled when you run video & PT drive refresh while operating the camera.
- If video & PT drive refresh is performed while a position tour is running, the position tour will stop. After video & PT drive refresh has been completed, the position tour restarts.

• Intelligent motion detection stops immediately if you execute video & PT drive refresh when Intelligent motion detection is set. After video & PT drive refresh is completed, motion detection restarts.

# Format ATA memory card

Click **Format** to format the ATA memory card (not supplied) inserted into the PC card slot of the camera. The files and folders stored in the ATA memory card are deleted while formatting.

# Notes

- Before formatting, disable the image memory function and the FTP server function to protect the ATA memory card against writing.
- Do not activate the **Format ATA memory card** function when no card is inserted into the PC card slot.

# Delete custom homepage

By pressing **Delete**, you can delete the homepage recorded in the flash memory of the camera with Custom Homepage Installer (page 103).

# Delete panorama image

By pressing **Delete**, you can delete the panorama image recorded in the camera with SNC panorama creator (page 98).

# Delete voice alert file

Click **Delete** to delete all the audio files stored in the camera using SNC audio upload tool (page 91).

# Notes

- Clicking **Delete** deletes all the stored audio files simultaneously. To delete a specified audio file only, perform deletion of the audio file in the corresponding Voice alert tab of the Voice alert menu (page 76).
- Before deleting the audio file, set **Voice alert** to **Off** in each tab of the Voice alert menu (page 76).

# System log Tab



The data of the software activity of the camera is recorded in this log. It includes data that is useful when a problem occurs.

Click **Reload** to reload the latest data.

# Access log Tab



The access record of the camera is displayed. Click **Reload** to reload the latest data.

# Setting the Camera Image and Audio — Camera Menu

When you click **Camera** in the Administrator menu, the Camera menu appears.

Use this menu to set the functions of the camera. The Camera menu consists of five tabs: **Common**, **Picture**, **Day/Night**, **Video codec** and **Streaming**.

# Common Tab



# Image mode

Selects the mode of the image output from the camera.

**Field:** Select this option when shooting a moving image. **Frame:** Select this option when shooting a still image.

With this setting, the vertical resolution increases but the edge of a moving object may be jagged.

Auto: The Frame or Field mode process is automatically performed depending on movement in the image. Frame is performed for an area without movement, and Field is performed for an area with movement.

# Color

Select Color or Monochrome for the image.

# Zoom mode

Selects the zoom mode.

# SNC-RX570N/P

**Full:** An image can be zoomed up to 36× optical zoom and 12× digital zoom, 432× zoom in total.

**Optical:** An image can be zoomed up to 36× optical zoom.

# SNC-RX550N/P

- **Full:** An image can be zoomed up to 26× optical zoom and 12× digital zoom, 312× zoom in total.
- **Optical:** An image can be zoomed up to 26× optical zoom.

### SNC-RX530N/P

- **Full:** An image can be zoomed up to 18× optical zoom and 12× digital zoom, 216× zoom in total.
- **Optical:** An image can be zoomed up to 18× optical zoom.

# Focus mode

Selects the focus mode.

Auto: The focus is automatically adjusted.Manual: The focus can be adjusted by using the NEAR, FAR and ONE PUSH FOCUS buttons of the control panel displayed from the main viewer.

# Stabilizer

Select the stabilizer to compensate for oscillation. Select **On** to activate the stabilizer when the camera is affected by oscillation.

# Notes

- The stabilizer is effective for the images on a computer. They are not effective for the video output.
- The view angle of the camera is reduced by approximately 10 % when **Stabilizer** is set to **On**.
- The frame rate lowers half when **Stabilizer** is set to **On**.
- The stabilizer may not be effective depending on the degree of oscillation.
- Set **Stabilizer** to **Off** when using the privacy mask (page 100).
- If a flat object such as a solid wall or floor occupies the greater part of a shooting scene or if a large object occupying the greater part of the scene passes by or continues moving, the whole image may tremble. In this case, set **Stabilizer** to **Off**.
- When the brightness of the scene changes suddenly or when you change the brightness setting, the whole image may tremble momentarily.

# Microphone

Select whether you are going to send the audio from the microphone input connector. Select **On** to send the audio from this network camera.

### Note

When you change the **Microphone** setting, click **Refresh** on the Web browser to reflect the change on the opening main viewer page.

# **Mic volume**

Set the volume level of the audio input from the  $10^{-10}$  to  $+10^{-10}$ .

# Audio codec

Select the bit rate when you send the audio from the microphone input connector. G.711 (64kbps), G.726 (40kbps), G.726 (32kbps), G.726 (24kbps) or G.726 (16kbps) can be selected.

### Note

If the bit rate is set to other than **G.711(64kbps)**, no audio is output when you use the Java applet viewer.

# Audio upload

Using the SNC audio upload tool stored in the supplied CD-ROM, you can output the audio that is input to the computer's audio input terminal from the speaker connected to the line output jack of the camera. Select **Enable** to output the audio from the speaker.

# Reset camera menu

Click **Reset**, and the message "Camera menu setting is reset to default. Are you sure?" is displayed. To reset to default, click **OK**.

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# **Picture Tab**

You can set the color condition, exposure, etc. of the camera.

### **Display sample: SNC-RX570N**



# Administrating the Camera

# White balance

Select the white balance mode.

- **Auto:** Automatically adjusts the color to be closest to the image you are viewing. (approximately 3000 K to 7500 K)
- **Indoor:** Adjusts the white balance for shooting indoors under an incandescent lamp. (about 3200 K)
- **Outdoor:** Adjusts the white balance for shooting outdoors. (about 5800 K)
- **One push WB:** The **One push trigger** button becomes active. Click the button to adjust the white balance instantly.
- **ATW:** Makes the subject lighter and automatically adjusts to re-create the original color. (approximately 2000 K to 10000 K)
- Manual: When this option is selected, **R gain** and **B** gain become active.

Selectable gain values are from 0 to 255.

# Exposure mode

Select the exposure mode of the camera. The setting items required for the selected mode become active.

**Full auto:** The camera performs the gain adjustment and iris adjustment automatically. In this case, the shutter speed is fixed. (1/60 sec. for NTSC or 1/50 sec. for PAL).

When this option is selected, **Slow shutter** and **Backlight compensation** become active.

- **Shutter priority:** The camera performs the gain adjustment and iris adjustment automatically and you can select the shutter speed. When this option is selected, **Shutter speed** becomes active.
- **Iris priority:** The camera performs the gain adjustment and shutter speed adjustment automatically, and you can select the iris. When this option is selected, **Iris** becomes active.
- Manual: You can set the exposure manually. When this option is selected, Shutter speed, Iris and Gain become active.

Set the following items as required, according to the selected exposure mode.

# **Backlight compensation**

When you select **On**, the backlight compensation function starts to work.

# DynaView (WDR) (SNC-RX570N/P only)

The DynaView function reduces white-out and blackout in high-contrast shooting scenes such as under backlighting. When you select **On**, the DynaView function starts to work.

# Note

When **DynaView** or **Backlight compensation** is set to **On**, a hunting may be generated due to a picture. In this case, set it to **Off**.

# **Exposure compensation**

The exposure compensation function adjusts the brightness of the image by compensating the exposure. When you select **On**, you can select the exposure compensation values.

Selectable values are as follows:

-1.75, -1.50, -1.25, -1.00, -0.75, -0.50, -0.25, 0, +0.25, +0.50, +0.75, +1.00, +1.25, +1.50, +1.75 (EV)

# Slow shutter

Set the slow shutter. When **On** is selected, the auto exposure setting including the long time exposure is set to adjust to the brightness of the scene.

# Shutter speed

Select the shutter speed of the camera from the dropdown list.

Selectable values of the shutter speed are as follows:

# SNC-RX570N/RX550N/RX530N:

1/10000, 1/6000, 1/4000, 1/3000, 1/2000, 1/1500, 1/1000, 1/725, 1/500, 1/350, 1/250, 1/180, 1/125, 1/100, 1/90, 1/60, 1/30, 1/15, 1/8, 1/4, 1/2, 1 (sec.)

### SNC-RX570P/RX550P/RX530P:

1/10000, 1/6000, 1/3500, 1/2500, 1/1750, 1/1250, 1/1000, 1/600, 1/425, 1/300, 1/215, 1/150, 1/120, 1/100, 1/75, 1/50, 1/25, 1/12, 1/6, 1/3, 1/2, 1 (sec.)

# Iris

Select the iris from the drop-down list. Selectable values of the iris are as follows:

# SNC-RX570N/P, SNC-RX550N/P: Close, F28.0,

F22.0, F19.0, F16.0, F14.0, F11.0, F9.6, F8.0, F6.8, F5.6, F4.8, F4.0, F3.4, F2.8, F2.4, F2.0, F1.6

# **SNC-RX530N/P:** Close, F22.0, F19.0, F16.0, F14.0, F11.0, F9.6, F8.0, F6.8, F5.6, F4.8, F4.0, F3.4, F2.8, F2.4, F2.0, F1.6, F1.4

# Gain

Select the gain from the drop-down list. Selectable values of the gain are as follows: -3, 0, +2, +4, +6, +8, +10, +12, +14, +16, +18, +20, +22, +24, +26, +28 (dB)

# **Brightness**

Fine adjust the brightness for the exposure set in the exposure mode. It is brighter when a larger value is selected, and it is darker when a smaller value is selected. A value from -5 to +5 can be set.

# Saturation

Select the saturation in 7 steps, from -3 to +3. Selecting +3 provides the image with the highest saturation.

# Sharpness

Select the sharpness in 7 steps, from -3 to +3. Selecting +3 provides the image with the highest sharpness.

# Contrast

Select the contrast in 7 steps, from -3 to +3. Selecting +3 provides the image with the highest contrast.

# Note

The brightness, saturation, and contrast settings are effective for the images on a computer. They are not effective for the video output.

# **User preset**

You can save the present settings in the camera as custom settings, or you can load the settings saved in the camera.

This function is useful when you temporarily change the settings for the image or reset them to the previous settings.

- Save: Click to save the present settings of the Picture tab.
- Load: Click to load the saved settings. To use them, click OK.

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# **Day/Night Tab**

Use this tab to set the day/night function of the camera.



# Day/Night mode

Select the day/night mode from among five modes.

Disable: Always works in day mode.

Auto: Normally works in day mode. It switches automatically to night mode in a dark place.

# Note

The day/night mode is not switched to night mode automatically when **Exposure mode** is set to **Shutter priority**, **Iris priority** or **Manual** in the Picture tab.

Manual: Switch the day/night mode manually. When you select Manual, On and Off become active.When you select On, the camera works in night mode. When you select Off, it works in day mode.

**Timer:** Normally the camera works in day mode. It switches to night mode at the time that you have you set in the Schedule menu.

Click **Schedule** and the setting menu for the effective period is displayed. ("Setting the Schedule — Schedule Menu" on page 79)



Sensor input: Controls the day/night mode by synchronizing it with the sensor input. Select the sensor input with which you want to synchronize the mode: Sensor input 1 or Sensor input 2.While a sensor input is detected, the camera works in night mode.

# **OK/Cancel**

# Administrating the Camera

# Video codec Tab

Use this tab to set the items for the video codec.

Mode	Sinale codec	^
	● JPEG ● MPEG4 ● H.264	
	<ul> <li>Dual codec</li> </ul>	
JPEG setting	Image size <mark>640x480 (VGA) 🛛 🗠</mark>	
	Cropping • On • Off	
	Area setting	
	Frame rate <mark>30 🛩</mark> fps	
	Image quality Level 5 🔽	
	Bandwidth control Unlimited 💌 Mbps	
MDEG4 setting	100000 0100 0200240 (OVCA)	
MPLO4 setting	Image size Szozzau (GVGA)	
	Frame rate 8 M fps	
	Bit rate 384 M kbps	
H.264 setting	Image size 320x240 (QVGA) 👻	
	Area setting	
	Frame rate 8 🔗 fps	
	Bit rate 384 🔽 kbps	
	Adaptive rate control O On 💿 Off	
		<b>–</b>
	UKUancel	

# Mode

Select the operation mode of the camera.

- Single codec: Select one video codec from among JPEG, MPEG4 and H.264. The camera supports the selected video codec.
- **Dual codec:** The camera supports both JPEG and MPEG4 video codecs simultaneously. When you select this option, select the priority codec from JPEG or MPEG4.

# JPEG setting/MPEG4 setting/H.264 setting

Set the details of the video codecs.

Selectable items become active according to the **Mode** setting. Set the active items in **JPEG setting**, **MPEG4 setting** or **H.264 setting** as required.

# Image size

You can select the image size to be sent from the camera.

- **SNC-RX570N/RX550N/RX530N:** 704 × 480 (4CIF), 640 × 480 (VGA), 384 × 288, 320 × 240 (QVGA), 160 × 120 (QQVGA)
- **SNC-RX570P/RX550P/RX530P:** 704 × 576 (4CIF), 640 × 480 (VGA), 384 × 288, 320 × 240 (QVGA), 160 × 120 (QQVGA)

When  $640 \times 480$  (VGA) is selected and Cropping is set to On, you can crop a portion of the image and display the cropped image on the computer.

# Cropping

When the image size is set to  $640 \times 480$  (VGA), you can crop a portion of the image and display the cropped image on the computer. Cropping reduces the transmitting data size and thus the network load, and a higher frame rate is achieved.

Select **On** to crop the image, or **Off**.

# Note

Object detection (page 81) operates for an image in the image size that is not cropped even if **Cropping** is set to **On**.

# To crop an image

- 1 Set the Image size to 640 × 480 (VGA). Cropping becomes active.
- 2 Set Cropping to On and click the Area setting button.

The area setting window appears.

**3** Click on the still image to specify the trimming portion.

A red frame that appears when you clicked indicates the trimming portion.

The trimming portion is determined as shown below:

Point rotated by 180° around the axis of the center of the still image Still image



Red trimming Center of the Clicked point frame still image

To change the trimming portion, click on another point on the image.

- 4 Click **OK** at the bottom of the window. The cropped image is displayed on the main viewer.
- **5** To close the image, click  $\boxtimes$  in the upper-right corner.

# Frame rate

Set the frame rate of the image. Selectable values of the frame rates are as follows.

# **SNC-RX570N/RX550N/RX530N:** 1, 2, 3, 4, 5, 6, 8, 10, 15, 20, 25, 30 (fps)

# SNC-RX570P/RX550P/RX530P: 1, 2, 3, 4, 5, 6, 8, 12,

16, 20, 25 (fps)

"fps" is a unit indicating the number of frames transmitted per second.

# Image quality (for JPEG only)

Set the quality of JPEG image.

Selectable values are from **Level 1** to **Level 10**. When **Level 10** is selected, the best image quality is achieved.

# Bandwidth control (for JPEG only)

Limits the network bandwidth for the JPEG image data output from the camera. Selectable bandwidths are as follows:

0.5, 0.6, 0.7, 0.8, 0.9, 1.0, 2.0, 3.0, 4.0 (Mbps), and **Unlimited** 

# Note

Audio may be interrupted depending on the selected bandwidth. In that case, select a wider bandwidth.

# Bit rate (for MPEG4 and H.264 only)

Set the bit rate of MPEG4 or H. 264 image transmission for a line.

Selectable values are as follows:

- **H.264:** 32, 64, 128, 256, 384, 512, 768, 1024, 1536 (kbps)
- **MPEG4:** 64, 128, 256, 384, 512, 768, 1024, 1536, 2048 (kbps)

# Adaptive rate control (for MPEG4 and H.264 only)

This function adjusts the frame rate and the bit rate automatically so that the camera plays back a smooth image to suit the connected computer environment. If **On** is selected, the MPEG4 or H.264 image rate is automatically adjusted.

### Notes

- The actual frame rate and bit rate may be different according to the image size, the shooting scene, or the network condition.
- When Adaptive rate control is set to On, the maximum transmission rate will be the values set in Frame rate and Bit rate.
- When H.264 is selected and the image size is set to 704 × 480 (4CIF) (704 × 576 (4CIF) for the SNC-RX570P / RX550P / RX530P), 640 × 480 (VGA), or 384 × 288, the frame rate used by the camera to transmit the image will be as follows: SNC-RX570N/RX550N/RX530N: 10 fps or less SNC-RX570P/RX550P/RX530P: 8 fps or less

- When MPEG4 is selected, the image size is set to 704 × 480 (4CIF) (704 × 576 (4CIF) for the SNC-RX570P / RX550P / RX530P), 640 × 480 (VGA), or 384 × 288, and the frame rate is set to 25 fps or higher, the frame rate may be decreased when the bit rate is more than 512 kbps (256 kbps for 4CIF) or while the object detection function is operating.
- When the camera operation mode is set to Dual codec and the image size is set to 704 × 480 (4CIF) (704 × 576 (4CIF) for the SNC-RX570P / RX550P / RX530P), 640 × 480 (VGA), or 384 × 288 in MPEG4 setting, the maximum frame rate at which the camera can transmit data will be 20 fps.
- When the camera operation mode is set to **Dual codec**, the actual values set in **MPEG4 setting** and **JPEG setting** may not be obtained, due to the limitation in the capacity to manage two video codecs simultaneously. Use the following table as a guide for the settings.

# Capacity to manage two video codecs simultaneously

SNC-RX570N/RX550N/RX530N

JPEG		MPEG4		
4CIF/VGA/ 384 × 288	15 fps	4CIF/VGA/ 384 × 288	15 fps	
4CIF/VGA/ 384 × 288	20 fps	4CIF/VGA/ 384 × 288	10 fps	
4CIF/VGA/ 384 × 288	10 fps	QVGA	30 fps	
VGA/384 × 288	15 fps	QVGA	20 fps	
4CIF	15 fps	QVGA	15 fps	
QVGA	30 fps	QVGA	30 fps	

### SNC-RX570P/RX550P/RX530P

JPEG		MPEG4		
4CIF/VGA/ 384 × 288	12 fps	4CIF/VGA/ 384 × 288	12 fps	
4CIF/VGA/ 384 × 288	16 fps	4CIF/VGA/ 384 × 288	8 fps	
4CIF/VGA/ 384 × 288	8 fps	QVGA	25 fps	
VGA/384 × 288	12 fps	QVGA	16 fps	
4CIF	12 fps	QVGA	12 fps	
QVGA	25 fps	QVGA	25 fps	

- The object detection function does not operate when **H.264** is selected.
- When **H.264** is selected, you cannot select **Use alarm buffer** in the Alarm sending tab of the FTP client menu and in the Alarm recording tab of the Image memory menu.

# **OK/Cancel**

# **Streaming Tab**

Use this tab to set the items for the transmission by unicast or multicast.



# **Unicast streaming**

Specify the transmission port numbers of the MPEG4/ H.264 video data and audio data to be used when **UDP** (**Unicast**) is selected with **Solution** in the main viewer.

# Video port number

Specify the transmission port number of the MPEG4/ H.264 video data. It is initially set to 50000. Specify an even number from 1024 to 65534. Two port numbers (the number specified here and an odd number with 1 added to the specified number) are actually used for video data communication and control.

# Audio port number

Specify the transmission port number of the audio data. It is initially set to 50002. Specify an even number from 1024 to 65534. Two port numbers (the number specified here and an odd number with 1 added to the specified number) are actually used for audio data communication and control.

# Note

Specify different numbers for the video port number and the audio port number.

# **Multicast streaming**

Set whether the camera uses multicast streaming for MPEG4/H.264 video data and audio data or not. It reduces the transmission load on the camera by making the computer of the same segment network receive the same transmitting data.

Select **On** to allow and **Off** not to allow multicast sending.

When you select **On**, set **Multicast address**, **Video port number** and **Audio port number** properly.

# **Multicast address**

Type the multicast address used on the Multicast streaming.

# Video port number

Specify the MPEG4/H.264 video transmission port number used for the Multicast streaming. It is initially set to 60000. Specify an even number from 1024 to 65534. Two port numbers (the number specified here and an odd number with 1 added to the specified number) are actually used for video data communication and control.

# Audio port number

Specify the audio transmission port number used for the Multicast streaming. It is initially set to 60002. Specify an even number from 1024 to 65534. Two port numbers (the number specified here and an odd number with 1 added to the specified number) are actually used for audio data communication and control.

# Note

Specify different numbers for the video port number and the audio port number.

# **OK/Cancel**

# Configuring the Network — Network Menu

When you click Network in the Administrator menu, the Network menu appears.

Use this menu to configure the network to connect the camera and the computer.

The Network menu consists of three tabs: **Network**, **Wireless** and **Dynamic IP address notification**.

# **Network Tab**

This section provides the menus for connecting the camera through the network cable.

MAC address	00:00:00:00:00
IP address	Obtain an IP address automatically (DHCP)     Use the following IP address     IP address     192.168.0.100
	Subnet mask 255.0.0.0 Default gateway
DNS server	Obtain DNS server address automatically     Use the following DNS server address Primary DNS server Secondary DNS server
Host name	
Domain suffix	
HTTP port number	● 80 ● (1024 to 65535)
	OK Cancel

# **MAC address**

Displays the MAC address of the camera.

# **IP address**

Configure the IP address.

- **Obtain an IP address automatically (DHCP):** Select this option when a DHCP server is installed on the network to allow IP address assignment. With this setting, the IP address is assigned automatically.
- **Use the following IP address:** Select this option when you set a fixed IP address. With this setting, specify the **IP address, Subnet mask** and **Default gateway** manually.

# Note

When you select **Obtain an IP address automatically** (**DHCP**), make sure that a DHCP server is operating on the network.

# **IP address**

Type the IP address of the camera.

# Subnet mask

Type the subnet mask.

# **Default gateway**

Type the default gateway.

# **DNS** server

Configure the DNS server address.

- **Obtain DNS server address automatically:** Select this option to obtain the IP address of DNS server automatically. It can be set only when **Obtain an IP address automatically (DHCP)** is selected in the Network tab.
- Use the following DNS server address: Select this when you set a fixed address as the IP address of the DNS server. With this setting, specify the addresses on **Primary DNS server** and **Secondary DNS** server manually.

# Note

When you select **Obtain DNS server address automatically**, make sure that a DHCP server is operating on the network.

# **Primary DNS server**

Type the IP address of the primary DNS server.

# Secondary DNS server

Type the IP address of the secondary DNS server, if necessary.

# Host name

Type the host name of the camera to be transmitted to the DHCP server. This setting is valid only when **Obtain an IP address automatically (DHCP)** is selected in the Network tab.

# **Domain suffix**

Type the domain suffix of the camera to be transmitted to the DHCP server. This setting is valid only when **Obtain an IP address automatically (DHCP)** is selected in the Network tab.

# Note

The domain suffix is sent to the DHCP server as FQDN (Fully Qualified Domain Suffix) information when **Host name** is set.

# **HTTP port number**

Normally select **80**. If you want to use a port number other than 80, select the text box and type a port number between 1024 and 65535.

### Note

When you have set the **HTTP port number** to a number other than 80 in the Network menu or in the IP Setup Program, access the camera again by typing the IP address of the camera on your Web browser as follows:

Example: when the HTTP port number is set to 8000



# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Wireless Tab — Setting of wireless connection

Insert the specified wireless card into the PC card slot of the camera, and set the items for connecting to the wireless network.

Before setting, read the operation manual and installation manual supplied with the wireless card together with this guide.

# Verified wireless cards

- Optional Sony Wireless Card SNCA-CFW1 and SNCA-CFW5\*
- A commercially available CompactFlash type II-PCMCIA adapter
  - \* SNCA-CFW5 is not available in some countries and areas. For details, contact your authorized Sony dealer.

# Notes

- Before removing the wireless card from the camera, turn off the power of the camera.
- The throughput of the data transmission/reception via the network cable may decrease when the wireless card is in use.



# **MAC address**

Displays the MAC address of the wireless card inserted to the PC card slot.

If a wireless card is not inserted, "00:00:00:00:00:00" is displayed.

# **IP address**

Configure the IP address for a wireless network.

- **Obtain an IP address automatically (DHCP):** Select this option when a DHCP server is installed on the network to allow IP address assignment. With this setting, the IP address is assigned automatically.
- Use the following IP address: Select this option when you set a fixed IP address. With this setting, specify the IP address, Subnet mask and Default gateway manually.

# Note

When you select **Obtain an IP address automatically** (**DHCP**), make sure that a DHCP server is operating on the network.

# **IP address**

Type the IP address of the camera.

# Subnet mask

Type the subnet mask.

# **Default gateway**

Type the default gateway.

# **DNS server**

Configure the DNS server address.

- **Obtain DNS server address automatically:** Select this option to obtain the address of DNS server automatically. It can be set only when **Obtain an IP address automatically (DHCP)** is selected in the Wireless tab.
- Use the following DNS server address: Select this option when you set a fixed address as the IP address of DNS server. With this setting, specify the addresses on **Primary DNS server** and **Secondary DNS server** manually.

# Note

When you select **Obtain DNS server address automatically**, make sure that a DHCP server is operating on the network.

# **Primary DNS server**

Type the IP address of the primary DNS server.

# Secondary DNS server

Type the IP address of the secondary DNS server, if necessary.

# Host name

Type the wireless network host name of the camera to be transmitted to the DHCP server. This setting is valid only when **Obtain an IP address automatically** (**DHCP**) is selected in the Wireless tab.

# **Domain suffix**

Type the wireless network domain suffix of the camera to be transmitted to the DHCP server. This setting is valid only when **Obtain an IP address automatically** (**DHCP**) is selected in the Wireless tab.

# Note

The domain suffix is sent to the DHCP server as FQDN (Fully Qualified Domain Suffix) information when **Host name** is set.

# Туре

Select the network connection type.

- Ad hoc mode: Select this when connecting to a computer directly. With this setting, specify a wireless channel.
- **Infrastructure mode:** Select this when connecting to a computer via an access point or a wireless router.

# Notes

- The setting of the HTTP port number is common to the setting in the Network tab.
- With Ad hoc mode, you cannot select Use WEP key automatically generated of WEP, or WPA or WPA2 on Security.
- When you set **Security** to **WPA** or **WPA2** and change **Infrastructure mode** to **Ad hoc mode**, **Security** setting is automatically changed to **None**.

# Antenna

Select one of the following antenna settings when you use the SNCA-CFW1 or SNCA-CFW5 wireless card (optional), or the SNCA-AN1 wireless LAN antenna (optional).

**Internal:** Select this when you perform communications using the antenna built in the wireless card. This setting is suitable for short-range and omnidirectional communications.

**External:** Select this when you perform long-range communications using the SNCA-AN1 wireless LAN antenna connected to the wireless card.

**Diversity:** Select this when you perform both shortrange and long-range communications using the SNCA-AN1 wireless LAN antenna connected to the wireless card. The antenna that has higher sensitivity is selected automatically.

# Note

When you are using SNCA-CFW5 and select **Diversity**, SNCA-AN1 is selected on the transmitting side and an antenna is selected automatically on the receiving side.

# SSID

Type the ID to identify the wireless network you want to access using up to 32 ASCII characters (alphanumeric). For your security, be sure to change the factory setting.

# Security

Configure the security for a wireless network.

None: Select this option when no security is set.

# Caution

This setting is not recommended for reasons of protecting your computer from harm.

- **WEP:** Select this option when WEP (Wired Equivalent Privacy) security method is used.
- **WPA:** Select this option when WPA (Wi-Fi Protected Access) security method is used.
- **WPA2:** Select this option when WPA2 security method is used.

# WEP

Set up this item when **WEP** is selected on **Security**.

# Use WEP key automatically generated

Checking this box allows you to use an automatically generated WEP key. Uncheck the box when you enter a WEP key manually.

To use the automatically generated WEP key, you need to enable the 802.1X (wireless) function. After checking this box, click **OK** at the bottom of the window. Then the 802.1X function is enabled.

# Note

For correct operation of the 802.1X function, you need to configure the 802.1X settings, such as certificate setting, appropriately. For details on the 802.1X settings, see "Using the 802.1X Authentication Function — 802.1X Menu" on page 53.

# 802.1X

This button is active when Use WEP key automatically generated is selected.

When you click **802.1X**, the 802.1X menu appears, allowing you to configure the 802.1X (wireless) function.

# WEP key

Type and select the WEP key information. This section is active when **Use WEP key automatically generated** is not selected.

Up to 4 WEP keys can be set in the following manner.

1

Select one of the WEP key numbers.

2 Type the same information in the WEP key and Retype WEP key text boxes.

The length of a WEP key is 40 or 104 bit. A 104-bit WEP key has a higher security level than a 40-bit key.

You can type the WEP key either in hexadecimal numbers (0 to 9 and A to F) or ASCII characters (alphanumeric). In hexadecimal, type 10 characters for a 40-bit key, or 26 characters for a 104-bit key. In ASCII, type 5 characters for a 40-bit key, or 13 characters for a 104-bit key.

When **Type** is set to **Infrastructure mode**, the WEP key should be the same as that of the access point. When **Type** is set to **Ad hoc mode**, the WEP key should be the same as that of the communication client.

# WPA/WPA2

Set up this item when **WPA** or **WPA2** is selected on **Security**.

WPA and WPA2 use TKIP and AES encryption systems. This unit supports TKIP for WPA, and AES for WPA2.

# Authentication

Select the authentication method.

- **PSK:** Select for PSK authentication. When this option is selected, **Passphrase** setting is required.
- **EAP:** Select for EAP authentication. When this option is selected, enabling the 802.1X (wireless) function is required. After selecting **EAP**, click **OK** at the bottom of the window. Then the 802.1X function is enabled.

# Note

For correct operation of the 802.1X function, you need to configure the 802.1X settings, such as certificate setting, appropriately. For details on the 802.1X settings, see "Using the 802.1X Authentication Function — 802.1X Menu" on page 53.

# 802.1X

This button is active when **EAP** is selected on **Authentication**. When you click **802.1X**, the 802.1X menu appears,

allowing you to configure the 802.1X (wireless) function.

# Passphrase

Set a passphrase when **PSK** is selected on **Authentication**.

Type 8 to 63 ASCII characters (alphanumeric), or up to 64 hexadecimal digits (0 to 9 and A to F).

# **Re-type passphrase**

To confirm the passphrase, retype the passphrase that you typed in the **Passphrase** box.

# **OK/Cancel**

# Dynamic IP address notification Tab — Notifying the IP Address

When **Obtain an IP address automatically (DHCP)** is selected in the Network tab or Wireless tab, you can send notification of completion of the network settings using the SMTP or HTTP protocol.



# e-Mail (SMTP) notification

Select **On** to send an e-mail when the DHCP setting is completed.

# SMTP server name

Type the name or IP address of the SMTP server for sending an e-mail, using up to 64 characters.

# Authentication

Select the authentication required when you send an e-mail.

- **Off:** Select if no authentication is required when an email is sent.
- On: Select if authentication is required when an e-mail is sent. Select one of the authentication methods from the following and specify the POP server name, User name and Password as required.
  SMTP: Select when SMTP authentication is required.
  - **POP before SMTP:** Select when POP before SMTP authentication is required.

# Note

When you set **Authentication** to **On**, make sure to select either or both **SMTP** or/and **POP before SMTP**.

# **POP** server name

It is necessary when **POP before SMTP** is selected for **Authentication**.

Type the POP (receiving mail) server name using up to 64 characters. Or type the IP address of the POP server. This setting is necessary when the SMTP server that sends e-mails performs authentication using the POP user account.

# User name, Password

Type the user name and password of the user who owns the mail account using up to 64 characters. This setting is necessary when the SMTP server that sends e-mails performs authentication.

# **Recipient e-mail address**

Type the recipient e-mail address using up to 64 characters. You can specify only one recipient e-mail address.

# Administrator e-mail address

Type the e-mail address of the camera administrator using up to 64 characters. This is used as the reply address or the address for a system mail from the mail server.

# Subject

Type the subject/title of the e-mail using up to 64 characters.

# Message

Type the text of the e-mail using up to 384 characters. (A line break is equivalent to 2 characters.) You can describe the information of the acquired IP address, etc. using the special tags mentioned below.

# **HTTP** notification

Select **On** to output a command to the HTTP server when the DHCP setting is completed. Using this function, you can configure a useful system, for example, to view the access log stored in the HTTP server or start an external CGI program.

# URL

Specify the URL to send HTTP request, using up to 256 characters. The URL is normally written as follows:

http://ip\_address[:port]/path?parameter

- **ip\_address:** Type the IP address or host name of the host to which you want to connect.
- [:port]: Specify the port number to which you want to connect. If you want to use the established port number 80, you do not need to input this value.

path: Type the command.

**parameter:** Type the command parameter if necessary. You can use the special tags mentioned below for the parameters.

# **Proxy server name**

When you send HTTP request via a proxy server, type the name or IP address of the proxy server, using up to 64 characters.

# Proxy port number

Specify the port number when you send HTTP request via the proxy server. Set a port number between 1024 and 65535.

# Method

Select the HTTP method GET or POST.

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# About the special tags

You can use the following five special tags to allow notification of the settings acquired by DHCP, such as an IP address. Type the tags in the parameter section of the URL that you described in the Message field of the HTTP.

# <IP>

Use this tag to embed the IP address acquired by DHCP in the text or parameter.

# <HTTPPORT>

Use this tag to embed the specified HTTP server port number in the text or parameters.

# <MACADDRESS>

Use this tag to embed the MAC address of the interface whose IP address was acquired by DHCP, in the text or parameter.

# <MODELNAME>

Use this tag to embed the camera's model name in the text or parameter.

# <SERIAL>

Use this tag to embed the camera's serial number in the text or parameter.

# Using the 802.1X Authentication Function — 802.1X Menu

When you click **802.1X** in the Administrator menu, the 802.1X menu appears.

Use this menu to configure the wired or wireless portbased authentication in compliance with the 802.1X standard.

The 802.1X menu consists of three tabs: **Common**, **Client certificate** and **CA certificate**.

# Note

To use the 802.1X authentication function, you need knowledge of the 802.1X authentication (WPA and WPA2) and digital certificate. To establish an 802.1X network, you need to configure the authenticator, access point, authentication server and other elements. For details on these settings, refer to the manual of the corresponding equipment.

# System configuration of 802.1X network

The following figure shows a general system configuration of an 802.1X network.



# Supplicant

A supplicant is a device that connects to the authentication server to join the network. This camera serves as a supplicant in the 802.1X network. The

# Authenticator

An authenticator forwards certificate request data or response data that the supplicant or authentication server issues to the other party. Normally a hub, router or access point serves as an authenticator.

# Authentication server

An authentication server has a database of connecting users and verifies if the supplicant is a correct user or not. It is also called RADIUS server.

# **CA (Certificate Authority)**

A CA issues and manages certificates of the authentication server (CA certificates) and user certificates. The CA is essential for certificate-based user authentication. Normally a CA is located inside an authentication server.

# Note

This camera supports only the EAP-TLS mode in which the supplicant and the server authenticate each other using the certificate. This mode requires a CA that issues the certificate.

# Common Tab — Basic setting of 802.1X authentication function

802.1X authentication function	Wired interface 💿 On 💿 Off
	Wired interface status
	Supplicant State: NOT RUNNING 🔥
	Refresh
	Wireless interface status
	Supplicant State: NOT RUNNING 🔗
	Refresh
EAP identity	
EAP method	TLS
	OK Cancel

# 802.1X authentication function

This item is used for enabling/disabling the 802.1X authentication function for wired ports. The wired interface status and the wireless interface status can also be checked here.

# Note

To use the 802.1X authentication function for wireless networks, set up **Security** in the Wireless tab of the Network menu. For details, see "Security" on page 50.

# Wired interface

To activate the 802.1X authentication function for wired ports, select **On**.

# Wired interface status

Shows the authentication status of the 802.1X authentication function for wired ports. Click **Refresh** to update the status.

# Wireless interface status

Shows the authentication status of the 802.1X authentication funciton for wireless networks. Click **Refresh** to update the status.

# **EAP** identity

Type the user name to identify the client in the 802.1X authentication server using 3 to 253 characters.

# EAP method

Shows the authentication method used with the authentication server. It is fixed as this camera supports only the TLS method.

# **OK/Cancel**

# **Client certificate Tab**

You can import a client certificate to the camera or export a certificate request.

TLS mode	<ul> <li>Use a key pair fro</li> <li>Use the camera's</li> </ul>	om a CA s built-in key pair
Client certificate	Status Valid	
		CN=WIN2003CA,DC=localnetwork,DC=net
		CN=1XClient01, CN=Users, DC=localnetwork, DC=net
		2006-08-03 - 2007-08-03
		emailProtection clientAuth
	Delete	
	Import	Browse Submit
	PKCS#12 or PEM formal	:
Private key password	••••	Reset
Export certificate request	Country name	
	State or Province nar	ne
	Organization name	
	Organization unit har	rie
	Common name	
	Email address	
	Export	
	ОК	Cancel

# TLS mode

Select the TLS mode.

The EAP-TLS authentication performs certificate-based authentication. It requires private key information consisting of a key pair for the client certificate to store in the camera. The TLS mode allows two modes according to the acquirer of the key pair.

**Use a key pair from a CA:** Uses the certificate including the private key information issued by a CA. The PKCS#12 and PEM formats are supported.

Use the camera's built-in key pair: Uses the private key information that is stored in the tamper-resistant chip built in the camera. This mode is safety because the private key information is not carried out at the time of issuing the certificate request or importing the certificate. Only the PEM format is supported in this mode.

To use this mode, first obtain the certificate from the CA by performing **Export certificate request** on page 56.

# **Client certificate request**

Import, display or delete the client certificate.

# To import the client certificate

Click **Browse...** to select the client certificate to be imported.

Then click **Submit**, and the selected file will be imported to the camera.

# Note

The import process becomes invalid if the selected file is not a client certificate or the imported client certificate is not allowed.

# To display the information of the client certificate

When the client certificate has been saved in the camera correctly, its information appears on **Status**, **Issuer DN**, **Subject DN**, **Validity Period** and **Extended Key Usage**.

- **Status:** Shows if the status of the client certificate is valid or invalid.
  - Valid means the client certificate is correctly stored and set.
  - **Invalid** means the client certificate is not correctly stored and set.

Possible causes of **Invalid** are the following:

- When **Use a key pair from a CA** is selected and the private key password included in the client certificate is not specified correctly
- When Use a key pair from a CA is selected and the private key password is specified in spite of the fact that the key pair in the client certificate is not encrypted.
- When **Use a key pair from a CA** is selected and the key pair is not included in the client certificate.
- When Use the camera's built-in key pair is selected and the client certificate issued corresponding to Export certificate request is not imported in the camera.

# Note

When the client certificate to be imported is of PKCS#12 format and the private key password is not set correctly, "<Put correct private key password>" is displayed in the boxes of **Issuer DN**, **Subject DN**, **Validity Period** and **Extended Key Usage**. Specify the correct private key password to confirm the information of the certificate.

# To delete the client certificate

Click **Delete**, and the client certificate stored in the camera will be deleted.

# Private key password

Type the password for the private key information included in the client certificate using up to 50 characters. This text box is active only when **TLS mode** is set to **Use a key pair from a CA**. Leave the text box blank if the private key information included in the client certificate is not encrypted. If no private key password is set in the camera, the text box is active to allow entering of a password. If a private key password is already set, it is displayed with turned letters.

# Reset

To change the private key password, click this button. The current password is cleared and the password text box is active to allow a new password entry.

# Note

Click **Cancel** at the bottom of the menu if you want to cancel changing the private key password after clicking **Reset**. Doing so restores the other setting items in the Client certificate tab to the previous settings.

# Export certificate request

Exports the certificate request according to the key pair built in the camera.

To export, enter the items required for the certificate request and click **Export**.

Exporting is possible when **TLS mode** is set to **Use the** camera's built-in key pair.

# Note

If you click **Export** when all the setting items in **Export** certificate request are blank, the certificate request is exported with "localhost" specified in **Common name**.

- **Country name:** Select the country name from the dropdown list.
- **State or Province name:** Type the state or province name using up to 128 alphanumeric characters and symbols.
- **Locality name:** Type the locality name using up to 128 alphanumeric characters and symbols.
- **Organization name:** Type the organization name using up to 64 alphanumeric characters and symbols.
- **Organization unit name:** Type the organization unit name using up to 64 alphanumeric characters and symbols.
- **Common name:** Type the organization name using up to 64 alphanumeric characters and symbols.
- **Email address:** Type the e-mail address using up to 64 alphanumeric characters and symbols.

# Notes

- / (slash), = (equal sign) and , (comma) cannot be used as symbols.
- The total number of characters in **State or Province** name, Locality name, Organization name, Organization unit name, Common name and Email address should be as follows:

When **Country name** is selected: 218 characters or less

When **Country name** is not selected: 220 characters or less

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# CA certificate Tab

You can import a trusted CA certificate (server certificate or route certificate) to the camera. Up to four certificates from trusted CAs can be imported to the camera. Only the PEM format is supported.

Twucted CA contificate 1		
Trusted CA certificate 1	ISSUER DIN	CN=WIN2003CA,DC=localnetwork,DC=net
	Subject DN	CN=WIN2003CA,DC=localnetowrk,DC=net
	Validity Period	2006-12-10 - 2007-12-10
		<none></none>
	Delete	
	Import	Browse Submit
Trusted CA certificate 2		
	Subject DN	
	Validity Period	
	Extended Key Usage	
	Delete	·
	Import	Browco
	impore	Browse
Trusted CA certificate 3		
	Delete	
	Import	Browse Submit
Trusted CA certificate 4	Issuer DN	
	Subject DN	
	Validity Period	
	Extended Key Usage	
	Delete	· · · · · · · · · · · · · · · · · · ·
	and the We	Submit
	Import	Browse

# To import the CA certificate

Click **Browse...** to select the CA certificate to be imported.

Then click **Submit**, and the selected file will be imported to the camera.

# Note

Import process becomes invalid if the selected file is not a CA certificate.

# To display the information of the CA certificate

When the CA certificate has been saved in the camera correctly, its information appears on **Issuer DN**, **Subject DN**, **Validity Period** and **Extended Key Usage**.

# To delete the CA certificate

Click **Delete**, and the CA certificate stored in the camera will be deleted.

# Setting the 802.1X authentication function — Example of Windows Server 2003

This section explains how to configure the authentication server and CA using Microsoft Windows Server 2003.

# Note

As this section describes authentication based on the user interface in English on Windows Server 2003, the UI terminology and page configuration may be different depending on the version of the Operating System or Service Pack and patch update status.

# **Before setting**

Perform the following settings before configuring an 802.1X network.

# Active Directory (domain controller)

The following setting example is based on the assumption that the Active Directory has been configured.

# Windows IAS configuration

To add the IAS (Internet Authentication Service), perform the following steps:

- 1 Configure Remote access/VPN server in Manage Your Server of Windows Server 2003.
- 2 Open Add or Remove Programs from Control Panel of Windows menu.
- **3** Install Internet Authentication Service in Add/ Remove Windows Components.

# **CA** configuration

To configure the CA, perform the following steps:

- 1 Open Add or Remove Programs from Control Panel of Windows menu.
- **2** Select Add/Remove Windows Components.
- **3** Add Certificate Services in the Component menu.
- **4** Select **Enterprise root CA** on **CA Type**, and proceed to next.
- **5** Type the name of CA on **Common Name for this CA**, and configure the CA.

# Creating a security group for Active Directory

- **1** Open Active Directory Users and Computers from Administrative Tools of Windows menu.
- 2 Select Users of the domain with which you want to perform 802.1X connection.
- **3** Select New from the context menu, then select Group and configure the group for 802.1X connection. For example, the group "Wired\_802.1X\_Group" is assumed for explanation purposes.

# Configuring the Internet Authentication Service

- 1 Open Internet Authentication Service from Administrative Tools of Windows menu.
- 2 Click **Register Server in Active Directory** on the operation menu.
- **3** Read the displayed precautions carefully and click **OK** to accept them.

Then, continue to configure the EAP-TLS policy.

- 4 Select **Remote Access Policy** and right-click.
- 5 Select New from the context menu, and select Remote Access Policy to open the "New Remote Access Policy Wizard."
- 6 Select Set up a custom policy.
- **7** Set the following items:

**Policy name:** Type "Allow 802.1X Access" as an example.

**Policy conditions:** Click **Add** and add the following items:

 NAS Port-Type: Ethernet, Wireless-IEEE802.11, Wireless-Other and Virtual (VPN)

- Windows-Groups: Wired\_802.1X\_Group **Permissions:** Select **Grant remote access** 

permission.

# **Edit Profile:**

- Dial-in Constraints tab: Specify the session time out period during which the client is allowed to be connected, as required.
- Authentication tab: Delete checks from all the boxes. Click EAP Method and add Smart Card or other certificates.

Then, continue to configure the RADIUS client.

- **8** Select **RADIUS Clients** and right-click.
- **9** Select New RADIUS Client from the context menu.
- 10 Set the following items: Friendly name: Type "authenticator" as an example.
  Client address (IP or DNS): IP address of the authenticator
  Client-Vender: RADIUS Standard
  Shared secret: Specify the shared secret to be set in the authenticator.

# Adding a user

- **1** Open Active Directory Users and Computers from Administrative Tools of Windows menu.
- 2 Select Users of the domain with which you want to add a user and right-click.
- **3** Select New from the context menu, then select User.
- Set the following items to configure a new user: For example, the log-on user name "1XClient" is assumed for explanation purposes.
   First name: 1XClient User logon name: 1XClient@<domain name> Password: Specify a password. Then select Password never expires in account options.
- **5** Select the user to be added and right-click.
- **6** Select **Properties** from the context menu.
- Set the following items:
   Dial-in tab: Select Allow access in Remote
   Access Permission (Dial-in or VPN)
   Member Of tab: Add "Wired\_802.1X\_Group."

The preparations for configuring a 802.1X network are now completed.

Proceed to issue the certificate to be imported to the camera.

# Issuing the CA certificate

Prepare a Windows client PC (called "client PC" hereafter) to temporarily store the certificate, and configure so that the client PC and Windows Server 2003 computer can be connected through the network.

- Start Internet Explorer on the client PC.
- 2 Type the CA's URL in the address bar, and click Go To.

The CA's URL is normally as follows:

http://<address of the CA>/CertSrv/

The "Microsoft Certificate Services" page opens.

Microsoft Certificate Services -	WEN2003CA			Hor
Welcome				
Use this Web site to reques your identity to people you o certificate you request, perfe	t a certificate for your Web br ommunicate with over the We orm other security tasks.	owser, e-mail client, or other b, sign and encrypt message	program. By using a certifies, and, depending upon th	cate, you can ve e type of
You can also use this Web s (CRL), or to view the status	ite to download a certificate of a pending request.	authority (CA) certificate, cert	ificate chain, or certificate i	revocation list
For more information about	Certificate Services, see <u>Ce</u>	tificate Services Documenta	tion.	
Request a certificate View the status of a pend Download a CA certificat	ling certificate request e. certificate chain, or CRL			

# Note

If the Microsoft Certificate Service page does not appear using the URL above, check the following:

- Is the service of Web site enabled on Internet Information Service (IIS)?
- Is Certificate Services enabled?
- Does the firewall or antivirus software setting on the client PC block connection?
- Are the network configuration and Internet Explorer setting on the client PC correct?
- **3** When Internet Explorer prompts entering the log-in user and password, type the user name as follows. Example: when the user name is "1XClient" and the domain name "localnetwork.net"

1XC lient @local network.net

- 4 Click Download a CA certificate, certificate chain, or CRL.
- 5 Select Base 64 in Encoding method and click Download CA certificate. The "File Download" dialog opens.
- **6** Specify the file storage location and save the CA certificate.

After saving the CA certificate, import it to the camera. Then the CA certificate import procedure is completed.

# Downloading the client certificate

The procedure of client certificate download differs depending on the TLS mode of the camera. This section explains the procedures for each mode. For the TLS mode, see **TLS mode** in the Client certificate tab on page 55.

# Administrating the Camera

### Type the log-in user name and password correctly, File to expo

and the "Microsoft Certificate Services" page opens.

When "Use a key pair from a CA" is selected

The CA's URL is normally as follows:

http://<address of the CA>/CertSrv/

CA's URL in the address bar.

Start Internet Explorer on the client PC and type the

4 Click Request a certificate, advanced certificate request and Create and submit a request to this CA in sequence.

# **5** Set the following items.

Click Go To.

1

2

3

# Microard Certificate Request Certificate Templer: Or Option: OC Create new key set Use existing key set OC State new key set Use existing key set OC State new key set Use existing key set OC State new key set OUtre existing key set OC Match new key set OUtre existing key set Visit Set Match new key set Outre existing key set Outre existing key set Visit Set Match new key set Outre existing key set Outre existing key set Deport keys to the Outre existing key set Deport keys to the Outre existing key set Deport keys to the local compatic cristics to no State active to an administration to genome or use a key in the local matchine due to an administration to genome or use a key in the local matchine due to an administration to genome or use a key in the local matchine due to an administration to genome exist. Researd Formut State Pender to the State Attributes State Pender to an low State State State

# Certificate Template: User

Key Options: Create new key set

- CSP: Microsoft Enhanced Cryptographic Provider v1.0
- Key Size: 1024
- Check Mark keys as exportable.
- Additional Options: Select SHA-1 for Hash Algorithm.
- 6 Click Submit.

Message "The certificate you requested was issued to you." appears.

- 7 Click **Install this certificate.** to install the certificate in the certificate store on the client PC.
- 8 Click Internet Options, Content and Certificates of Internet Explorer in sequence. The new client certificate is displayed in the Personal tab.

**9** Select the installed certificate and click **Export...**. The "Certificate Export Wizard" opens.

# **10** Click **Next** and select as follows.

Do you want to export the private key with the certificate?: Select Yes, export the private key. Select the format you want to use: Select

# Personal Information Exchange – PKCS#12(PFX).

**Password:** Specify the private key password. **File to export:** Specify the name of the file to be exported.

The certificate is now exported. Import the exported file to the camera as the camera's client certificate. For details, see "To import the client certificate" in the Client certificate tab on page 55.

# When "Use the camera's built-in key pair" is selected

To use this mode, first download the certificate request from the camera.

For details, see "To import the client certificate" in the Client certificate tab on page 55.

1 Start Internet Explorer on the client PC and type the CA's URL in the address bar. The CA's URL is normally as follows:

http://<address of the CA>/CertSrv/

- 2 Click Go To.
- **3** Type the log-in user name and password correctly, and the "Microsoft Certificate Services" page opens.
- 4 Click Request a certificate, advanced certificate request and Submit a certificate request by using a base-64-encoded CMC or PKCS #10 file, or submit a renewal request by using a base-64-encoded PKCS #7 file in sequence. The "Submit a Certificate Request or Renewal

Request" page opens.

**5** Paste the contents of the certificate request exported from the camera in the **Saved Request** text box.

Submit a Certificate Request or Renewal Request To submit a sarved request to the CA, paste a base-64-encoded CMC or PKCS #10 certificate request or PKCS #7 renewal equests by encoded market and source (such as a Neo server) in the Sarved Request box. Served Request To Submit a Comparison of the CA, paste a base-64-encoded MA Sarved Request box. The Sarved Request of the CA, paste a base-64-encoded MA Sarved Request box. The Sarved Request of the CA, paste a base-64-encoded MA Sarved Request of the Sarved Request box. The Sarved Request of the CA, paste a base-64-encoded MA Sarved Request of the Sarved Request box. The Sarved Request of the CA, paste a base-64-encoded MA Sarved Request of the Sarved Request box. The Sarved Request of the Sarved Request of the Sarved Request of the Sarved Request of the CA, paste a base-64-encoded MA Sarved Request of the Sarved Reques	Microsoft Certific	ate Senices WEN2003CA
Control to control to the CA, paste a base-64-encoded CMC or PKCS #10 certificate request or PKCS #7 renewal equest generated by an external source (such as a Web server) in the Saved Request box. Saved Request Indicate Temporal Control to the CA paste a base-64-encoded CMC or PKCS #10 certificate request or PKCS #7 renewal to the Case of t	Submit a Carti	ificate Demuest or Denewal Demuest
To submit a saved request to the CA, paste a base 64-encoded CMC or PKCS #10 certificate request or PKCS #7 reneval request generated by an external source (such as a Veb server) in the Saved Request box. Saved Request box.	Submit a Certi	incate Request of Renewal Request
Saved Request Base & Adopta Mitphysics GovGNACITY AdobpsAke Try GTNe 1 (A Base & Adopta Adopta AdobpsAke Try GTNe 1 (A Base & Base	To submit a sav request genera	red request to the CA, paste a base-64-encoded CMC or PKCS #10 certificate request or PKCS #7 renewal ted by an external source (such as a Web server) in the Saved Request box.
Augua Nampegena, Loopena Loop	Saved Request:	
Atributes	Base-64-encoded certificate request (CMC or PKCS #10 or PKCS #7): Certificate Temp	Alkagaa Dangbagabati Golordia Augra Auka Augra Aray (/ 1784 a n per la antise vite Consolia a La Augra Auka antise Tar 7 Par Jan Maana 
(Submit >	Attributes:	δ. 2.
		Submit >

6 Set Certificate Template to User and click Submit.

Message "The certificate you requested was issued to you." appears.

7 Select Base 64 encoded and click Download certificate .

The certificate is now saved. Import the saved file to the camera as the camera's client certificate. For details, see "To import the client certificate" in the Client certificate tab on page 55.

# Note

The certificate saved in the procedure above has the same file name as the default file name for saving the CA certificate (certnew.cer).

Be careful not to overwrite the file on the client PC.

# Setting the User — User Menu

When you click User in the Administrator menu, the User menu appears.

Use this menu to set the user names and passwords of Administrator and up to 9 kinds of users (User 1 to User 9), and the access right of each user.



# Administrator

Specify User name, Password and Re-type password.

# User 1 to 9

Specify User name, Password, Re-type password, FTP, Audio and Viewer mode for each user ID.

# User name

Type a user name between 5 and 16 characters.

### Password

Type a password between 5 and 16 characters.

### **Re-type password**

To confirm the password, retype the password that you typed in the **Password** box.

# FTP

Set whether this user is allowed to log in to an FTP server or not. Check the box if the user is allowed to log in to an FTP server.

# Audio

Select whether audio output to a speaker connected to the line output jack of the camera is allowed or not by using the SNC audio upload tool stored in the supplied CD-ROM. Check this box to allow audio output.

Administrating the Camera

# Setting the Security — Security Menu | 61

# Note

To output audio using the SNC audio upload tool, set **Audio upload** to **Enable** in the Common tab of the Camera menu (page 42).

# Viewer mode

When the user is authenticated for logging in the main viewer, select the viewer mode to be displayed after authentication.

**Full:** The user can operate all functions in this mode. **Pan/Tilt:** In addition to the **Light** mode, the user can operate pan/tilt/zoom.

- **Preset position:** In addition to the **Light** mode, the user can perform the camera's preset position settings.
- **Light:** In addition to the **View** mode, the user can select the image size of the main viewer, control digital zoom, and capture a still image.
- View: The user can only monitor the camera image.

For the functions available for each viewer mode, see "Administrator and User" on page 19.

# Viewer authentication

Set whether the user is authenticated or not when the main viewer is displayed.

- **On:** The main viewer is displayed in accordance with the viewer mode of the authenticated user.
- Off: Select the viewer mode of the main viewer which is displayed without authentication from Full, Pan/Tilt, Preset position, Light or View.

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Setting the Security — Security Menu

When you click **Security** in the Administrator menu, the Security menu appears.

Use this menu to limit the computers that can access the camera.

Security function • On • Off							
Default policy 🛛 Deny 💌							
Network address/Subnet 1	0.0.0.0	/ 8	Allow 🚩				
Network address/Subnet 2	0.0.0.0	/ 8	Allow 🛩				
Network address/Subnet 3	0.0.0.0	/ 8	Allow 🖌				
Network address/Subnet 4	0.0.0.0	/ 8	Allow 🔽				
Network address/Subnet 5	0.0.0.0	/ 8	Allow 🛩				
Network address/Subnet 6	0.0.0.0	/ 8	Allow 🔽				
Network address/Subnet 7	0.0.0.0	/ 8	Allow 🛩				
Network address/Subnet 8	0.0.0.0	/ 8	Allow 🛩				
Network address/Subnet 9	0.0.0.0	/ 8	Allow 🔽				
Network address/Subnet 10	0.0.0.0	/ 8	Allow 🛩				
OK	Cancel						

# **Security function**

To activate the security function, select **On**.

# **Default policy**

Select the basic policy of the limit from **Allow** and **Deny** for the computers specified in the Network address/ Subnet 1 to Network address/Subnet 10 menus below.

# Network address/Subnet 1 to Network address/Subnet 10

Type the network addresses and subnet mask values that you want to allow or deny access to the camera. You can specify up to 10 network addresses and subnet mask values. For a subnet mask, type 8 to 32. Select **Allow** or **Deny** from the drop-down list on the right for each network address/subnet mask .

# Tip

The subnet mask value represents the bit number from the left of the network address.

For example, the subnet mask value for "255.255.255.0" is 24.

If you set **192.168.0.0/24** and **Allow**, you can allow access from computers having an IP address between "192.168.0.0" and "192.168.0.255".

### Note

You can access the camera even from a computer having an IP address whose access right is set to **Deny**, if you enter the user name and password set for the **Administrator** boxes in the User menu.

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Saving the Camera Position and Action — Preset position Menu

When you click **Preset position** in the Administrator menu, the Preset position menu appears. Use this menu to save camera's pan, tilt and zoom positions and set tours (programmed action of the camera).

The Preset position menu consists of 2 tabs: **Position** and **Tour**.

# Position Tab — Saving pan/tilt/ zoom position

You can set up to 16 camera positions (pan, tilt and zoom positions).

Home position setting	Set
Preset	v. Name ▼ Set
Position at alarm	nsor input 1 (S1) none 🗸 Insor input 2 (S2) none 🗸 Dject detection (OD) none 🖌 Defection
Preset position table	
No. Name	Alarm
N0.1	Preset call Clear
No.2	Preset call Clear
No.3	Preset call Clear
No.4	Preset call Clear
No.5	Preset call Clear
No.6	Preset call Clear
No.7	Preset call Clear
No.8	Preset call Clear
No.9	Preset call Clear
No.10	Preset call Clear
No.11	Preset call Clear
No.12	Preset call Clear
No.13	Preset call Clear
No.14	Preset call Clear
No.15	Preset call Clear

# Home position setting

Set the current camera position as the home position.

### Set

Click to save the current pan, tilt and zoom positions as the home position. To move the camera to the home position, click  $\bigcirc$  in the control panel (page 24).

### Reset

Click to reset the home position to the factory-set position.

# Preset

Configure and save preset positions.

# ||| Administrating the Camera

Select a preset number from  $1 \mbox{ to } 16$  from the drop-down list.

# Name

Type the preset position name of the selected preset number using up to 32 characters.

# Note

If you intend to display the preset position name as an overlay, please use single-byte alphanumeric characters only.

# Set

Click to save the current camera position to the selected preset number.

To save a preset position, operate as follows:

- **1** Move the camera to the position to be saved while you are checking the image with the main viewer.
- **2** Select a preset number for saving, and type the preset position name.
- **3** Click the **Set** button. The camera position is saved.

# Position at alarm

The camera can synchronize the preset position with Sensor input 1 or 2 or with the object detection function. If an alarm is detected by the sensor input or the object detection function, the camera automatically moves to the corresponding preset position.

If you do not want to synchronize with any preset number, select **none**.

# Sensor input 1 (S1)

Select a preset position to synchronize with the alarm from Sensor input 1.

# Sensor input 2 (S2)

Select a preset position to synchronize with the alarm from Sensor input 2.

# **Object detection (OD)**

Select a preset position to synchronize with the alarm from the object detection.

Click **Detection**, and the Object detection menu is displayed to allow you to set the object detection function (page 81).

### Note

In the case where the synchronized preset position is specified, the alarm event that happens when the camera moves to the preset position will be invalid.

# Preset position table

Lists the preset positions and alarms assigned for each position currently saved in the camera. You can move the camera to the preset position by clicking **Preset call**, or delete the preset position data by clicking **Clear**.

# No.

Shows the preset number.

# Name

Shows the name of the preset position assigned to each preset number.

### Alarm

Shows the alarm(s) synchronized with each preset position. **S1**, **S2** and **OD** represent Sensor input 1, Sensor input 2 and Object detection respectively.

### Preset call

Click to move the camera to the preset position.

# Clear

Click to delete the preset position data.

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Note

The **OK/Cancel** buttons are effective for the **Position at Alarm** setting in this tab.

# Tour Tab — Setting a tour

Up to 16 positions can be programmed, and the camera moves to the programmed positions sequentially (Tour). Up to five programs can be set as Tours A to E.

Tour ● On ● Off	^
Resume time on inactivity o On 5 sec. (5 to 600 sec.) • Off	111
Tour A O On ● Off	
Effective period • Always • Schedule Schedule	
Stay time <mark>10</mark> sec. (1 to 3600 sec.)	
Speed 1 💌	
Sequence	
No. I Preset position 1	
Up	
Down	
Delet	
No.1 Preset position 1 💙 Add	~
OK Cancel	

# Tour

Select **On** to enable the tour function.

# **Resume time on inactivity**

This item becomes active when **Tour** is set to **On**. With this item, you can select whether you restart or stop the tour after it has stopped by manual pan, tilt or zoom operation or by camera movement to the preset position triggered by an alarm.

**On:** Specify the wait time before the tour restarts, between 5 and 600 seconds. The tour restarts automatically after the specified time has elapsed.

Off: The tour does not restart.

# Tour A to Tour E

Configure Tour A to Tour E respectively. Each tour setting consists of 5 items: **On/Off, Effective period, Stay time, Speed** and **Sequence**.

**On:** The tour operates. **Off:** The tour does not operate.

# Effective period

Select the period during which the tour in activated.

Always: The tour can be activated any time.

**Schedule:** The tour is activated according to the schedule you have set.

Click **Schedule**, and the menu for the effective period is displayed. ("Setting the Schedule — Schedule Menu" on page 79.)

# Note

You cannot set tours if the effective periods overlap each other.

# Stay time

Type a period of time during which the camera is to stay at each preset position, between **1** and **3600** seconds.

# Speed

Select the speed of camera movement between 1 and 23, or **Fastest** from the drop-down list. The camera moves faster with a higher number setting. The fastest speed is obtained with **Fastest**.

# Sequence

Set the sequence of the tour.

The preset positions saved using the Position tab are displayed in the drop-down list at the bottom. Select the preset position from the drop-down list, then click **Add**. The selected preset position is added in the **Sequence** list. Repeat this procedure to specify the preset positions in sequence. If you specified an unnecessary preset position, click to select it in the list and click then **Delete**.

To change the order in the list, click to select the preset position and then click **Up** or **Down**.

# Note

The tour cannot be set to **On** if no preset position is added in the **Sequence** list.

# **OK/Cancel**

# Sending an Image via Email — e-Mail (SMTP) Menu

When you click **e-Mail (SMTP)** in the Administrator menu, the e-Mail (SMTP) menu appears.

Using e-Mail (SMTP) function, you can send an e-mail with attached image file that has been shot linked with an external sensor input or with the built-in object detection function. The image file can also be sent periodically.

The e-Mail (SMTP) menu consists of three tabs: Common, Alarm sending and Periodical sending.

# Common Tab — Setting the e-Mail (SMTP) Function



# e-Mail (SMTP)

Select **On** when you use the e-Mail (SMTP) function.

# Notes

- You cannot send an audio file by using the e-mail sending function.
- The frame rate and operability on the main viewer may be reduced while a file is being transmitted by the e-Mail (SMTP) function.

# SMTP server name

Type the SMTP server name using up to 64 characters, or the IP address of the SMTP server.

# Authentication

Select the authentication required when you send an e-mail.

**Off:** Select if no authentication is required when an email is sent.

- On: Select if authentication is required when an e-mail is sent. Select one of the authentication methods from the following and specify the POP server name, User name and Password as required.
  SMTP: Select when SMTP authentication is required.
  - **POP before SMTP:** Select when POP before SMTP authentication is required.

# Note

When you set **Authentication** to **On**, be sure to select either or both **SMTP** or/and **POP before SMTP**.

# **POP** server name

It is necessary when **POP before SMTP** is selected for **Authentication**.

Type the POP (receiving mail) server name using up to 64 characters, or type the IP address of the POP server. This setting is necessary when the SMTP server that sends e-mails performs authentication using the POP user account.

# User name, Password

Type the user name and password of the user who owns the mail account using up to 64 characters. This setting is necessary when the SMTP server that sends e-mails performs authentication.

# **Recipient e-mail address**

Type the recipient e-mail address using up to 64 characters.

You can specify up to three recipient e-mail addresses.

# Administrator e-mail address

Type the Administrator e-mail address using up to 64 characters.

This address is used for reply e-mails and sending system messages from the mail server.

# Subject

Type the subject/title of the e-mail using up to 64 characters.

When **Alarm sending** of the Alarm sending tab is set to **On**, an e-mail sent in response to the alarm detection will indicate the type of alarm in the subject. **(S1)** is added for sensor input 1 detection, **(S2)** is added for sensor input 2 detection, **(MD)** is added for moving object detection and **(UD)** is added for unattended object detection.

# Message

Type the text of the e-mail using up to 384 characters. (A line break is equivalent to 2 characters.)

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Alarm sending Tab — Setting the email sending mode when detecting the alarm

Set to send an e-mail linked with alarm detection by the external sensor input or by the built-in object detection function.



# Alarm sending

Select **On** to set sending an e-mail linked with alarm detection.

# File attachment

Set whether an image file (JPEG file) is to be attached to the e-mail or not.

When **On** is selected, the image file made using the settings below is attached. When **Off** is selected, only the message is sent.

# Image file name

Type the file name you want to assign to the image to be attached to an e-mail. You can use up to 10 alphanumeric characters, - (hyphen) and \_ (underscore) for naming.

# Suffix

Select a suffix to be added to the file name.

**None:** No suffix is added. The image file name is assigned to the image to be sent via e-mail.

**Date & time:** The date & time suffix is added to the image file name.

The date/time suffix consists of lower two-digits of the year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits), second (2 digits), and consecutive number (2 digits), thus adding 14digit number to the image file name.

Sequence number: A consecutive number of 10 digits between 0000000001 and 4294967295 and two fixed digits 00 are added to the image file name.

# Sequence number clear

Click Clear to reset the Sequence number suffix to 1.

# Alarm

Select the alarm to be linked with e-mail notification.

- **Sensor input 1:** The external sensor that is connected to sensor input1 of the camera I/O port.
- **Sensor input 2:** The external sensor that is connected to sensor input 2 of the camera I/O port.
- **Object detection:** The alarm detected by the object detection function.

Click **Detection**, and the Object detection menu is displayed to allow you to set the object detection function (page 81).

# Note

In the case that the synchronized preset position is specified in **Position at alarm** in the Preset position menu, an alarm event that happens when the camera moves to the preset position will be invalid.

# Effective period

Set the period during which the alarm detection is effective.

**Always:** The alarm detection is always effective. **Schedule:** You can specify the period during which the alarm detection is effective.

Click **Schedule** and the menu for the effective period is displayed. ("Setting the Schedule — Schedule Menu" on page 79)

# **OK/Cancel**

# Periodical sending Tab — Setting the periodical e-mail sending mode

You can set to send e-mails periodically.



# Periodical sending

Select **On** when you want to use periodical e-mail sending.

# Image file name

Type the file name of the image attached to the e-mail using up to 10 alphanumeric characters, - (hyphen) and \_ (under score).

The actual image file name will be the specified image file name with a suffix and the extension .jpg.

# Suffix

Select a suffix to be added to the file name used when the e-mail is sent.

**None:** The name of the sent file will be the image file name.

**Date & time:** The date & time suffix is added to the image file name.

The date & time suffix consists of lower two-digits of the year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits) and second (2 digits), and consecutive number (2 digits), thus adding a 14-digit number to the image file name.

**Sequence number:** A consecutive number of 10 digits between 0000000001 and 4294967295 and two fixed digits 00 are added to the image file name.

# Sequence number clear

Click **Clear** to reset the **Sequence number** suffix to 1.

# Interval

Type the interval at which you want to send an e-mail periodically. You can set the hour (H) and minutes (M) between 30 minutes and 24 hours (one day).

# Effective period

Set the period during which periodical sending will be effective.

Always: Periodical sending is always effective. Schedule: You can specify the period during which periodical sending is effective.

Click **Schedule** and the menu for the effective period is displayed. ("Setting the Schedule — Schedule Menu" on page 79)

# **OK/Cancel**

# Sending Images to FTP Server

# — FTP client Menu

When you click **FTP client** in the Administrator menu, the FTP client menu appears.

Use this menu to set up for capturing and sending still images to an FTP server. Using FTP client function, you can send an image and audio file that has been shot and recorded linked with the external sensor input or with the built-in object detection function to an FTP server. The image file can also be sent periodically.

The FTP client menu consists of three tabs: **Common**, **Alarm sending** and **Periodical sending**.

# Common Tab — Setting the FTP client function



# **FTP client function**

To activate the FTP client function, select **On**.

# Note

The frame rate and operability on the main viewer may be reduced while a file is being transmitted by the FTP client function.

# **FTP server name**

Type either the FTP server name to upload still images using up to 64 characters, or the IP address of the FTP server.

# User name

Type the user name for the FTP server using up to 64 characters.

# Password

Type the password for the FTP server using up to 64 characters.

# **Re-type password**

To confirm the password, type the same characters as you typed in the **Password** box.

# **Passive mode**

Set whether you use the passive mode of FTP server or not when connecting to the FTP server. Select **On** to connect to the FTP server using the passive mode.

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Alarm sending Tab — Setting the FTP client action when detecting the alarm

Set to forward an image and audio file to the specified FTP server linked with alarm detection by the external sensor input or by the built-in object detection function.

Remote path	
Image file name	
Suffix	Date & time     Sequence number
Alarm	Sequence number dear <u>Clear</u> Sensor input 1 Sensor input 2 Object detection <u>Detection</u>
Effective period	Always     Schedule Schedule
Alarm buffer	Use alarm buffer Alam buffer A still image is recorded when H.264 is selected for video codec.

# Alarm sending

Select **On** to send the image and audio file to the FTP server linked with alarm detection.

# **Remote path**

Type the path to the destination using up to 64 characters.

# Image file name

Type the file name you want to assign to the images when sending to the FTP server. You can use up to 10 alphanumeric characters, - (hyphen) and \_ (underscore) for naming.

# Administrating the Camera

# Suffix

Select a suffix to be added to the file name.

**Date & time:** The date & time suffix is added to the image file name.

The date/time suffix consists of lower two-digits of the year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits) and second (2 digits), and consecutive number (2 digits), thus adding a 14-digit number to the image file name.

Sequence number: A consecutive number of 10 digits between 0000000001 and 4294967295 and an consecutive 2 digits number are added to the image file name.

# Тір

A consecutive number added to **Date & time** and **Sequence number** is used to identify each of multiple files created with consecutive alarm events.

# Sequence number clear

Click **Clear** to reset the **Sequence number** suffix to 1.

# Alarm

Select the alarm to be linked with file forwarding to the FTP server.

- **Sensor input 1:** The external sensor that is connected to sensor input 1 of the camera I/O port.
- **Sensor input 2:** The external sensor that is connected to sensor input 2 of the camera I/O port.
- **Object detection:** The alarm detected by the object detection function.

Click **Detection**, and the Object detection menu is displayed to allow you to set the object detection function (page 81).

# Note

In the case that the synchronized preset position is specified in **Position at alarm** in the Preset position menu, an alarm event that happens when the camera moves to the preset position will be invalid.

# **Effective period**

Set the period during which the alarm detection is effective.

Always: The alarm detection is always effective.

**Schedule:** You can specify the period during which the alarm detection is effective.

Click **Schedule** and the menu for the effective period is displayed. ("Setting the Schedule — Schedule Menu" on page 79)

# Alarm buffer

Select **Use alarm buffer** when you are going to forward the image/audio of before and after alarm detection (prealarm, post-alarm).

If you do not select the alarm buffer, only the image at the moment of the alarm detection is forwarded.

Click **Alarm buffer** to display the Alarm buffer menu. For details, see "Setting the Alarm Buffer — Alarm buffer Menu" on page 80.

# Note

This setting becomes invalid and a still image is recorded if **H.264** is selected in the Video codec tab of the Camera menu.

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Periodical sending Tab — Setting the periodical FTP client activity

You can set to send image files (JPEG files) to an FTP server periodically.



# **Periodical sending**

Select **On** when you want to use periodical sending.

# **Remote path**

Type the remote path using up to 64 characters.

# Image file name

Type the file name of the image sent to the FTP server using up to 10 alphanumeric characters, - (hyphen) and \_ (under score).

The actual image file name will be the specified image file name with a suffix and the extension .jpg.

### Note

You cannot send the audio file using the periodical sending of the FTP client function.

# Suffix

Select a suffix to be added to the file name sent to the FTP server.

- **None:** The name of the sent file will be the image file name.
- **Date & time:** The date & time suffix is added to the image file name.

The date & time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits) and second (2 digits), and consecutive number (2 digits), thus adding a 14-digit number to the image file name.

**Sequence number:** A consecutive number of 10 digits between 0000000001 and 4294967295 and two fixed digits 00 are added to the image file name.

### Sequence number clear

Click **Clear** to reset the **Sequence number** suffix to 1.

# Mode

Select the periodical sending mode.

- **Periodical mode:** An image file is sent periodically according to the specified **Interval** and **Effective period**.
- **Tour mode:** An image file is sent each time the camera is moved to a preset position during the tour.

### Interval

Type the interval at which you want to send images to the FTP server periodically. You can set the hour (H), minutes (M) and seconds (S) between 1 second and 24 hours (one day).

### Note

The actual interval may be longer than the set value, depending on the image size, image quality setting, bit rate and the network environments.

# Effective period

Set the period during which the periodical sending is effective.

Always: The periodical sending is always effective.

**Schedule:** You can specify the period during which the periodical sending is effective.

Click **Schedule** and the menu for the effective period is displayed. ("Setting the Schedule — Schedule Menu" on page 79)

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Recording Images in Memory — Image memory Menu

When you click Image memory in the Administrator menu, the Image memory menu appears.

By using the image memory function, you can record the image and audio file, which has been shot being linked with the external sensor input or with the built-in object detection function, in the built-in memory (about 18 MB), or in the ATA memory card (not supplied) or "Memory Stick" (not supplied) inserted in the camera. The image file can also be recorded periodically. The recorded image and audio files can be found or downloaded to the computer using the FTP server function. (See "Downloading Images from the Camera — FTP server Menu" on page 74.)

The Image memory menu consists of three tabs: **Common, Alarm recording** and **Periodical recording**.

For the verified cards, contact your authorized Sony dealer.

# Notes

- The image and audio files recorded in the built-in memory are deleted when the power of the camera is turned off or the **Selected root directory** setting is changed.
- This camera transmits data to a "Memory Stick" using the serial transmission system, even if the "Memory Stick" supports the parallel transmission system.
- The frame rate and operability on the main viewer may be reduced during image storage.
- Set **Image memory** to **Off** when you remove the ATA memory card or "Memory Stick" from the camera or turn off the power of the camera with the ATA memory card or "Memory Stick" inserted.
- When you remove or insert a card, wait at least 10 seconds.
- Before using an ATA memory card, format it using the computer or using **Format ATA memory card** in the Initialize tab of the System menu (page 40).

# Recording Images in Memory — Image memory Menu | 71

# Common Tab — Setting the image memory function



# Image memory

To use the image memory function, select **On**.

# Selected root directory

Select a memory in which you want to save an image. The current memory space is displayed on the right.

**Built-in memory:** Built-in memory of this camera **ATA memory card:** ATA memory card inserted into the PC card slot of the camera.

**Memory Stick:** "Memory Stick" inserted into the memory stick slot of the camera.

# Notes

- The image and audio files recorded in the built-in memory are deleted when the **Selected root directory** setting is changed.
- When **Selected root directory** is set to an option other than **Built-in memory**, "empty" is displayed in the memory space box and you cannot access the built-in memory.

# Overwrite

Select **On** to overwrite the file or not when there is insufficient memory space to record the image in the built-in memory, ATA memory card or "Memory Stick."

- **On:** Overwrite is enabled and old files will be overwritten in the order of date.
- **Off:** Overwrite is prohibited. No recording will be performed.

# Capacity warning

Select **On** to send a warning mail to the Administrator when the memory space of the built-in memory, ATA memory card or "Memory Stick" is low or the memory is full. Select **Off** if you do not want to send a warning mail.

# Note

When **Overwrite** is set to **On**, a warning mail is not sent to the Administrator.

# SMTP server name

Type the name of the SMTP server for sending an email, using up to 64 characters.

Otherwise type the IP address of the SMTP mail server.

# Authentication

Select the authentication required when you send an e-mail.

- **Off:** Select if no authentication is required when an email is sent.
- **On:** Select if authentication is required when an e-mail is sent.

Select one of the authentication methods from the following and specify the **POP server name**, **User name** and **Password** as required.

**SMTP:** Select when SMTP authentication is required.

**POP before SMTP:** Select when POP before SMTP authentication is required.

# Note

When you set **Authentication** to **On**, be sure to select either or both **SMTP** or/and **POP before SMTP**.

# **POP** server name

# This is necessary when **POP before SMTP** is selected for **Authentication**.

Type a POP (receiving mail) server name using up to 64 characters, or type the IP address of the POP server. This setting is necessary when the SMTP server that sends e-mails performs authentication using the POP user account.

# User name, Password

Type the user name and the password of the user who owns the e-mail account. This setting is necessary when the SMTP server that sends e-mails performs authentication.

# Administrator e-mail address

Type the e-mail address of the recipient of a warning mail (e-mail address of the camera Administrator), using up to 64 characters.

# **OK/Cancel**

# Alarm recording Tab — Setting the Image memory function when detecting the alarm

You can set to record the image and audio file to the memory linked with the external sensor input or with the built-in object detection function.



# Alarm recording

Select **On** to record the image and audio file in the builtin memory, ATA memory card or "Memory Stick," linked with alarm detection.

# Image file name

Type the file name you want to assign to the images to be recorded. You can use up to 10 alphanumeric characters, - (hyphen) and \_ (underscore) for naming.

# Suffix

Select a suffix to be added to the file name.

**Date & time:** The Date & time suffix is added to the image file name.

The Date & time suffix consists of lower two-digits of the year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits), second (2 digits) and consecutive number (2 digits), thus adding a 14digit number to the image file name.

**Sequence number:** A consecutive number of 10 digits between 0000000001 and 4294967295 and an consecutive 2 digits number is added to the image file name.

# Tip

A consecutive number added to **Date & time** and **Sequence number** is used to identify each of the multiple files created with consecutive alarm events.

# Sequence number clear

Click Clear to reset the Sequence number suffix to 1.

# Alarm

Select the alarm to be linked with the recording of image and audio files.

- **Sensor input 1:** The external sensor that is connected to sensor input 1 of the camera I/O port.
- **Sensor input 2:** The external sensor that is connected to sensor input 2 of the camera I/O port.
- **Object detection:** The alarm by the object detection function.

Click **Detection**, and the Object detection menu is displayed to allow you to set the object detection function (page 81).

# Note

In the case that the synchronized preset position is specified in **Position at alarm** in the Preset position menu, the alarm event that happens when the camera moves to the preset position will be invalid.

# **Effective period**

Set the period during which alarm detection is effective.

Always: The alarm detection is always effective.

- **Schedule:** You can specify the period during which alarm detection is effective.
  - Click **Schedule** and the setting menu for the effective period is displayed. ("Setting the Schedule Schedule Menu" on page 79)

# Alarm buffer

Select **Use alarm buffer** when you record the image/ audio of before and after alarm detection (pre-alarm, post-alarm).

If you do not select the alarm buffer, only the image at the moment of the alarm detection is recorded. Click **Alarm buffer** to display the Alarm buffer menu. For details, see "Setting the Alarm Buffer — Alarm buffer Menu" on page 80.

# Note

This setting becomes invalid and a still image is recorded if **H.264** is selected in the Video codec tab of the Camera menu.

# **OK/Cancel**
# Periodical recording Tab — Setting the periodical recording mode

You can set to record the image file (JPEG file) in the built-in memory, ATA memory card or "Memory Stick" periodically.



# **Periodical recording**

Select **On** when you want to use periodical recording.

# Image file name

Type the file name of the image to be recorded to the memory using up to 10 alphanumeric characters, - (hyphen) and \_ (under score).

The actual image file name will be the specified image file name with the a suffix and the extension .jpg.

# Note

You cannot record the audio file using the periodical recording function.

# Suffix

Select a suffix to be added to the file name.

**None:** The recording file name will be the image file name.

**Date & time:** The date & time suffix is added to the image file name.

The date/time suffix consists of lower two-digits of the year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits), second (2 digits), and consecutive number (2 digits), thus adding a 14digit number to the image file name.

**Sequence number:** A consecutive number of 10 digits between 0000000001 and 4294967295 and two fixed digits 00 are added to the image file name.

# Sequence number clear

Click **Clear** to reset the **Sequence number** suffix to 1.

# Mode

Select the periodical recording mode.

- **Periodical mode:** An image file is recorded periodically according to the specified **Interval** and **Effective period**.
- **Tour mode:** An image file is recorded when the camera is moved to each preset position during the tour.

# Interval

Type the interval at which you want to record an image in the memory periodically. You can set the hour (H), minutes (M) and seconds (S) between 1 second and 24 hours (one day).

# Note

The actual interval may be longer than the set value depending on the image size, image quality, bit rate, or recording media.

# Effective period

Set the period during which the periodical recording is effective.

Always: The periodical recording is always effective.

**Schedule:** You can specify the period during which the periodical recording is effective.

Click **Schedule** and the menu for the effective period is displayed. ("Setting the Schedule — Schedule Menu" on page 79)

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Folder structure of image memory

When the image memory function is used, the images are recorded with the following folder structure.



A represents a folder created automatically. The Date\_No. folder has a 11-digit name consisting of the last two digits of the year (2 digits), month (2 digits), day (2 digits), underscore and sequence number (4 digits).

In the built-in memory, one folder automatically created can store image files of about 1 MB. If the size of the

image files exceeds that value, a new folder is created automatically to continue recording.

#### Note

In the ATA memory card or "Memory Stick," the folder size varies depending on the capacity of the ATA memory card or "Memory Stick."

#### About the extension of a file

A file to be recorded/sent using the image memory function or the FTP client function has one of the following three extensions depending on the video mode setting and the recording/sending settings of the camera.

- .m4f: A file of this type is created when Use alarm buffer is selected in the Alarm recording or Alarm sending tab and MPEG4 is selected on Codec in the Alarm buffer menu. The file may include audio data depending on the microphone setting of the camera.
- .jpf: A file of this type is created when Use alarm buffer is selected in the Alarm recording or Alarm sending tab and JPEG is selected on Codec in the Alarm buffer menu. The file may include audio data depending on the microphone setting of the camera.
- .jpg: A file of this type is created when Use alarm buffer is not selected in the Alarm recording or Alarm sending tab or when a periodical sending or periodical recording is performed.

The SNC video player (page 96) allows playing of ".m4f" and ".jpf" files.

# Downloading Images from the Camera — FTP server Menu

When you click **FTP server** in the Administrator menu, the FTP server menu appears. Use this menu to set up for the FTP server function that finds a specified image and audio file stored in the built-in memory (about 18 MB), or in the ATA memory card (not supplied) or "Memory Stick" (not supplied) inserted in the camera. or downloads a file from the camera.

Selected root directory	<ul> <li>Built-in memory</li> </ul>	Free space : 18830Kbyte
	<ul> <li>ATA memory card</li> </ul>	empty
	Memory Stick	empty

#### **FTP server function**

To activate the FTP server function, select **On**.

#### Selected root directory

Select the memory that contains the file you want to download.

The current memory space is displayed on the right.

- **Built-in memory:** Built-in memory of this camera or downloads a file from the camera
- **ATA memory card:** ATA memory card inserted into the PC card slot of the camera.
- **Memory Stick:** "Memory Stick" inserted into the memory stick slot of the camera.

#### Notes

- When **Selected root directory** is set to an option other than **Built-in memory** in the Common tab of the Image memory menu, "empty" is displayed in the memory space box and you cannot access the built-in memory.
- The frame rate and operability on the main viewer may be reduced when you logged in to the FTP server of this unit using the FTP client software installed in the computer.

See "Buttons common to every menu" on page 33.

# Setting the Alarm Output — Alarm output Menu

When you click Alarm output in the Administrator menu, the Alarm output menu appears.

You can perform setting in this menu to control the alarm output of the I/O port on the rear of the camera linked to the alarm detection, the timer and the Day/ Night function.

The Alarm output menu consists of two tabs: Alarm out 1 and Alarm out 2.

#### Tip

For the connection of peripheral devices to the alarm output of the I/O port, see the supplied Installation Manual.

# Alarm out 1, 2 Tab

Alarm output	to On ● Off
Mode o	Alarm Sensor Input 1 Sensor Input 2 Object detection Detection Alarm duration 10 Sec. (1 to 60 sec.)
•	Effective period  Always Schedule Schedule
•	Day/Night
	OK Cancel

### Alarm output

To activate the alarm output function, select **On**.

### Mode

Select the mode of the alarm output function.

Alarm: Controls alarm output by synchronizing it with an external sensor input or the built-in object detection function.

When Alarm is selected, the items Sensor input 1, Sensor input 2, Object detection, Alarm duration and Effective period become active.

- **Timer:** Controls alarm output using the timer. Click **Schedule** and the menu for the effective period is displayed. ("Setting the Schedule — Schedule Menu" on page 79)
- **Day/Night:** Controls the alarm output linked to the day/ night function.

#### Sensor input 1

Select this option when you link the alarm output to an external sensor that is connected to sensor input 1 of the camera I/O port.

#### Sensor input 2

Select this option when you link the alarm output to an external sensor that is connected to sensor input 2 of the camera I/O port.

#### **Object detection**

Select this option when you link the alarm output to the object detection function.

Click **Detection**, and the Object detection menu is displayed to allow you to set the object detection function (page 81).

#### Note

In the case that the synchronized preset position is specified in **Position at alarm** in the Preset position menu, the alarm event that happens when the camera moves to the preset position will be invalid.

#### Alarm duration

Select the duration for which the alarm output is shortcircuited between 1 and 60 sec.

#### **Effective period**

This item becomes active when **Mode** is set to **Alarm**. Set the period during which the alarm detection is effective.

**Always:** The alarm detection is always effective. **Schedule:** You can specify the period during which alarm detection is effective.

Click **Schedule** and the menu for the effective period is displayed. ("Setting the Schedule — Schedule Menu" on page 79)

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Outputting Audio Linked to Alarm Detection — Voice alert Menu

Click Voice alert in the Administrator menu to display the Voice alert menu.

Use this menu to set the voice alert function to output audio from the line output jack of the camera when an alarm is detected by the sensor input or object detection function.

You can output the audio from the speaker connected to the camera in synchronization with an alarm event triggered by the sensor input or the object detection function.

The Voice alert menu consists of 3 tabs: Voice alert 1, Voice alert 2 and Voice alert 3. You can configure an individual audio file on each tab.

#### Note

Before using the voice alert function, you need to save the audio file to the camera using the SNC audio upload tool stored in the supplied CD-ROM.

For the use of the SNC audio upload tool, see page 91.

# Voice alert 1, 2, 3 Tab



### File

Displays the name of the audio file saved in the camera. "Not uploaded" is displayed dimly if no audio file is saved.

To delete the audio file saved in the camera, click **Delete**.

#### Note

Before deleting the audio file, set Voice alert to Off.

#### Test

When the audio file is saved in the camera, you can check it by playing it back. Click **Play** to play back the audio file once.

#### Voice alert

To use the voice alert function linked with the sensor input or the object detection function, select **On**.

#### Repeat

Select playback repeat time from 1 to 3.

#### Alarm

Select the alarm to be linked with the voice alert function.

**Sensor input 1:** The external sensor that is connected to sensor input 1 of camera I/O port.

**Sensor input 2:** The external sensor that is connected to sensor input 2 of camera I/O port.

**Object detection:** The alarm detected by the object detection function.

Click **Detection**, and the Object detection menu is displayed to allow you to set the object detection function (page 81).

#### Notes

- If voice alert is activated linked with a different alarm event while another voice alert is going on, the first voice alert is canceled and the second one is output.
- If two or three audio files are set to be output simultaneously linked with the same alarm event, the priority is given in the order **Voice alert 1**, **2** and **3**.
- In the case where a preset position is specified in **Position at alarm** in the Preset position menu, the alarm event that happens when the camera moves to the preset position will be invalid.

#### **Effective period**

Set the period during which the alarm detection is effective.

Always: The alarm detection is always effective.

Schedule: You can specify the period during which the alarm detection is effective.

Click **Schedule**, and the menu for the effective period is displayed. ("Setting the Schedule — Schedule Menu" on page 79)

### **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Setting the Operations from the Viewer — Trigger Menu

Click Trigger in the Administrator menu to display the Trigger menu.

In this menu, you will select the activities that can be performed when  $\swarrow$  is clicked on the main viewer.

🔽 e-Mail (SMTP)	e-Mail (SMTP)
FTP dient	FTP client
Image memory	Image memory
🗹 Alarm output 1	<ul> <li>Toggle</li> <li>Timer Duration</li> <li>15 sec. (1 to 300)</li> </ul>
Alarm output 2	● Toggle ● Timer Duration <mark>15</mark> sec. (1 to 300)
🗹 Day/Night	Day/Night
✓ Voice alert 1	File file1
✓ Voice alert 2	File file2
Voice alert 3	File file3
	OK Cancel

# e-Mail (SMTP)

Checking this box allows you to select **e-Mail** from the trigger drop-down list in the main viewer.

By selecting **e-Mail** and clicking **AD**, a still image of the moment you click is captured, and your e-mail with the image file attached is sent to the specified mail address.

When you click **e-Mail (SMTP)**, the **Trigger-e-Mail** (**SMTP)** menu is displayed. You can set the necessary options here. The setting options and setting procedures are the same as those of the e-Mail (SMTP) menu (page 65).



# **FTP client**

Checking this box allows you to select **FTP** from the trigger drop-down list in the main viewer.

By selecting **FTP** and clicking  $\nearrow$ , a still image of the moment you click is captured, and the image file is sent to the FTP server.

When you click **FTP client**, the **Trigger-FTP client** menu is displayed. You can set the necessary options here. The setting options and setting procedures are the same as those of the FTP client menu (page 68).



### Image memory

Checking this box allows you to select **Image memory** from the trigger drop-down list in the main viewer.

By selecting **Image memory** and clicking  $\nearrow$ , a still image of the moment you click is captured, and the image file is recorded in the built-in memory, ATA memory card (not supplied) or "Memory Stick" (not supplied).

For the verified cards, contact your authorized Sony dealer.

When you click **Image memory**, the **Trigger-Image memory** menu is displayed. You can set the necessary options here. The setting options and setting procedures are the same as those of the Image memory menu (page 70).

Selected root directory	<ul> <li>Built-in memory</li> </ul>	Free space : 18830Kbyte	]
	<ul> <li>ATA memory card</li> </ul>	empty	]
	<ul> <li>Memory Stick</li> </ul>	empty	]
Overwrite	● On ● Off		
Capacity warning	● On ● Off		
	SMTP server name		
		• Off	
	SMTP SMTP		
	POP server name		
	User name		-
	Password		-
	Administrator e-mail a	ddress	
Image file name		l -	
Suffix	None		
	<ul> <li>Sequence number</li> </ul>		
		r Clear	

# Alarm output 1, 2

Checking this box allows you to select **Alarm output 1** or **Alarm output 2** from the trigger drop-down list in the main viewer. You can control the alarm output by selecting **Alarm output 1** or **Alarm output 2** and clicking **[1]**.

Select the alarm ouput control mode from **Toggle** or **Timer**.

- **Toggle:** Each time you click **(D)**, On (short circuit) or Off (open) is switched.
- Timer: When you click **(**), the alarm output is switched to On (short circuit), and will automatically switched to Off (open) after the time specified in **Duration** has elapsed.

#### Duration

When **Timer** is selected, specify the time for which the alarm output remains short circuited, from 1 to 300 seconds.

# Day/Night

Checking this box allows you to select **Day/Night** from the trigger drop-down list in the main viewer. You can

Administrating the Camera

control On (night mode) or Off (day mode) of the day/ night function by selecting **Day/Night** and clicking **Day**.

When you click the **Day/Night** button, the **Trigger-Day/ Night** menu is displayed. You can set the necessary options here. The setting options and setting procedures are the same as those in the Day/Night tab of the Camera menu (page 44).



#### Note

The day/night function is invalid when **Day/Night mode** is set to **Disable** or **Auto** in the **Trigger-Day/Night** menu, even if you click **[5]**.

### Voice alert 1, 2, 3

Checking this box allows you to select Voice alert 1, Voice alert 2 or Voice alert 3 from the trigger dropdown list in the main viewer. You can output audio from the audio file saved in the camera by selecting Voice alert 1, 2 or 3 and clicking  $\swarrow$ .

#### File

Displays the name of the audio file saved in the camera. "Not uploaded" is displayed dimly if no audio file is saved.

### **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Setting the Schedule — Schedule Menu

When you click **Schedule** in the Administrator menu, the Schedule menu appears.

The Schedule menu consists of eight tabs.

This is the same menu as the Schedule menu that is displayed when you click **Schedule** to set the **Effective period** in the following menus.

- **Day/Night: Schedule** in the Day/Night tab of the Camera menu
- **Preset position: Schedule** in the Tour tab of the Preset position menu
- e-Mail: Schedule in the Alarm sending or Periodical sending tab of the e-Mail (SMTP) menu
- **FTP: Schedule** in the Alarm sending or Periodical sending tab of the FTP client menu
- Image memory: Schedule in the Alarm recording or Periodical recording tab of the Image memory menu
- Alarm out: Schedule in the Alarm out 1 or Alarm out 2 tab of the Alarm output menu
- Voice alert: Schedule in the Voice alert 1, 2 or 3 tab of the Voice alert menu
- **Refresh: Schedule** in video & PT drive refresh of the Initialize tab of the System menu
- Example: When setting e-Mail (SMTP) (Periodical sending) in the Schedule menu

e-Mail (SMTP) - Ala	arm schedule				^
		ime 🔟 :	00 - End time	24 : 00	
✓	Mon Start	ime 00 :	00 - End time	24 : 00	
✓	Tue Start	ime 🔽 00 :	00 - End time	24 : 00	
✓	Wed Start i	ime 00 :	00 - End time	24 : 00	
✓	Thu Start f	ime 🔽 00 :	00 - End time	24 : 00	
✓	Fri Start f	ime 🔽 00 :	00 - End time	24 : 00	
✓	Sat Start (	ime 🔽 00 :	00 - End time	24 : 00	_
✓	Sun Start (	ime 00 :	00 - End time	24 : 00	
e-Mail (SMTP) - Pe	riodical sche	dule			
		ime 🔟 :	00 - End time	24 : 00	
✓	Mon Start	ime 00 :	00 - End time	24 : 00	
✓	Tue Start f	ime 00 :	00 - End time	24 : 00	
✓	Wed Start (	ime 00 :	00 - End time	24 : 00	
✓	Thu Start f	ime 00 :	00 - End time	24 : 00	
✓	Fri Start f	ime 00 :	00 - End time	24 : 00	
✓	Sat Start 1	ime 00 :	00 - End time	24 : 00	~
		OK	Cancel		

#### Use the same time schedule every day

When this item is checked, the same **Start time** and **End time** are applied to all days. In that case, the **Start time** and **End time** of the day from **Mon** (Monday) to **Sun** (Sunday) cannot be input.

#### Mon (Monday) to Sun (Sunday)

The time period on the right of the checked day is the effective period of the schedule.

#### Start time, End time

Specify the start time and the end time.

#### **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Setting the Alarm Buffer — Alarm buffer Menu

When you click Alarm buffer in the Administrator menu, the Alarm buffer menu appears.

You can set the Pre-alarm image and audio (the image and audio before the alarm detection) and the Post alarm image and audio. These can be set when **Alarm sending** of FTP client menu or **Alarm recording** of Image memory menu is set to **On**, besides when **Use alarm buffer** is selected.

Mode	Dual codec-JPEG priority A still image is recorded when H.264 is selected for video codec.
Codec	• JPEG • MPEG4
Recording capacity	Pre-alarm period sec.
	Post-alarm period sec.
Recoding time	Pre-alarm period 15 sec.
	Post-alarm period 15 sec.
	Reload

#### Mode

Displays the video codec selected in the Video codec tab of the Camera menu.

#### Note

You cannot set the alarm buffer when **H.264** is selected in the Video codec tab of the Camera menu.

#### Codec

Only the currently available codec(s) are active. Select the video codec to be used for the alarm buffer.

#### Note

When **Dual codec** is selected in the Video codec tab of the Camera menu and if you select here a video codec different from the priority video codec specified for **Dual codec**, the bit rate and frame rate for sending/ recording via the alarm buffer may be lower than the set values.

#### Recording capacity

Displays the maximum recording capacity of the alarm buffer in the present camera setting of the video mode, image size, bit rate and frame rate.

- **Pre-alarm period:** Displays the maximum recording capacity of image/audio before alarm detection.
- **Post-alarm period:** Displays the maximum recording capacity of image/audio after alarm detection.

#### **Recording time**

Set the recording time for the Pre-alarm image/audio and Post alarm image/audio.

- **Pre-alarm period:** Type the recording time of the image/audio before alarm detection.
- **Post-alarm period:** Type the recording time of the image/audio after alarm detection.

#### Note

The value of **Recording capacity** differs depending on the image size and image quality settings in the Camera menu.

#### **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Setting the Object Detection Function — Object detection Menu

When you click Object detection in the Administrator menu, the Object detection menu appears. Using this menu, you can set the conditions for

activating the built-in "Moving object detection" and the "Unattended object detection" functions. Moving object detection detects moving objects in the camera image and outputs an alarm. Unattended object detection detects difference between the previously shot background image and the image being shot currently and outputs an alarm when the difference continues recognized for more than the specified period. The Object detection menu consists of three tabs: **Common, Unattended object setting** and **Configuration**.

# What is unattended object detection ?

The unattended object detection function of this unit compares the reference background image with the current image to detect an unattended object. The unit can perform "Abandoned object detection" of an object that did not exist and appears now as an unattended object. The unit can also perform "Removed object detection" of an object that existed before and now has disappeared as an unattended object.

# Abandoned object detection

The camera first stores in memory the background image for reference. If an object that did not exist before appears on the background and stops, the camera detects the object as an unattended object. If the unattended object stays in camera image for more than the specified time, it is marked with a green frame and an alarm linked to unattended object detection is output. you can activate alarm sending of the FTP client function, alarm recording of the image memory function and playback of an audio file in synchronization with the alarm.

#### **Background image**



#### A car appears in the foreground.



After the detection time, the car in the foreground is detected as an unattended object.



## **Removed object detection**

The camera first stores in memory the background image for reference. If an object that existed before moves and disappears, the camera detects the location where the object existed as an unattended object. If there are no changes in the unattended object (location) for more than the specified time, that location is marked with a green frame and an alarm linked to unattended object detection is output. You can activate alarm sending of the FTP client function, alarm recording of the image memory function and playback of an audio file in synchronization with the alarm.

#### **Background image**



The car in the foreground moves out.



#### After the detection time, the location where the car was parked is detected as an unattended object.



#### Notes

- You can view an MPEG4 image only in the main viewer during the setting of the object detection when **Dual codec** is selected in the Video codec tab.
- The object detection function does not operate when **H.264** is selected in the Video codec tab.
- The unattended object detection may not work correctly if the brightness of a scene changes significantly, for example, when you shoot an outdoor scene continuously from day to night.
- Unattended object detection may not work correctly if the image is of flat scene such as a monochrome wall or floor.
- Before actual use, perform an operation test and confirm that the object detection function works correctly.

# When the Object detection menu is displayed for the first time

When you click **Object detection**, "Security Warning" is displayed.

When you click **Yes**, ActiveX control is installed and the Object detection menu is displayed.



#### Notes

• If Automatic configuration is enabled in the Local Area Network (LAN) settings of Internet Explorer, the image may not be displayed. In that case, disable Automatic configuration and set the Proxy server manually. For the setting of the Proxy server, consult your network administrator.

- When you install ActiveX control, you should be logged in to the computer as Administrator.
- When you are using Windows XP Service Pack 2 or later, Windows Vista, or Windows 7, the information bar or "Security Warning" may appear as you click **Object detection**. For details, see "Installing ActiveX Control" in "When using Windows XP Service Pack 2 or later" on page 10, "Installing ActiveX Control" in "When using Windows Vista" on page 12, or "Installing ActiveX Control" in "When using Windows 7" on page 14.

# **Common Tab**

Use this tab to select moving object detection or unattended object detection, and set the conditions for detection while observing a camera image. You can perform the settings for each of up to 16 preset positions and the current position.

This is the same menu as that displayed when you click **Detection** on Alarm sending of the e-Mail (SMTP) menu, or on Alarm recording of the Image memory menu.



Moving object detection setting section

Unattended object detection setting section

#### Mode setting section

#### **PTZ** position

Select whether object detection is performed under the individual conditions for each preset position or always under the same conditions.

- **Current position:** Regardless of the camera position, object detection always works under the same conditions.
- **Preset position:** You can set object detection for each preset position. When **Preset position** is selected, an object will not be detected if the camera is not directed to the preset position.

#### Note

You cannot select **Preset position** if no preset position is stored in the Position tab of the Preset position menu.

#### **Position setting section**

#### Position

Select the preset position you want to set from the dropdown list. The camera automatically moves to the selected preset position.

#### Note

This item is disabled when **PTZ position** is set to **Current position**.

#### Detection

Select either moving object detection or unattended object detection for the selected position.

- **Moving object:** Select when you want to perform moving object detection. When this option is selected, the moving object setting menu appears. See "Setting items for moving object detection" on page 83.
- **Unattended object:** Select when you want to perform unattended object detection. When this option is selected, the unattended object setting menu appears. See "Setting items for unattended object detection" on page 85.

## Setting items for moving object detection

The following setting items appear when **Detection** is set to **Moving object**.

#### Monitor display

Set the active/inactive window while monitoring a moving image.



#### Notes

• The image displayed on the monitor display has low resolution.

• The colors and green frames shown in the monitor display are not displayed on the image files that are sent or recorded linked to the object detection function.

#### Window1 to Window4 check boxes



When you check a check box, the corresponding window (active or inactive window) appears on the monitor display. You can change the position and size of the window.

Active: To use the window as an active area in which moving object detection is performed.

**Inactive:** To use the window as an inactive area in which any moving object is ignored. Select **Inactive** to set an inactive area inside an active window.

#### Note

You cannot set all four windows as **Inactive** windows. Be sure to set one or more windows as **Active** window(s).

#### Threshold setting slider bar



Set the threshold level of moving object detection that is common to all the windows.

The threshold level is used to judge whether or not there has been any motion in the camera image. When the motion of an object on the monitor screen has exceeded the threshold level, the camera judges that there has been a motion and a green frame is shown. An alarm is output when a green frame is added to the object displayed in one of the active windows.

### **Object size**

#### Objectsize ● L ● M ● S

Select the minimum size of a detectable object from L (Large), M (Medium) and S (Small).

Each option represents the corresponding size below: L:  $64 \times 64$  dots

**M:**  $32 \times 32$  dots **S:**  $8 \times 8$  dots

#### Тір

The monitor display is  $640 \times 480$  dots. Size L is 1/10 the width of the monitor display.

#### **OK** button

OK

Click to send the set values to the camera and confirm the settings.

#### Note

Although the display on the monitor quickly responds to the setting being performed as you change the size of a window or a setting, you need to click the **OK** button to confirm the setting. The setting will be cancelled if you do not click the **OK** button.

# To set the moving object detection function

Set the moving object detection function as follows:

**1** Set the PTZ position.

Select **Preset position** for **PTZ position** when you activate moving object detection linked with a preset position. Select **Current position** when you activate this function regardless of the camera position.

- 2 Select the camera position where you want to activate the detection function. When you select **Preset position** for **PTZ position**, select the desired preset position from the **Position** drop-down list, and the camera will move to the selected preset position automatically.
- **3** Select **Moving object** for **Detection**. The setting items for moving object detection appear.
- 4 Check the Window 1 check box. The Window 1 frame appears on the monitor display.
- 5 Adjust the position and size of Window 1. Drag Window 1 to move it and change its size.
- 6 Set the active or inactive windows. Select Active to set Window 1 as an active area, or Inactive to set it as an inactive area.

#### Note

If an active window and inactive window overlap, the overlapped portion will be regarded as an inactive area.

When the two windows overlap, the inactive window is displayed over the active window on the monitor screen. If the active window is hidden by an inactive window and its position or size cannot be changed, temporarily change the active window to an inactive window and change the position and size. After changing, reset it as an active window.

- 7 Set the function for Windows 2 to Windows 4. Repeat steps 4 to 6 for each window.
- 8 Select the object size for **Object size**. Select a larger size if a small noise may be detected as a motion by mistake.
- **9** Adjust the **Threshold** setting slider bar to set the threshold level at which the camera executes detection.

Adjust the detection level while observing the monitor screen and actually shooting a moving object.

#### 10 Click OK.

The moving object detection settings are confirmed.

#### Note

Be sure to click the **OK** button to confirm the settings. The setting will be cancelled if you do not click the **OK** button.

**11** When **Preset position** is selected for **PTZ position**, perform settings for other preset positions. Repeat steps 2 to 10 for each preset position.

# Setting items for unattended object detection

The following setting items appear when **Detection** is set to **Unattended object**.

#### Monitor display

Set the active/inactive window while monitoring a moving image.



When a prospective unattended object is detected on the monitor display, it will be colored. The object's color will be changed from blue to green, yellow, and red in sequence, as the possibility of it being an unattended object increases. This change of color shows that unattended object detection is in progress. When the camera finally regards the object as an unattended object, a green frame is displayed.

#### Notes

- The colors and green frames shown in the monitor display to indicate prospective unattended objects are not displayed on the image files that are sent or recorded linked to the object detection function.
- The image displayed on the monitor display has low resolution.

#### Status lamp

Displays whether or not unattended object detection is operating.

- **Gray:** Unattended object detection is not operating because it is in the process of acquiring the background image. When unattended object detection starts, it acquires the background image. Unattended objects are not detected during this period.
- **Green:** Unattended object detection is operating because the background image has been acquired.

#### Window1 to Window4 check boxes



When you check the check box, the corresponding window (active or inactive window) appears on the monitor display. You can change the position and size of the window.

- Active: To use the window as an active window in which unattended object detection is performed.
- **Inactive:** To use the window as an inactive window in which any unattended object is ignored. Select **Inactive** to set an inactive area inside an active window.

#### Note

You cannot set all four windows as **Inactive** windows. Be sure to set one or more windows as **Active** window(s).

#### Object size



Select the minimum size of the detectable unattended object from L (Large), M (Medium) and S (Small), Each option represents the corresponding size below:

L: 64 × 64 dots M: 32 × 32 dots S: 8 × 8 dots

#### Tip

The monitor display is  $640 \times 480$  dots. Size L is 1/10 the width of the monitor display.

#### **Restart button**

#### Restart

Click this button to initialize the unattended object detection function. A new background image will be acquired from the current image.

#### **OK button**



Click to send the set values to the camera and confirm the settings.

## Notes

- Unattended object detection does not operate until the status lamp turns green.
- Although the display on the monitor quickly responds to the setting being performed as you change the size of a window or a setting, you need to click the **OK** button to confirm the setting. The setting will be cancelled if you do not click the **OK** button.

# To set the unattended object detection function

Set the unattended object detection function as follows:

- **1** Set the PTZ position.
  - Select **Preset position** for **PTZ position** when you activate unattended object detection linked with a preset position. Select **Current position** when you activate it regardless of the camera position.
- 2 Select the camera position where you want to activate detection. When you select Preset position for PTZ position, select the desired preset position from the Position drop-down list, and the camera will move to the selected preset position automatically.
- **3** Select **Unattended object** on **Detection**. The setting items for unattended object detection appear.
- **4** Wait until the status lamp turns green.

When the status lamp is gray, the camera is in the process of acquiring a background image.

Unattended object detection does not work during this period.

The status lamp turns green when the background image has been acquired.

#### Note

When you acquire a background image, use an image with as little motion as possible. If you use an image with a lot of motion, it will take a long time to complete acquiring of the background image.

- 5 Check the Window 1 check box. The Window 1 frame appears on the monitor display.
- 6 Adjust the position and size of Window 1. Drag Window 1 to move it and change its size.
- Set the active or inactive windows.Select Active to set Window 1 as an active area, or Inactive to set it as an inactive area.

#### Note

If an active window and inactive window overlap, the overlapped portion will be regarded as an inactive area.

When the two windows overlap, the inactive window is displayed over the active window on the monitor screen. If the active window is hidden by an inactive window and its position or size cannot be changed, temporarily change the active window to an inactive window and change the position and size. After changing, reset it as an active window.

- 8 Set the function for Windows 2 to Windows 4. Repeat steps 5 to 7 for each window.
- **9** Select the object size for **Object size**. Select a larger size if a small noise may be detected as an object by mistake.
- **10** Check whether an unattended object is detected properly.

Place an object in the window and confirm that unattended object detection works correctly. The object regarded as an unattended object is marked with a green frame.

### Note

It may take a long time until an unattended object is detected, depending on the image being shot.

11 Click OK.

The unattended object detection settings are confirmed.

#### Note

Be sure to click the **OK** button to confirm the settings. The setting will be cancelled if you do not click the **OK** button.

- **12** When **Preset position** is selected for **PTZ position**, perform settings for other preset positions. Repeat steps 2 to 11 for each preset position.
- **13** Set Detection time, Alarm interval and Release time in the Unattended object setting tab.

# Unattended object setting Tab

Use this tab to set the alarm time for unattended object detection.



# Time setting

Unattended object detection requires the following three kinds of time settings.

### **Detection time**

Set the period of time from when an object appears in an active window and stops or when an object in an active window disappears until the point when that object is regarded as an unattended object. An alarm will be output if the specified period has elapsed.

You can set the time between 40 seconds and 12 hours.

#### Note

If **Stay time** for the tour function specified in the Preset position menu (page 64) is shorter than **Detection time**, the camera will move to the next preset position before the object is regarded as an unattended object.

#### Alarm interval

You can repeat the alarm output in an interval of the preset time after an object has been regarded as an unattended object.

If you set **Alarm interval** to 5 minutes, for example, so that an alarm will be output every 5 minutes repeatedly after an unattended object is detected.

You can set the time between 1 and 6 hours.

#### **Release time**

Set the period of time required when the object once regarded as an unattended object is regarded as a background.

An alarm will no longer be output if the specified period has elapsed as the object once regarded as an unattended object is regarded as a background.

You can set the time between 1 and 12 hours.

#### Note

Set **Release time** to a larger value than **Detection time**.

### **OK/Cancel**

See "Buttons common to every menu" on page 33.

# **Configuration Tab**



# Setting list

Lists the settings for each position: Moving object detection, Unattended object detection, None.

#### Note

If you select **Moving object** or **Unattended object** in the Common tab when no window is set to **Active**, **None** is displayed in the list.

# Transmitting with External Equipment Using the External Serial Terminal — Serial Menu

When you click Serial in the Administrator menu, the Serial menu is displayed.

Using this menu, you can input data into the camera from the computer via a network and output them to the external serial interface to control a peripheral device. You can also input data from a peripheral device via an external serial interface and output them to the computer via a network.



# Mode

Select the mode of data transmission/reception via a network: TCP port or VISCA protocol.

- TCP: Select when you use the TCP port to input and output data through the external serial interface. Using this method, you can easily check data communications through the serial port by DOS command "telnet [host name] [port number]." When TCP is selected, TCP port No. box becomes active. Type the port number corresponding to the TCP port. Specify a port number (1024 to 65535) other than established port numbers.
- **VISCA:** Select when you control the camera with VISCA protocol. As for the command list of VISCA protocol, refer to the dealer of your camera or Sony professional products service counter nearby.

#### Notes

• When you execute serial control with VISCA protocol, match the transmission setting with the connected controller.

• This camera does not correspond to the daisy chain connection of a VISCA device. Use the camera and the controller one-on-one.

# **Baud rate**

Select a baud rate that corresponds to the peripheral device of serial interface. Selectable baud rates are shown below.

38400, 19200, 9600, 4800, 2400, 1200 (bps)

# Parity bit

Select a parity that corresponds to the peripheral device of serial interface from among **none**, **odd** or **even**.

## **Character length**

Select the character length that corresponds to the peripheral device connected to the serial interface from 7 or 8 (bits).

### Stop bits

Select the stop bit that corresponds to the peripheral device connected to the serial interface from 1 or 2 (bits).

# **OK/Cancel**

See "Buttons common to every menu" on page 33.

# Others

This section explains how to use the application software and commands, including the supplied CD-ROM.

# Using the Supplied IP Setup Program

Explains the functions except those of the Network tab in the IP Setup Program.

To install the IP Setup Program, to assign an IP address and to set the network, see "Assigning the IP Address to the Camera" on page 7 in "Preparation".

#### Notes

- The IP Setup Program may not operate correctly if you use a personal firewall or antivirus software in your computer. In that case, disable the software or assign an IP address to the camera using another method. For example, see "Assigning the IP Address to the Camera Using ARP Commands" on page 106.
- If you are using Windows XP Service Pack 2 or later, Windows Vista, or Windows 7, disable the Windows Firewall function. Otherwise the IP Setup Program will not operate correctly. For the setting, see "Configuring Windows Firewall" in "When using Windows XP Service Pack 2 or later" on page 10, "Configuring Windows Firewall" in "When using Windows Vista" on page 13, or "Configuring Windows Firewall" in "When using Windows 7" on page 15.

# Starting the IP Setup Program

Select **Program** from the Start menu of Windows, then select **Program**, **IP Setup Program** and **IP Setup Program** in sequence.

The IP Setup Program starts.

Network tab appears. The IP Setup Program detects cameras connected to the local network and lists them on the Network tab window.

When you are using Windows Vista, message "User Account Control – An unidentified program wants access to your computer" may appear. In this case, click **Allow**.

# **Bandwidth control Tab**

You can set the communication bandwidth for the JPEG image.

#### Note

The bandwidth cannot be controlled for the **MPEG4** or **H.264** image.

 Click the Bandwidth control tab to display the bandwidth setting window.
 The current bandwidth is displayed in Current bandwidth.



- 2 Click to select the camera to set the bandwidth from the list box.
- **3** Click to select the desired bandwidth from the **Setting bandwidth** list box.
- 4 Type the Administrator name and Administrator password in each box. The factory settings of both items are "admin".

5 Click OK.

If "Setting OK" is displayed, the bandwidth setting is completed.

# Date time Tab

You can set the date and time on the camera.

1 Click the Date time tab to display the date/time setting window.

IP address	Model	Current date time	
192.168.0.100	SNC-***	2005-6-16 18:57:5	8
Date time format		<b>•</b>	
Time zone selecting			
Time zone selecting			
Time zone selecting	ing		
Time zone selecting	ing		
Time zone selecting fanual current date time sett 20	ing : [		ок
Time zone selecting fanual current date time sett 20 💽 - 💽 -	ing	•:•	ок
Time zone selecting Manual current date time sett 20 • • • • •	ing	¥: ¥	ОК
Time zone selecting	ing	¥: ¥	ОК
Time zone selecting fanual current date time sett 20 • • • • • • • • • • • • • • • • • • •	ng 🛛 🔽 : [	¥: ¥	ОК
Time zone selecting fanual current date time sett 20 • • • • • • C current date time setting 20 • • • • • •	ing 💽 💽 : [	<b>.</b> : <b>.</b>	ок
Time zone selecting	ing : [		ОК
Time zone selecting fanual current date time sett 20 • • • • • • C current date time setting 2005-6-16 18	ing <b>v v</b> : [		ок ок
Time zone selecting	ng 🔹 : [ :57:59	<b>x</b> : <b>x</b>	<u></u> OK

**2** Click to select the camera that you want to set the date and time for.

You can select multiple cameras and set the date and time simultaneously.

- **3** Select the date/time format from the **Date time format** drop-down list.
- **4** Select the area where the camera is installed from the **Time zone selecting** drop-down list.
- **5** Set the date and time.

You can set the date and time in two ways.

#### Manual current date time setting

Set the current date and time on the **Manual current date time setting** boxes, and click **OK**. The setting boxes are for the year (last two digits), month, date, hour, minutes and seconds from left to right.

#### PC current date time setting

The date and time set on the computer is displayed in the **PC current date time setting** box. Click **OK** on the right to set the camera's date and

time to coincide with the displayed computer's date and time.

#### Note

Due to network properties, there may be a slight difference between the displayed computer's date and time and those set on the camera.

# **Rebooting the Camera**

Click **Reboot** on the Network tab to reboot the camera. It will take about two minutes to start again.

# Using the SNC audio upload tool — Transmitting Audio to Camera

The supplied SNC audio upload tool allows you to transmit sound from the computer to the camera. This section explains the setup and operations of the SNC audio upload tool.

The SNC audio upload tool supports the following audio data to be transmitted.

Audio CODEC	Transmission rate
G.711 (µ-LAW)	64 kbps
G.726	40 kbps
G.726	32 kbps
G.726	24 kbps
G.726	16 kbps

#### Notes

- Only one user can transmit sound to the camera. Meanwhile, another user will not be able to transmit sound to the camera.
- If proxy server is enabled, sound uploading to the camera may fail. In that case, disable the proxy server.
- SNC audio upload tool may not operate correctly if personal firewall software or antivirus software is used in your computer. In this case, disable the corresponding software.
- If you are using Windows XP Service Pack 2 or later, Windows Vista, or Windows 7, disable the Windows Firewall function. Otherwise SNC audio upload tool will not operate correctly. For the setting, see "Configuring Windows Firewall" in "When using Windows XP Service Pack 2 or later" on page 10, "Configuring Windows Firewall" in "When using Windows Vista" on page 13, or "Configuring Windows Firewall" in "When using Windows 7" on page 15.

# Installing the SNC audio upload tool

**1** Insert the CD-ROM in your CD-ROM drive. A cover page appears automatically in your Web browser.

If it does not appear automatically in the Web browser, double-click on the index.htm file on the CD-ROM.

When you are using Windows Vista or Windows 7, pop-up "AutoPlay" may appear. For details, see "Installing software" in "When using Windows Vista" on page 11 or "Installing software" in "When using Windows 7" on page 14.

**2** Click the **Setup** icon of **SNC audio upload tool**. The "File Download" dialog opens.

When you are using Windows XP Service Pack 2 or later, Windows Vista, or Windows 7, a message regarding the active contents may appear. For details, see "Installing software" in "When using Windows XP Service Pack 2 or later" on page 9, "Installing software" in "When using Windows Vista" on page 11, or "Installing software" in "When using Windows 7" on page 14.

### **3** Click **Open**.

### Note

If you click "Save this program to disk" on the "File Download" dialog, you cannot install the tool correctly. Delete the downloaded file, and click the **Setup** icon again.

**4** Install the SNC audio upload tool following the wizard displayed.

If the Software License Agreement is displayed, read it carefully and accept the agreement to continue with the installation.

# Connecting the Camera to the Computer

- 1 Connect a speaker to the ⊲ (line output) jack on the camera.
- **2** Connect a microphone to the microphone input jack on the computer.

### Note

If the microphone input jack of the computer is not set correctly, no sound is transmitted from the computer and nothing is output from the speaker connected to the camera.

Set the microphone input jack from the control panel of Windows.

# **On Windows XP**

- **1** Select **Sounds and Audio Device** from Control Panel.
- **2** Click **Volume** in the **Sound Recording** section on the Audio tab.

The Recording Control window opens.

**3** Check **Select** in the **Microphone** section.

#### **On Windows Vista or Windows 7**

There are no settings regarding the microphone jack. If recording cannot be made, connect a microphone device to the computer and check that the recording device operates correctly, as follows.

- Select **Sound** from Control Panel.
- **2** Open the Recording tab and check that Windows has recognized the hardware correctly.

# Using the SNC audio upload tool

When you start the SNC audio upload tool, the Setting tab is displayed.

#### Setting tab

Use this menu to set the camera to transmit audio from a computer or upload an audio file.



#### User

Set the **User ID** and **Password** for the administrator. The factory setting of the User ID for the Administrator is "admin", and the Password is "admin".

**Single sign-on:** Select **On** to use the same user ID and same password for all the cameras. Select **Off** to set the user ID and password individually for each camera.

For the setting with **Off**, see "User ID/Password" on page 93.

- **User ID:** This item can be set when **Single sign-on** is set to **On**. The user ID specified here is applicable to all cameras.
- **Password:** This item can be set when **Single sign-on** is set to **On**. The administrator password specified here is applicable to all cameras.

#### Proxy

Check this box when you use a proxy server for communications. When it is not checked, direct communications with the camera is performed.

- Auto detect: Select On to obtain the proxy setting automatically from Internet Explorer.
- **Proxy address:** Type the IP address or host name of the proxy server.
- **Proxy port:** Type the port number used for communications with the proxy server.

#### Note

The Proxy setting is applicable to all cameras. You cannot use individual proxy settings for each camera.

#### Codec

Select the audio mode (Codec) from the drop-down list.

#### Save camera setting

Check this box to store the current settings and camera list in the Setting tab. The same settings will be recalled when the camera is rebooted.

#### -

Click this button to hide the camera list. Click it again to display the camera list.

#### Target camera(s) (Camera list)

When the SNC audio upload tool starts, it automatically detects Sony network cameras connected to the local network and displays them in the camera list. Up to 256 cameras can be displayed in the list. Select the check box on the left of the row to enable audio transmission and audio file uploading for that camera. You can then enable these functions simultaneously for multiple cameras.

#### Notes

- The SNC audio upload tool cannot detect the cameras that are connected to the local network after the program has started.
- The SNC audio upload tool cannot detect the network cameras that are not equipped with the audio feature.
- **Camera select checkbox:** The check box is located on the left end of the row. Select this check box to enable audio transmission and audio file uploading for that camera.

- MAC address: Displays the MAC address of the network camera.
- **IP address:** Displays the IP address of the network camera. "DHCP" is shown at the end of the IP address when the IP address is obtained with a DHCP server.
- **Model:** Displays the model name of the network camera.
- **Serial:** Displays the serial number of the network camera.
- **User:** Displays the specified user ID and password. The password is shown with turned letters.

#### Select all

Click to select all the cameras in the camera list. This is usable when you delete all the cameras from the list or specify the same user ID and password for all the cameras.

#### **User ID/Password**

Use this item when you specify the user ID and password to communicate with the selected camera(s) only.

Select the camera(s) from the camera list and click this button, and the following dialog opens.

Type the user ID and password for the administrator and click **OK**.

User	X
Camera address	192.168.0.100
UserID	
Password	
	OK <u>C</u> lose

#### Note

If you select multiple cameras from the camera list, the same user ID and password are set for all the selected cameras. The factory settings of both items are "admin".

#### Add

Use this item when you add a new network camera to the camera list manually. Click this button, and the following dialog opens.

Type the IP address and port number for the camera to be added and click **OK**.

Add		×
Camera address		
Camera port		
	OK Close	

#### Notes

- An error dialog appears if the specified IP address already exists in the camera list, is assigned for a device other than the network camera, or does not exist in the network.
- You cannot add new cameras if the maximum of 256 cameras has been displayed in the camera list.

#### Delete

Click this button to delete the selected camera(s) from the camera list.

#### Note on switching the tab

If an error occurs when you switch from the Setting tab to the Audio upload tab or the Voice alert tab, the camera is shown in red. In this case, check the camera settings and the user ID and password settings.

#### Audio upload tab

Use this menu to transmit audio from the computer to the camera. You can transmit audio to multiple cameras displayed in the camera list simultaneously.

Before transmitting, set **Audio upload** to **Enable** on the Common tab of the Camera menu.

🖣 SNC audio upload too	SNC audio upload tool ver * .* .*				
Audio upload		Voice al	ert	Se	etting
Sound					
	Level			Bitrate	0 kbps
Target camera(s)			D C		
IP address	Model	Serial	Status		
192.168.0.100	SNC-***	001057	Ready		
192.168.0.101	SNC-***	001010	Ready		
A 192.168.0.102	SNC-***	001012	Ready		

#### ► (start) / ■ (stop)

Click ► (start) to start audio transmission. The transmission speed is displayed in the Bitrate box during transmission. You can adjust the microphone volume and enable/disable the muting, if necessary. To stop the audio transmission, click ■ (stop).

#### Notes

- Audio transmission stops if you switch the tab during the transmission.
- Audio may be interrupted when the IP address is changed if **Obtain an IP address automatically** (**DHCP**) is set on **IP address** in the Network menu.
- Audio may be interrupted if you transmit it to many cameras simultaneously.

#### Sound adjustment and indicators

Adjust the microphone input volume by moving the slider bar. You can adjust the volume even during transmission.

Click *P* to enable/disable sound muting. The microphone input volume is displayed at the Level. The transmission rate is displayed in the Bitrate box.

#### **\_**

Click this button to hide the camera list. Click it again to display the camera list.

#### Target camera(s) (Camera list)

Displays the cameras selected with the camera select checkbox of the camera list in the Setting tab. The list shows the information and status of the selected cameras.

**IP address:** Displays the IP address of the network camera. "DHCP" is shown at the end of the IP address when the IP address is obtained with a DHCP server.

#### Тір

During SSL communication, 🔒 appears on the left side of the IP address.

This camera does not support the SSL function.

- **Model:** Displays the model name of the network camera.
- Serial: Displays the serial number of the network camera.
- Status: Displays the current status of the camera.
  Ready: The camera is ready for connection.
  Connected: The camera connection is successful.
  Fault: The camera connection is unsuccessful.
  Sending: Audio data being transmitted

## Voice alert tab

Use this menu to record the sound through the microphone connected to the computer and upload the recorded audio file to the camera. You can upload the audio file to multiple cameras selected from the camera list simultaneously.

🐴 SNC audio upload to	ool ver * .* .*		
Audio upload	1	Voice alert	Setting
		Upload- 0 1 0 2 0 3	RecordedFile1.vof Alarm.vof [Not uploaded]
Target camera(s)			
IP address 1921680.100 1921680.001 № 1921680.102	Model SNC-*** SNC-*** SNC-***	Serial   Progress 001067 001010	Status Ready Ready Ready

# 📐 (playback)

To start playback, open the recorded file or another audio file and click this icon.

You can check the recorded sound or the contents of the selected audio file. During playback, the progress bar shows playback progress.



Click to stop recording or playback.

When you click it during recording, recording stops, and you can review the recorded sound or upload the recording to the camera.

When you click it during playback, playback stops and the progress bar display returns to the start position.

### (recording)

Click to start recording of the sound input to the computer microphone. The maximum recording time is 30 seconds.

The codec specified in the Setting tab is used for the recording.

The recorded file is displayed as "RecordedFile.vof."

#### Notes

- Recording or playback stops if you switch the tab during recording or playback.
- The recorded file is not stored in the computer.

#### Recording/playback progress bar



You can check recording or playback progress with this bar.

During recording, the right end of the bar represents 30 seconds and the remaining recording time is displayed below the bar.

During playback, the maximum time of the bar depends on the recorded time.

#### (file open)

Click to select a previously saved audio file. You can play the selected audio file or upload it to the camera.

#### (save)

Click to save the recorded audio file to the computer.

#### Voice alert number select



Specify the voice alert number to which you want to upload the audio file. For example, select **1** when uploading to voice alert 1.

The name of the uploaded audio file is displayed to the right of the number.

"Not uploaded" is displayed if no audio file is uploaded to the camera.

The audio file name will be "RecordedFile" + "Voice alert number" + ".vof" if you upload an audio file recorded using • and not stored in the computer.

#### Notes

- The voice alert number select is disabled if the camera specified in the Setting tab has old-version software.
- The audio file name for the camera selected in the camera list is displayed here. To check the uploaded file name, click on the camera in the camera list.
- The audio file is uploaded to the same voice alert number on all the cameras in the camera list. If the camera has old-version software, the audio file is automatically uploaded to voice alert number 1.

## 😰 (upload)

Click to upload the recorded or selected audio file to the camera specified in the Setting tab. Only one audio file can be uploaded to the camera at a time.

#### Note

Uploading a new audio file overwrites the audio file previously uploaded to the camera.

#### A

Click this button to hide the camera list. Click it again to display the camera list.

#### Target camera(s) (Camera list)

Displays the cameras selected with the camera select checkbox of the camera list in the Setting tab. The list shows the information and status of the selected cameras.

**IP address:** Displays the IP address of the network camera. "DHCP" is shown at the end of the IP address when the IP address is obtained with a DHCP server.

#### Tip

During SSL communication, 🔒 appears on the left side of the IP address.

This camera does not support the SSL function.

- **Model:** Displays the model name of the network camera.
- Serial: Displays the serial number of the network camera.
- **Progress:** Displays the progress of audio file transmission.
- **Status:** Displays the current status of the camera. **Ready:** The camera is ready for connection.
  - **Inquiry:** The camera information is being asked for.
  - **No func:** The camera does not support the Voice alert function.
  - **Uploading:** The audio file is being uploaded.
  - Fault: The audio file uploading is unsuccessful.
  - **No Privilege:** The camera is not authorized to upload audio files.

**Succeeded:** The audio file uploading is successful.

# Uploading the recorded audio file to the camera

#### Тір

Before operating, create an audio file and set the camera for audio uploading. Set the camera using the Setting tab.

- 1 Click (recording) in the Voice alert tab to start recording.
- 2 Click (stop) to stop recording. Recording will stop automatically in 30 seconds.
- **3** Select the voice alert number.
- 4 Click 😰 (upload) to transmit the audio file to the camera.

# Saving the recorded audio file to the computer

- 1 Click (recording) in the Voice alert tab to start recording.
- 2 Click (stop) to stop recording. Recording will stop automatically in 30 seconds.
- **3** Click (save). The **Save as** dialog appears. Type the file name and save it.

# Uploading the saved audio file to the camera

- 1 Click [1] (file open) in the Voice alert tab and select the audio file to be uploaded.
- **2** Select the voice alert number.
- **3** Click (upload) to transmit the audio file to the camera.

# Using the SNC video player — Playing Video/ Audio File Recorded with Camera

The supplied SNC video player allows you to play video/audio data recorded with the camera on your computer.

This section explains the setup and operations of the SNC video player.

# Installing the SNC video player

**1** Insert the CD-ROM in your CD-ROM drive. A cover page appears automatically in your Web browser.

If it does not appear automatically in the Web browser, double-click on the index.htm file on the CD-ROM.

When you are using Windows Vista or Windows 7, pop-up "AutoPlay" may appear. For details, see "Installing software" in "When using Windows Vista" on page 11 or "Installing software" in "When using Windows 7" on page 14.

2 Click the Setup icon of SNC video player. The "File Download" dialog opens.

When you are using Windows XP Service Pack 2 or later, Windows Vista, or Windows 7, a message regarding the active contents may appear. For details, see "Installing software" in "When using Windows XP Service Pack 2 or later" on page 9, "Installing software" in "When using Windows Vista" on page 11, or "Installing software" in "When using Windows 7" on page 14.

**3** Click **Open**.

#### Note

If you click "Save this program to disk" on the "File Download" dialog, you cannot install the player correctly.

Delete the downloaded file, and click the **Setup** icon again.

**4** Install the SNC video player following the wizard displayed.

If the Software License Agreement is displayed, read it carefully and accept the agreement to continue installation.

# Using the SNC video player

**1** Start the SNC video player.



- 2 Click the 🗁 (browse) icon. The Select File dialog opens.
- **3** Select the file you want to play. Click **INFO** on the top of the screen, and file information dialog appears.



#### File dialog

- **Model name:** Model name of the camera with which the file is recorded.
- **IP address:** IP address of the camera with which the file is recorded.
- **Serial number:** Serial number of the camera with which the file is recorded.

Video: Video Codec

Audio: Audio Codec

# **Record event:** Type of event used for the recording: **Sensor input** or **Motion detection**. **Date&time:** Recording date and time

# Playing a video/audio file

Click (start) to start playing from the beginning of the selected file.

Play stops when the file is played to the end.

# Playing from a specified point

Move the slide bar below the image display, and playback will start from the position of the slide bar.

# Adjusting the sound

Adjust the playing sound volume by moving the slide bar. Move it to the left end for the minimum volume, and to the right end for the maximum volume.

Click (speaker) to enable/disable the sound muting.

When sound muting is on, no sound is heard even if you move the slide bar.

# Saving an image

Click 😭 (capture) icon during playing or pause and the captured image is displayed in a pop-up dialog. To save the image, click **Save** on the dialog. You can specify the destination to which the image is to be stored and select the JPEG or Bitmap format.

# Changing the view size

Click  $\times$  1/4,  $\times$  1/2,  $\times$  1,  $\times$  2 to change the view size. The monitor is displayed by the view size as you selected. When you click  $\times$  1, the original size of image is displayed.

 $\times$  2 is available only for 640  $\times$  480 (VGA) size or less. The selected view size button flips.

# Using the SNC panorama creator — Creating a Panorama Image

The supplied SNC panorama creator allows you to create a panorama image to be displayed on the main viewer.

Using the panorama image, you can move the camera to the desired position simply by clicking on the image. This section explains the setup and operations of the SNC panorama creator.

# Installing the SNC panorama creator

**1** Insert the CD-ROM in your CD-ROM drive. A cover page appears automatically in your Web browser.

If it does not appear automatically in the Web browser, double-click on the index.htm file on the CD-ROM.

When you are using Windows Vista or Windows 7, pop-up "AutoPlay" may appear. For details, see "Installing software" in "When using Windows Vista" on page 11 or "Installing software" in "When using Windows 7" on page 14.

**2** Click the **Setup** icon of **SNC panorama creator**. The "File Download" dialog opens.

When you are using Windows XP Service Pack 2 or later, Windows Vista, or Windows 7, a message regarding the active contents may appear. For details, see "Installing software" in "When using Windows XP Service Pack 2 or later" on page 9, "Installing software" in "When using Windows Vista" on page 11, or "Installing software" in "When using Windows 7" on page 14.

# **3** Click **Open**.

#### Note

If you click "Save this program to disk" on the "File Download" dialog, you cannot install the creator correctly. Delete the downloaded file, and click the **Setup** icon again. **4** Install the SNC panorama creator following the wizard displayed.

If the Software License Agreement is displayed, read it carefully and accept the agreement to continue installation.

# Using the SNC panorama creator

The SNC panorama creator consists of the Main tab to create a panorama image and the Setting tab to prepare for connection to the camera.

When you start the SNC panorama creator, the Setting tab is displayed.

## Setting tab

Before creating a panorama image, set the following items in the Setting tab to allow connection to the camera.

🌄 SNC panorama creator ve	er *, *, *
Main Setting	
Administrator name	admin
Administrator password	****
Camera address	192.168.0.100
Camera port No.	80
Proxy setting	
Use proxy	
Proxy server address	
Proxy server port No.	
	Cancel

- Administrator name: Type the ID of the administrator of the camera to be connected.
- Administrator password: Type the password of the administrator of the camera to be connected.

#### Тір

The factory settings of both items are "admin".

- **Camera address:** Type the IP address or host name of the camera to be connected.
- **Camera port No.:** Type the port number of the camera to be connected.

When you use a proxy server for camera connection, check the **Use proxy** check box and set the following items.

**Proxy server address:** Type the IP address or host name of the proxy server.

# **Proxy server port No.:** Type the port number of the proxy server.

Preparations for connecting to the camera are now completed.

## Main tab



#### Viewer

The created panorama image is displayed in the upper viewer.

#### Angle setting

Specify the camera movement area on the panorama image.

Drag the mouse to draw a rectangle within which the camera movement is limited. You can enlarge, reduce or move the created rectangle. To erase the rectangle, rightclick the mouse.

#### Note

The edges of the panorama image may not be displayed correctly when the camera is zoomed in.

#### Make

Starts shooting to create a panorama image (a complete 360-degree panorama image). It takes about two minutes to create a complete panorama image.

#### Note

The exposure and white balance settings are fixed while a panorama image is being created. To create a clear panorama image, set **Exposure mode** to **Full auto** and **White balance** to **Auto** in the Camera menu and point the camera to the main subject before starting shooting.

#### File open

Allows use of a Bitmap or JPEG image file in spite of a panorama image.

#### Note

The size of the image in the file should be  $320 \times 90$  pixels (horizontal/vertical). Other image sizes are not supported.

#### Send

Transmits a panorama image converted into a JPEG file to the camera.

# Creating and transmitting a panorama image

1 Click **Make** on the Main tab to start shooting. A panorama image will be created in about two minutes.

#### Note

Do not perform settings of the camera or move the camera during shooting.

- **2** Specify the camera movement area by dragging the mouse to draw a rectangle on the panorama image. The specified camera movement area will be effective when the panorama image is saved in the camera.
- **3** Click **Send** to transmit the panorama image to the camera.

The panorama image is saved in the camera.

You can use the saved panorama image when you control panning and tilting from the main viewer.

# Saving a custom image to the camera

You can save a custom image to the camera in spite of the panorama image shot by the camera. Prepare the image to conform to the following requirements:

• File format: JPEG or Bitmap

• Image size:  $320 \times 90$  pixels (horizontal/vertical) The camera does not support use of images that do not conform to the above conditions.

- 1 Click **File open** on the Main tab. The File dialog opens.
- **2** Select the image you have prepared.

0,

Others

- **3** Specify the camera movement area by dragging the mouse to draw a rectangle on the panorama image. The specified camera movement area will be effective when the panorama image is saved in the camera.
- 4 Click **Send** to transmit the prepared image to the camera.

The image is saved in the camera.

You can use the saved image when you control panning and tilting from the main viewer.

#### Tip

The panorama image is the still image converted from the image taken when you were going to create a panorama image with "SNC panorama creator". When the camera is moved or when the layout around the camera is changed, create the panorama image again.

# Using the SNC privacy masking tool — Masking a Camera Image

The supplied SNC privacy masking tool allows you to mask parts of the camera image to be transmitted.

# Installing the SNC privacy masking tool

**1** Insert the CD-ROM in your CD-ROM drive. A cover page appears automatically in your Web browser.

If it does not appear automatically in the Web browser, double-click on the index.htm file on the CD-ROM.

When you are using Windows Vista or Windows 7, pop-up "AutoPlay" may appear. For details, see "Installing software" in "When using Windows Vista" on page 11 or "Installing software" in "When using Windows 7" on page 14.

2 Click the Setup icon of SNC privacy masking tool.

The "File Download" dialog opens.

When you are using Windows XP Service Pack 2 or later, Windows Vista, or Windows 7, a message regarding the active contents may appear. For details, see "Installing software" in "When using Windows XP Service Pack 2 or later" on page 9, "Installing software" in "When using Windows Vista" on page 11, or "Installing software" in "When using Windows 7" on page 14.

**3** Click Open.

#### Note

If you click "Save this program to disk" on the "File Download" dialog, you cannot install the program correctly. Delete the downloaded file, and click the **Setup** icon again.

**4** Install the SNC privacy masking tool following the wizard displayed.

If the Software License Agreement is displayed, read it carefully and accept the agreement to continue installation.

# Using the SNC privacy masking tool

The SNC privacy masking tool consists of the Main tab to set the privacy mask positions and the Setting tab to prepare for connection to the camera.

When you start the SNC privacy masking tool, the Setting tab is displayed.

## Setting tab

Before creating a privacy mask, set the following items in the Setting tab to allow connection to the camera.

SNC privacy masking tool	ver * .* .*	
Main Setting		
Administrator name	admin	
Administrator password	****	
Camera address	192.168.0.100	
Camera port No.	80	
Proxy setting		
Use proxy		
Proxy server address		
Proxy server port No.		
		Cancel
		Cancer

- Administrator name: Type the ID of the administrator of the camera to be connected.
- Administrator password: Type the password of the administrator of the camera to be connected.

#### Tip

The factory settings of both items are "admin".

- **Camera address:** Type the IP address or host name of the camera to be connected.
- **Camera port No.:** Type the port number of the camera to be connected.

When you use a proxy server for camera connection, check the Use proxy check box and set the following items.

**Proxy server address:** Type the IP address or host name of the proxy server.

**Proxy server port No.:** Type the port number of the proxy server.

Preparations for connecting to the camera are now completed.

#### Main tab

Set the privacy mask.



#### Note

If the video codec of the camera is set to **H.264**, the Main tab window is not displayed even if you click on the **Main** tab.

In this case, select **JPEG** or **MPEG4** in **Mode** of the Camera menu (page 45) and operate again.

#### Viewer

A live image of the camera is displayed. You can specify the position of the privacy mask in this area. If you click on the image, the camera moves so that the clicked point goes to the center of the image.

#### Panorama image area

The panorama image created with the supplied SNC panorama creator is displayed.

The positions of the registered privacy masks are shown with numbers in this area.

If you click on the panorama image, the camera moves to the clicked point.

The default image is shown when no panorama image has been created.

#### PTZ Controller (control panel)

Allows you to pan, tilt and zoom the camera.

#### Pan/tilt control

Click the arrow button of the direction in which you want to move the camera. Keep it pressed to move the camera continuously.

#### Zoom control

Click wide to zoom out, and click Tele to zoom in. Zooming continues while the button remains pressed.

The current zoom status is shown on the zoom bar. The left end is the WIDE end, and the right end is the TELE end.

Click w to move the zoom to the WIDE end. Click to move the zoom to the TELE end.

#### Privacy mask setting section (No.1 to No.8)

Allows you to set, call or delete the privacy mask. You can set up to eight privacy masks and the mask color.

**Set:** Register the area specified on the viewer as a privacy mask area.

Click **Set** and the portion of the viewer image is masked with the privacy mask. The color of the privacy mask is that selected with the **Color** dropdown list.

#### Notes

- When using the privacy mask function, set **Stabilizer** to **Off**. (page 42)
- If the mask area is close to the bottom end of the image, the background at the bottom may be seen.
- **Call:** Click to face the camera to the privacy mask position.

#### Tip

The privacy mask positions are shown with numbers in the panorama image area.

**Clear:** Click to delete the privacy mask.

#### Color

Specify the color or mosaic of privacy masks. This setting is common to every privacy mask. If you select **Transparent**, a background is seen through.

The selectable colors are as follows:

# Black, Gray, White, Red, Green, Blue, Cyan, Yellow, Magenta, Mosaic

#### Notes

- Mosaic is not available for SNC-RX550N/P and SNC-RX530N/P.
- When **Mosaic** is selected, the color of some portion of mosaic may be different from the color of the other portions if the privacy mask area reaches the bottom of the image.
- All clear: Click to delete all the privacy masks simultaneously.

# Setting a privacy mask

To set a privacy mask in a favorite position, operate as follows:

- 1 Move the camera to the position you want to set a privacy mask using the control panel in the Main tab.
- 2 Click the point where you want to set the privacy mask on the viewer. The clicked point goes to the center of the image.
- **3** Specify the privacy mask area by dragging the mouse on the viewer. The privacy mask area is a rectangle that is symmetrical with respect to the center of the viewer.
- 4 Select the color or mosaic of the mask from the Color drop-down list.

#### Note

The color is common to every privacy mask. The color last selected is applied.

5 Select the desired privacy mask number in the privacy mask setting section and click Set of the corresponding number.The mask is displayed on the viewer.

#### Note

The mask cannot be set on the viewer by clicking **Set**, if the camera is tilted beyond  $+70^{\circ}$ .

# Privacy mask setting range

The setting range of the privacy mask is limited as follows:

#### Pan angle: No limit



Tilt angle:  $0^{\circ}$  to  $+70^{\circ}$ 



#### Note

The privacy mask area is a rectangle that is specified with respect to the center of the camera image. The privacy mask may not be set in areas close to the end of pan/tilt operation.

# Using the Custom Homepage Installer

The supplied Custom Homepage Installer allows you to store the homepage that you have created in the camera and watch it.

#### Notes on creating the homepage

When you are creating the homepage, note the following points.

- The file name should be typed using up to 24 characters including the extension.
- The file size of the homepage should be 2.0 MB or less.
- To see the created homepage, set the **Homepage** in the System menu.

# Uploading the homepage to the camera using the Custom Homepage Installer

1 Insert the CD-ROM in your CD-ROM drive. A cover page appears automatically in your Web browser.

If it does not appear automatically in the Web browser, double-click on the index.htm file on the CD-ROM.

When you are using Windows Vista or Windows 7, pop-up "AutoPlay" may appear. For details, see "Installing software" in "When using Windows Vista" on page 11 or "Installing software" in "When using Windows 7" on page 14.

2 Click the Start icon of Custom Homepage Installer.

The "File Download" dialog opens.

When you are using Windows XP Service Pack 2 or later, Windows Vista, or Windows 7, a message regarding the active contents may appear. For details, see "Installing software" in "When using Windows XP Service Pack 2 or later" on page 9, "Installing software" in "When using Windows Vista" on page 11, or "Installing software" in "When using Windows 7" on page 14.

#### **3** Click **Open**.

The installer starts and notes are displayed.

When you are using Windows Vista, message "User Account Control – An unidentified program wants access to your computer" may appear. In this case, click **Allow**.

🖆 Custom Homepage Installer ver *, *, *		
Operating Precautions		
The total size of Custom Homepage need be less than 2.0MB, and more than 2.5MB free space is required in the built-in memory of the camera.		
Need to log in as Administrator to run the program.		
The Image Memory function of the camera need set "Off".		
The camera will be rebooted after the installation is completed.		
< Back Next > Cancel		

#### Note

If you click "Save this program to disk" on the "File Download" dialog, the

CustomHomepageInstaller.exe file will be saved on the computer. Double-click the saved file to start it.

**4** Read the notes carefully, and click **Next**. The Software License Agreement is displayed.



**5** Read the agreement carefully, select **Agree** if you accept it, then click **Next**.

1	Custom Homepage Install	er ver *, *, *
	IP address	192 . 168 . 0 . 100
	HTTP port No.	80      (1024 to 65535)
	Use HTTP proxy server	
	Proxy server address	yourhttp.proxy.server.com
	Proxy server port No.	8000 (1024 to 65535)
	Use FTP proxy server	
	Proxy server address	yourhttp.proxy.server.com
	Proxy server port No.	① 21 ① (1024 to 65535)
	Administrator name	admin
	Administrator password	****
		< Back Next > Cancel

- **6** Type the IP address of the camera to be uploaded in the IP address box.
- **7** Specify the HTTP port No. of the camera. Initial HTTP port No. is set to 80.
- **8** When you use a proxy server, set the following: For the proxy server of your environments, consult your network administrator.

#### When using an HTTP proxy server:

Select **Use HTTP proxy server**, and type your settings in the Proxy server address and Proxy server port No. boxes.

#### When using an FTP proxy server:

Select **Use FTP proxy server**, and type your settings in the Proxy server address and Proxy server port No. boxes.

#### Note

If you cannot establish communications with the camera using the proxy server being used, connect the camera to the local network and run the installer without using the proxy server.

**9** Type the Administrator name and Administrator password of the camera to be uploaded. The factory settings of both items are "admin".



🖆 Custom Homepage Installer ver 🚓 🚓 📃 🗖 🔀
Please enter the source folder where the files of custom homepage are stored.
Source folder
C:Wy_homepage
< Back Next > Cancel

**11** Type the path for the folder in which your homepage is stored in the Source folder box, or click \_\_\_\_\_\_ to select the folder, and then click **Next**.

Information		
?	The program starts uploading the files of custom homepage.	
	Cancel	

# 12 Click OK.

Uploading of the homepage file starts.

#### Note

Do not turn off the camera until the camera is rebooted after uploading the homepage file.

Custom Homepage Install	er ver *, *, *		
Source folder : C:Wy_homepag	e		
Uploading is in progress. Do not	turn off the power.		
_			
		No. 4	0
	< Back	Next >	Cancel

The following page will appear after a while.

🖆 Custom Homepage Installer ver*,*,*
The files of custom homepage were successfully transferred to the camera.
Warning
The installation is in progress in the camera.
Please do not turn off the camera for 5 minutes.
The camera will be rebooted after the installation is completed.
< Back Next > Finish

After displaying this page, the camera will be adjusted and rebooted automatically in five minutes.

**13** Click **Finish** to exit the program.

# Assigning the IP Address to the Camera Using ARP Commands

This section explains how to assign an IP address to the camera using ARP (Address Resolution Protocol) commands without using the supplied IP Setup Program.

#### Note

When you turn on the camera, execute the ARP and PING commands within 5 minutes. Also when you restart the camera, execute the operation within 5 minutes.

- 1 Open the command prompt on the computer. When using Windows Vista or Windows 7, right click **Command prompt** in **Start-All Programs-Accessories**, and select **Run as administrator**.
- 2 Enter the IP address and the MAC address of the camera to assign a new IP address, using the following ARP commands.

arp -s <Camera's IP address> <Camera's MAC address> ping -t <Camera's IP address>

Example:

```
arp -s 192.168.0.100 08-00-46-21-00-00
ping -t 192.168.0.100
```

**3** When the following line is displayed on the command prompt, hold down **Ctrl** and press **C**. The display stops.

Reply from 192.168.0.100:bytes=32 time...

You will normally receive a reply after about 5 repetitions of "Request time out."

**4** Wait until the execution of PING finishes, then input the following code.

arp -d 192.168.0.100

#### Note

- If you do not receive a reply, check the following:
- Did you enter the ARP commands within 5 minutes after it was turned on?

If not, turn off the camera and restart the operation.

- Is the NETWORK indicator on the camera flashing? If the indicator goes off, the network connection has a problem. Connect the network correctly.
- Did you enter the IP address previously used for another device?

Assign a new IP address to the camera.

- Do the computer and the camera have the same network address?

If not, set the same network address on the computer and the camera.

# **Using the SNMP**

This unit supports SNMP (Simple Network Management Protocol). You can read MIB-2 objects using software such as SNMP manager software. This unit also supports the coldStart trap which occurs when the power is turned on or the unit restarts, and the Authentication failure trap which informs of an illegal access using SNMP.

Using CGI commands, you can set community name and access limitation, host to send traps, and some MIB-2 objects. To allow these settings, you need authentication by the camera administrator.

# **1. Inquiry Commands**

You can check the SNMP Agent settings using the following CGI commands.

<Method>

GET, POST

<Command>

http://ip\_adr/snmpdconf/inquiry.cgi?inqjs=snmp (JavaScript parameter format)

http://ip\_adr/snmpdconf/inquiry.cgi?inq=snmp (standard format)

With the above inquiry, you can obtain the following setting information. The following explains the setting information using the inqjs=snmp (JavaScript parameter) format.

- var sysDescr="SNC-RX570" (SNC-RX570N/P), "SNC-RX550"(SNC-RX550N/P) or "SNC-RX530"(SNC-...① RX530N/P) var sysObjectID="1.3.6.1.4.1.122.8501" ...2 ...(3) var sysLocation="" ...④ var sysContact="" ...(5) var sysName="" ...6 var snmpEnableAuthenTraps="1" ...⑦ var community="public,0.0.0,read,1" var community="private,192.168.0.101,read,2" ...8 var trap="public,192.168.0.101.1" ...(9)
- describes the case of "mib-2.system. sysDescr.0". You cannot change this parameter.
- describes the case of "mib-2.system. sysObjectID.0". You cannot change this parameter.
- describes the case of "mib-2.system. sysLocation.0". This field is used to describe information on the location of this camera. Nothing is set at the factory.

- describes the case of "mib-2.system. sysContact.0". This field is used to describe the information on administrator of this camera. Nothing is set at the factory.
- describes the case of "mib-2.system. sysName.0". This field is used to describe administration node of this camera. Nothing is set at the factory.
- describes the case of "mib-2.snmpEnable AuthenTraps.0". This example shows when "1" (enable) is set. With this setting, a trap occurs when there is an Authentication failure. When "2" (disable) is set, no Authentication failure trap occurs.
- describes the community attributes. This example shows the identification number "ID=1", the community name public, and enables read from any IP address (0.0.0.0).
- describes the community attributes, similarly to ⑦. This example shows the identification number ID=2, the community name "private", and enables "read" by the SNMP request packet from the host "192.168.0.101".
- describes the attributes to send a trap. This example shows the identification number "ID=1", the community name "public", and enables sending of traps to the host having the IP address "192.168.0.101".

# 2. Setting Commands

The unit supports the following setting commands of SNMP.

<Method> GET, POST <Command>

> http://ip\_adr/snmpdconf/snmpdconf.cgi? <parameter>=<value>&<parameter>=...&...

First, perform the settings of the following parameters.

- sysLocation=<string> Set the case of "mib-2.system.sysLocation.0" in the <string> position. The maximum length of <string> is 255 characters.
- sysContact=<string> Set the case of "mib-2.system.sysContact.0" in the <string> position. The maximum length of <string> is 255 characters.

- sysName=<string> Set the case of "mib-2.system.sysName.0" in the <string> position. The maximum length of <string> is 255 characters.
- 4) enaAuthTraps=<value> Set the case value of "mib-2.snmp.snmp EnableAuthenTraps.0" in the <string> position. Type "1" (enable) or "2" (disable) in the <value> position.
- 5) community=<ID>,r,
   <communityName>,<IpAddressString>
   Set the community attributes. <ID> describes the setting identification number (1 to 8)
   <communityName> describes the community name to be set, and <IpAddressString> describes the IP address of the host you allow access (0.0.0.0 for any host).
- **Example:** To allow reading by any host in the "private" community and having the ID number "2". community=2,r,private,0.0.0.0
- 6) trap=<ID>,<communityName>,
   <IpAddressString>
   Set the attributes to send traps to. <ID> describes the setting identification number (1 to 8),
   <communityName> describes the community name to send traps to, and <IpAddressString> describes the IP address of the host to send traps to.
- **Example:** To specify the destination of traps as the public community and the ID number "1". trap=1,public,192.168.0.101
- 7) delcommunity=<ID> This parameter is used to delete the previous community setting. <ID> describes the community setting identification number (1 to 8).
- deltrap=<ID> This parameter is used to delete the previous setting of the host to send traps to. <ID> describes the trap setting identification number (1 to 8).

When you have finished changing the SNMP setting information using the above parameters 1) to 8), check the changed settings using an inquiry commands. If the changed settings are OK, restart the SNMP using the following CGI command.

#### **SNMP** restart command

<Method> GET, POST <Command>

> http://ip\_adr/snmpdconf/snmpdconf.cgi? snmpd=restart

# Glossary

## ActiveX control

A component program object that can be used with web pages or other application programs. The technology for creating ActiveX control is part of software developed by Microsoft.

# AES

Abbreviation for Advanced Encryption Standard. This is the next-generation of encryption standard adopted by the U.S. government.

### **ARP** commands

The commands for checking the entry of the IP address and MAC address in a host computer, or for updating them.

### **Bandwidth control**

To limit the amount of transmitted data.

#### Bit rate

The rate at which data bits are transmitted.

# **CA (Certificate Authority)**

A private authority that issues and controls digital certificates to be used for authentication regarding network access.

### Capture

To display the audio and video digital data from the video equipment on a computer.

### Codec

Software/hardware for coding/decoding video and audio data.

### Common name

A URL to be typed in the browser when you access a website employing SSL (Secure Sockets Layer) protocol with the security function. Access is successful after the URL of the website is verified as matching the server's common name.

### Contrast

The difference in tone between the lightest and darkest portions of the image.

### **Default gateway**

Device that can be used to access the other network.
#### **DHCP** server

Abbreviation for Dynamic Host Configuration Protocol server. The IP address of a terminal without an individual IP address can be automatically distributed by the Dynamic Host Configuration Protocol (DHCP). The DHCP server assigns the IP addresses to the terminals.

#### **Digital certificate**

An electronic certificate that a CA (Certificate Authority) attests that a public key to cancel a secret code is issued by an authentic publisher.

#### **Digital zoom**

Zooming in/out function of an image without using an optical zooming function.

#### **DNS** server

Abbreviation for Domain Name System server. As an IP address required for connecting to the device on an IP network is numerical and difficult to remember, the Domain Name System was established. A domain name is alphabetic and is easier to remember. When a client computer uses a domain name to connect to another computer, it asks a DNS server to translate the name into the corresponding IP address. Then the client computer can obtain the IP address of the computer to be connected.

#### EAP method

Abbreviation for Extensible Authentication Protocol. This is a protocol extended from PPP (Point-to-Point Protocol) and having an authentication function.

#### **EAP-TLS** authentication

TLS is an authentication protocol of the EAP methods using Transport Layer Security. By using digital certificates and other methods, EAP-TLS prevents data falsification, eavesdropping and spoofing.

#### Frame rate

The number of frames of a moving image that can be transmitted per a second.

#### **FTP client**

Software to be used for accessing the FTP server.

#### **FTP** server

A server to be used to transfer files via a network.

#### **HTTP** port

A port used to communicate between the web server and the web client such as a web browser.

#### H.264

One of the image compression formats. The standard written by the JVT (Joint Video Team), joint organization for standardization composed of ISO and ITU-T. H.264 is capable of transmitting video data at a higher compression rate than that of MPEG4.

#### **IP address**

Abbreviation for Internet Protocol Address. An individual IP address is basically assigned to each piece of equipment connected to the Internet.

#### Java applet

A program written in Java language that can be used in the Web browser.

#### **Java Virtual Machine**

Software that transfers the Java applet's byte code to the native code of your system to execute it.

#### JPEG

Abbreviation for Joint Photographic Expert Group. The still image compression technology or standards of the ISO (International Organization for Standardization) and ITU-T. Popularly used as image compression format on the Internet, etc.

#### MAC address

A network address that uniquely identifies each LAN card.

#### MPEG4

Abbreviation for Moving Picture Experts Group4. One of the MPEG standards for image compression format aiming to transmit images at a high compression rate with lower picture quality.

#### **Multicast**

The class D IP address assigned between 224.0.0.0 and 239.255.255.255. Using this IP address enables you to transmit the same data to multiple equipment.

#### **Network address**

The portion that identifies the local network (subnet) in an IP address.

#### Network bandwidth

Bit rate that can be used for networking.

#### **NTP server**

Network time server that transmits and receives time information over the networks.

#### Passive mode

The mode whereby a client FTP allows TCP connection for data transmission to the FTP server.

#### **POP** server

A server for storing incoming e-mail until you have read it.

#### **Primary DNS server**

One of the DNS servers that can first reply to a request by connected devices or other DNS servers.

#### **Proxy server**

A server or software that acts as an intermediary between a local network and the Internet so that it can connect to the Internet in place of a computer on a local network.

#### PSK

Abbreviation for Pre-Shared Key. This is a shared key to make an encryption key, used with TKIP in WPA encryption standard. PSK sometimes means an authentication system using a key previously shared.

#### **RADIUS client**

RADIUS (Remote Authentication Dial-in User Service) is an authentication and accounting protocol managing network access, and a RADIUS client is a party that accesses the network.

In Internet connecting service, a Network Access Server (NAS) such as that for dial-up and broadband access server is a RADIUS client. In a wireless LAN system, a wireless LAN access point is a RADIUS client.

#### Saturation

The degree to which the color is pure.

#### Secondary DNS Server

Subsidiary DNS server used when a primary DNS server cannot be used.

#### Shared secret

A character string to be used for mutual authentication between RADIUS server and RADIUS client.

#### Sharpness

The degree to which the boundary of two portions is clearly distinguished.

#### SMTP server

A server for sending or relaying e-mail messages between servers.

#### SNMP

A protocol for monitoring and managing network devices.

#### SSL

Abbreviation for Secure Sockets Layer. This is a protocol developed by Netscape Communications Corporation to be used for communications of encrypted data on the Internet.

#### Subnet mask

32-bit stream used to distinguish the subnet address from the IP address.

#### ТСР

Abbreviation for Transmission Control Protocol. A standard protocol used for the Internet connection. Compared with the other protocol, UDP, TCP provides reliable communication but the communication speed is slower.

#### TKIP

Abbreviation for Temporal Key Integrity Protocol. This is used in WPA encryption standard for wireless LAN. TKIP provides high security because it changes encryption keys based on PSK during an on-going communication.

#### UDP

Abbreviation for User Datagram Protocol. A standard protocol used for the Internet connection. Compared with the other protocol, TCP, UDP can transmit data faster, but reliable communication is not guaranteed.

#### Unicast

Transmission of the data to the specified equipment on a network by specifying a single address.

#### WPA

Abbreviation for Wi-Fi Protected Access. This is an encryption standard for wireless LAN. It provides higher security than the conventional WEP (Wired Equivalent Privacy) standard. In WPA, TKIP is used for encryption method, and PSK and EAP are used for authentication protocol.

#### WPA2

Abbreviation for Wi-Fi Protected Access 2. WPA2 is a standard with which AES (Advanced Encryption Standard) is added to WPA.

### 802.11g

A wireless LAN standard that uses the 2.4 GHz band and provides a maximum data transmission rate of 54 Mbps.

#### 802.1X

A standard that performs user authentication and dynamic key generation and traffic on a LAN.

# Index

### Α

abandoned object detection	81
Access log	41
Active	85
Active Directory	57
ActiveX control 10, 12,	17
ActiveX viewer21, 2	22
Adaptive rate control	46
adaptive rate control	46
Adjust	37
Administrator 19,	60
administrator	19
Administrator e-mail address	
	71
Administrator menu 21, 2	33
AES	08
Alarm	77
alarm	77
Alarm buffer 35, 69, 7	72
alarm buffer 69, 72,	80
Alarm buffer Menu	80
alarm detection 66, 68,	72
Alarm duration	76
Alarm interval	87
Alarm out	75
Alarm output 31, 34, 75,	78
alarm output	75
Alarm output Menu	75
Alarm recording	72
Alarm sending	68
Antenna	50
ARP commands10	06
ATA memory card 40, 71,	74
Audio	60
audio	42
Audio codec	42
audio output	76
Audio port number	47
Audio upload	42
Authentication 51 52 65	71
authentication	· 1 71
authentication server	54
authenticator	54
Auto flip	36
auto flip	36

Automatically adjust clock for daylight saving time changes ......38

### В

Backlight compensation	43
Backup setting data	39
bandwidth	89
Bandwidth control	. 46, 89
Baud rate	88
baud rate	88
Bit rate	46
bit rate	46
Brightness	43

### С

CA (Certificate Authority) 54, 108
CA certificate56, 58
Camera
camera41
Camera Menu41
camera position62
Cancel button34
Capacity warning71
Capture23
capture23, 26
certificate request55
CGI commands107
Character length88
character length88
Clear
Client certificate55
client certificate55
Codec
Color41
Common41, 65, 68, 71, 83
Common name108
common name108
Configuration87
Contrast44
contrast44
control authority
Control panel24
control panel24, 27
Control23
Cropping45
cropping45
Current date & time37
Custom Homepage Installer 103
custom settings44

### D

Date & time
date and time
Date and time format
Date time90
Date_No73
Day/Night44, 78
day/night31
Day/Night mode44
day/night mode44
daylight saving time
Default gateway48, 50
default gateway48, 50
Default policy61
delete40
Delete custom homepage40
Delete panorama image40
Delete voice alert file40
Detection83
Detection time87
DHCP server
Digital certificate109
digital certificate109
Digital zoom23
digital zoom23, 26
DNS server
Domain suffix
downloading images74
Dual codec 20, 45
Dynamic IP address notification52
DynaView43

## Ε

EAP51
EAP method54, 109
EAP-TLS authentication109
Effective period
64, 66, 67, 69, 70, 72, 73, 76, 77
e-Mail
e-mail52, 65
e-Mail (SMTP) 34, 65, 77
e-Mail (SMTP) Menu65
e-Mail (SMTP) notification52
e-mail address52
End time80
Exclusive control mode
Exposure compensation43
exposure compensation43
Exposure mode43

exposure mode	43
extension	74

## F

Factory default 39
factory settings 39
File
File attachment
file name 66, 67, 68, 69, 72, 73
focus
Focus mode
focus mode 42
folder structure73
format
Format ATA memory card 40
format of date and time
format of date and time 37   Frame rate 23, 25, 45   frame rate 23, 25, 45   FTP 30, 60   FTP client 34, 78   FTP client function 68
format of date and time 37   Frame rate 23, 25, 45   frame rate 23, 25, 45   FTP 30, 60   FTP client 34, 78   FTP client function 68   FTP client Menu 68
format of date and time 37   Frame rate 23, 25, 45   frame rate 23, 25, 45   FTP 30, 60   FTP client 34, 78   FTP client function 68   FTP server 34, 68
format of date and time 37   Frame rate 23, 25, 45   frame rate 23, 25, 45   FTP 30, 60   FTP client 34, 78   FTP client function 68   FTP client Menu 68   FTP server 34, 68   FTP server function 74
format of date and time 37   Frame rate 23, 25, 45   frame rate 23, 25, 45   FTP. 30, 60   FTP client 34, 78   FTP client function 68   FTP client Menu 68   FTP server 34, 68   FTP server function 74   FTP server Menu 74

## G

Gain	43
gain	43
Glossary1	08

## Η

H.264	20, 109
H.264 setting	45
Home	23
home position	62
Home position setting	62
Homepage	36
homepage	36
Host name	48, 50
HTTP method	53
HTTP notification	52
HTTP port number	48
	50
HTTP request	
HTTP server	52
HTTP server	52

#### 

image file		30
------------	--	----

Image file name66, 68, 69, 72, 73
Image memory31, 34, 71, 78
image memory 34
Image memory Menu70
Image mode41
image mode41
Image quality46
image quality46
Image size45
image size45
Inactive
information bar10
Information Bar message 10
Initialize
Internet Authentication Service 57
Internet Explorer
Interval
IP address7, 48, 49
IP Setup Program7, 89
Iris
iris

## J

Java	
Java applet viewer	21, 22, 23
JPEG	
JPEG setting	

## L

## Μ

MAC address	48, 49
main viewer	16, 21, 22
mask	
Maximum wait number	
memory	70, 71, 74
Memory Stick	71, 74
Message	52, 65
Method	53
Mic volume	
Microphone	
microphone	
Mode 45, 70, 73	, 75, 80, 88
monitor image	25
monitoring	25
Moving object	

moving object detection	83, 84
MPEG4	20
MPEG4 setting	45
multicast	47
Multicast address	47
multicast address	47
Multicast streaming	47
multicast streaming	47

## Ν

Name	63
Network	34, 48
network	
Network address/Subnet	61
network bandwidth	
network connection type	
Network Menu	
No	63
NTP server	
NTP server name	

## 0

Object detection	35, 63, 76
object detection	
Object detection Menu	
Object size	84, 85
OK button	
operation mode	45
Operation time	
Overwrite	71
overwrite	71

## Ρ

Pan/Tilt	
pan/tilt	
pan/tilt control mod	e36
panorama image	
Panorama mode	
parity	
Parity bit	
Passive mode	
passive mode	
Passphrase	51
passphrase	
Password	.52, 60, 65, 68, 71
password	.52, 60, 65, 68, 71
PC clock	
periodical e-mail ser	nding67
Periodical recording	g73

Periodical sending67, 69
periodical sending69
Picture
Play77
playing audio31
POP server
POP server name 52, 65, 71
port number53
Position
Position at alarm63
Post-alarm period81
Pre-alarm period81
Preset
Preset call
Preset position
preset position
Preset position Menu62
preset position name
Preset position table63
Primary DNS server
privacy mask100
Private key password55
Proxy port number53
proxy server53
Proxy server name53
PSK
PTZ mode
PTZ position83
R
RADIUS client
Reboot
reboot
Recipient e-mail address
recipient e-mail address
Recording capacity
recording capacity of the alarm
buffer
recording images 30, 70
Recording time
Release time
Remote path 68.69

Repeat......77 Reset......62

periodical recording ......73

Restart	.86
Restore setting	.39
Resume time on inactivity	.64
Re-type password60	, 68

#### S

Saturation44
saturation44
saves the setting data39
Schedule
schedule
Schedule Menu79
Secondary DNS server
Security
security 50, 61
Security function61
Security Menu61
Security Warning 10, 12, 82
Selected root directory71, 74
sending images
Sensor input mode37
Sensor input 1
Sensor input 263, 76
Sequence64
Sequence number clear
Serial
serial interface
Serial Menu88
Serial number
serial number35
serial terminal88
Set
Setting23
Shared secret110
Sharpness44
sharpness44
Shutter speed43
shutter speed43
Single codec 20, 45
Slow shutter43
slow shutter43
SMTP server
SMTP server name 52, 65, 71
SNC audio upload tool91
SNC panorama creator98
SNC privacy masking tool101
SNC video player96
SNMP107

35
35
53
64
50
110
42
42
80
85
64
47
52, 65
48, 49
48, 49
0, 72, 73
0, 72, 73
53
34, 35
35
41
35

### Т

ТСР	32, 88
TCP/UDP	24, 32
TCP/UDP Transmission	32
Test	77
threshold	84
Threshold slider bar	84
time difference	
Time setting	87
Time zone	37
time zone	37
Timer	78
title bar	35
Title bar name	35
TKIP	110
TLS mode	55
Toggle	78
Tour	64
tour	63
transmission port number	47
Trigger	34
trigger	24
Trigger Menu	77

### U

UDP47
UDP (Multicast)
UDP (Unicast)
Unattended object83
unattended object detection
Unattended object setting87
Unicast streaming47
URL52
Use the same time schedule every
day79
User 19, 34, 60
user 19, 58, 60
User Menu60
User name52, 60, 65, 68, 71
user name52, 60, 65, 68, 71
User preset44

### V

Video codec	45
video codec	45, 80
Video port number	47
View size	23, 26
view size	23, 26
Viewer authentication	61
Viewer mode	19, 61
viewer mode	61
VISCA	88
Voice alert	77, 79
Voice alert Menu	76
voice alert number select	95
volume	24, 42

### W

warning mail	71
welcome page1	6, 20, 35
Welcome text	35
WEP	51
WEP key	51
White balance	43
white balance	43
Window	84, 85
Windows Firewall	

http://www.sony.net/

Windows Vista	11
Windows XP Service Pack 2.	9
Wireless	49
wireless cards	49
WPA	.51,110
WPA2	.51,110

### Ζ

Zoom	
zoom	24, 28
zoom bar	
Zoom mode	41
zoom mode	41

### Numerics

802.1X	51,	53,	111
802.11g			111